



 
INTRODUCTION




Your RadioShack 7-in-One Home Theater Remote Control can replace up to seven infrared remote controls. You can use it to control your TV, VCR, cable converter, satellite receiver, CD player, tuner, phonograph, video accessory, digital audio tape, cassette, or laser disc player.

Unlike some universal remote controls, this remote control is preprogrammed with the most commonly used commands and does not have to learn its commands from the original remote controls. All you have to do is tell it which device's remote controls you want to replace (by entering 3-digit codes).

This manual includes a list of many manufacturers' 3-digit codes for your devices. Or, you can call the toll-free number at the bottom of every page for assistance.



The 7-in-One transmits both infrared (IR) and radio frequency (RF) signals, so you don't need to be within "line-of-sight" to control devices. With the supplied IR/RF Command Center, you can use the remote to control devices in any room of your home.

 


© 1998 Tandy Corporation.

All Rights Reserved.

RadioShack and Plug 'n Power are registered trademarks
used by Tandy Corporation.


 
X-10 is a registered trademark of X-10 (USA) Inc.






CONTENTS

Preparation	4
Installing Batteries	4
Setting the Clock	5
Quick Setup	6
A Look at Your Remote	8
Setting Up the Remote	12
To Operate Your TV	12
To Operate Your VCR or TV/VCR Combination	16
To Operate Your Cable Converter	21
To Operate Your Satellite Receiver	24
To Operate Your CD Player	26
To Operate Your Tuner/Receiver	29
To Operate Your Amplifier	31
To Operate Other Devices	33
Special Features	37
Searching for a Code	37
Using the Sleep Function	38
Converting Device Keys	39
Volume Lock	40
Using the Macro Keys	41
Setting Up Timed Sequences	42
Setting Up the Home Theater Key	44
Clear All	45
Using the IR/RF Command Center	46
Troubleshooting	49

  

Need help? Call 1-800-763-9232

 



PREPARATION



INSTALLING BATTERIES



Your 7-in-One requires four AAA alkaline batteries (not supplied), available at your local RadioShack store.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

To install the batteries:

  1. Press down on the battery compartment cover and slide the cover off.
2. Place the batteries in the compartment, matching the polarity marks (+ and –) inside.
3. Replace the cover.




If the batteries are installed correctly and the red indicator does not light when you press **POWER**, replace the batteries.


Cautions:

- Dispose of old batteries promptly and properly. Do not burn or bury them.
- Always remove old or weak batteries. Batteries can leak chemicals that can destroy electronic parts.

Notes:

  - After you install batteries, the remote performs a test of the display for 10 seconds or until you press a key.








-
- To extend battery life, the display turns off after 10 seconds of keypad inactivity and turns on again when you press any key.
 - Device codes you have programmed into the 7-in-One remain stored in memory while you replace the batteries. However, you must reset the clock.

SETTING THE CLOCK

Follow these steps to set the clock on the 7-in-One's display.

   1. Hold down **SETUP** until **TIMED SEQ.** appears.
2. Press **MENU ▼** twice. **CONFIGURE** appears.
3. Press **SELECT**. **THEATR SEL** appears.
4. Press **MENU ▼** again.
5. Press **SELECT**. **TIME** appears and the first digit in the time flashes. Enter the time in 12-hour format. **AM/PM** flashes.
6. If necessary, press **MENU ▼** to toggle between AM and PM, then press **SELECT**. The day of the week display appears.
7. Use **MENU ▲** and **▼** to toggle through the days of the week until the current day appears, then press **SELECT**. The currently selected device and the correct time appear.





QUICK SETUP



 
 
 
The steps in this section tell you how to quickly set up the 7-in-One to operate all of your devices.

To set up devices individually, or add a device after you have set up the 7-in-One, see the appropriate section under "Setting Up the Remote."

Note: For the best operation, you should be within 15 feet of the device you want to control.

Follow these steps for quick setup.



1. Turn on all of the devices you are setting up.
2. Press **TV**.
3. Hold down **SETUP** until **TIMED SEQ** appears.
4. Press **MENU ▼**. **CODE SETUP** appears.
5. Press **SELECT**. **DEV SET UP** appears.
6. Press **SELECT** again. **TV** appears.
7. Enter the first three-digit TV code listed for your TV's brand in "Setup Codes for TVs" on Page 12, then press **SELECT**.
8. Point the remote at your TV and press **POWER**. Your TV should turn off. If it does not, enter the next code from the list and press **SELECT** then **POWER** again. When your TV turns off, press **VCR**. **VCR** appears.
9. Enter the first three-digit VCR code listed for your VCR's brand in "Setup Codes for VCRs" on Page 16 or "Setup Codes for TV/VCR Combos" on Page 19, then press **SELECT**.






-
10. Point the remote at your VCR and press **POWER**. Your VCR should turn off. If it does not, enter the next code from the list and press **SELECT** then **POWER** again. When your VCR turns off, press **CBL**. **CABLE** appears.
 11. Continue setting up devices by pressing the appropriate device key, entering your device's code and pressing **SELECT**. Refer to the code list for the type of device you want to set up:

Setup Codes for	Page
Amplifiers	32
Cable Converters	22
Cassette Players	34
CD Players	26
DAT Players	34
Satellite Receivers	24
DVD Players	34
Home Automation	35
Laser Disc Players	35
Miscellaneous Audio	35
Phonographs	36
Tuners/Receivers	29

  

 12. Once the 7-in-One is operating all of your devices, press **ESC** to stop programming.





A LOOK AT YOUR REMOTE

 


AMP, TUN, TV, CBL, CD, VCR, SAT, and PLUG 'N POWER — let you select the device you want to control.

HOME THEATER — lets you control all the functions of a home theater system.


POWER — turns the remote on and off, and controls **ALL LTS ON** in the PLUG 'N POWER mode.

MENU — works like the Menu or OSD (on-screen display) key on your original remote. Use **▲**, **▼**, **▶**, and **◀** (Menu Up, Down, Right and Left) to navigate your on-screen menus. If your original remote had a Select key to select menu options, use **SELECT** in its place. Use **CLEAR (SHIFT + SELECT)** to exit/clear menus. See your device's original owner's manual for more detailed instructions on using menus.




Notes:

 - **▲**, **▼**, **▶**, and **◀** also control the Rear Level +/- and Balance Right/Left functions in AMP or TUN mode, and Disc +/- and Track +/- in CD mode.
- **SELECT** also controls TAPE MON in AMP or TUN mode, Disc Select in CD mode, and the Fetch function in the on-screen menu of an RCA satellite system.



PROG (SHIFT + MENU) — operates your satellite system's and cable converter's Guide function, as well as any device's secondary menus.

 SUR (Surround) — operates the Surround mode. It also operates the favorite channel function in SAT and CBL modes, 10+ (to access tracks numbered higher than 10) in CD mode, and the DISC function of a laser disc player.



SHIFT — besides those functions described elsewhere in this manual, works with these keys to control advanced features:

Mode	Key	Function
VCR	PLAY	SLOW
	REW	REW SLOW (SLOW-)
	FF	FF SLOW (SLOW+)
	STOP	EJECT
	PAUSE	X2
Satellite Receiver	MENU+	AUDIO+
	MENU-	AUDIO-
Receiver/Tuner/Amplifier	MENU+	CENTER LEVEL +
	MENU-	CENTER LEVEL -
	MENU▶	DELAY+
	MENU◀	DELAY-
Laser Disc/Cassette/DVD	PLAY	REVERSE PLAY
	REW	REW SLOW
	FF	FF SLOW
	STOP	EJECT
	PAUSE	X2
CD	STOP	EJECT

ESC (Escape) — lets you exit the remote's displayed menu.

CENTER and **REAR (SHIFT + CENTER)** — work like the Add and Delete keys on your original TV remote, the DISC A and B keys on your laser disc remote, or the SAT and AUDIO keys of a satellite system remote.

VOL+ (Volume Up), **VOL-** (Volume Down) and **MUTE** — control the volume like the Volume Up and Down and Mute keys on your original remote. In Plug n' Power mode, **VOL+/VOL-** operates Bright and Dim and **MUTE** operates **ALL OFF**.



SLEEP (SHIFT + MUTE) — controls the Sleep Timer in TV, CABLE, SAT, and AMP or TUN modes for devices which have this feature. If your device does not have a Sleep Timer, **SLEEP** activates the remote's built-in sleep timer.

CH+ (Channel Up) and **CH-** (Channel Down) — work like the Channel Up and Down keys on your original remote. **CH+** and **CH-** also control Preset Up/Preset Down in AMP or TUN mode and ON/OFF in Plug n' Power mode.

Digit Keys (0-9) — work like the digit keys on your original remote. They also control Input Selections in AMP or TUN mode.

 
 
 
ENTER — works like the Enter key on your original remote (for example, to change channels).

TV/VCR — works like the TV/SAT key on your original satellite remote. **TV/VCR** also controls TV/Video in TV mode, TV/VCR in VCR mode, A/B in cable and CD modes, and Input Select in AMP or TUN mode.

LAST (Last Channel) — works like the Previous Channel or Recall key on your original remote. It also operates the RANDOM functions in the CD and AMP or TUN modes.

AUDIO and **VIDEO** (Macro Keys) — memorize up to 15 keystrokes, so you can repeat them in sequence in any mode at the press of a single key.

REW (Rewind), **PL** (Play), **FF** (Fast Forward), **REC** (Record), **STOP**, and **PAUSE** — work like the transport keys on your original VCR or Laser Disc player remotes. To guard against accidentally recording over a videotape, you must press **REC** twice before recording.





LAST — works like the Previous Channel or Recall key on your original TV remote.

DISPLAY (SHIFT + LAST) — controls the Display function of your devices. If you are operating an RCA satellite system, **DISPLAY** controls the Select function in your On-Screen Guide and Display when you are viewing a program. If you are operating a CD player, it controls the Time function.

PIP — controls your TV or VCR's Picture-in-Picture feature. Works like the VIEW key on your satellite receiver's remote.

 
 
 
FREEZE (SHIFT + PIP) — freezes your Picture-in-Picture window.

SWAP — swaps the Picture-in-Picture window and the main picture.

MOVE PIP — moves the Picture-in-Picture window around the screen. Works like the Next key on your satellite receiver's remote.

LITE — lets you turn the remote's backlight and display on and off. When you press **LITE** to turn on the backlight, the backlight stays lit for 5 seconds then lights again anytime you press a key. To turn off the backlight, press **LITE** again.

SETUP — lets you use the remote's displayed menu menu to program your 7-in-One.





SETTING UP THE REMOTE



Note: For the best operation, you should be within 15 feet of the device you want to control.

TO OPERATE YOUR TV

Locate the codes for your TV in “Setup Codes for TVs” and write them in the space below. The brands are listed in alphabetical order, with the most popular codes listed first.

Codes: _____


Then follow these steps to program the 7-in-One to operate your TV.

1. Turn on your TV.
2. Press **TV** then hold down **SETUP** until **TIMED SEQ** appears.
3. Press **MENU ▼**. **CODE SETUP** appears.
4. Repeatedly press **SELECT** until **TV** appears.
5. Enter the first three-digit code listed for your TV’s brand, then press **SELECT**.
6. Point the 7-in-One at your TV and press **POWER**. Your TV should turn off. If it does not, enter the next code from the list and press **SELECT** then **POWER** again. When your TV turns off, press **ESC** to stop programming.

Setup Codes for TVs

Brand	Codes
Abex	032
Admiral	093
Adventura	046
Aiko	092
Akai	030
Alaron	179, 183
A-Mark	003
Ambassador	177
Anam	055
National	

 Need help? Call 1-800-763-9232



Brand	Codes	Brand	Codes
Anam	180	Dumont	017, 019
AOC	019, 030, 003, 052, 185	Electroband	000, 185
Archer	003	Electrohome	381, 389, 409
Audiovox	092, 451, 180, 003	Emerson	236, 463, 019, 180, 280, 179, 154, 177, 178, 181, 182, 183, 185, 270, 282, 038, 158, 039
Baysonic	180	Envision	030
Belcor	019	Fisher	154, 159
Bell & Howell	154, 016	Fujitsu	179
Bradford	180	Funai	171, 180, 179
Brockwood	019	Futuretech	180
Broksonic	236, 463, 003	GE	047, 051, 055, 451, 021, 178, 027, 029, 135, 279, 282, 174, 093
Candle	030, 056, 046, 186	Gibraltar	017, 019, 030
Carnivale	030	Goldstar	019, 030, 056, 178, 001, 002, 032, 106, 409
Carver	054	Gradiente	053, 056
CCE	217	Grunpy	180, 179
Celebrity	000	Hallmark	178
Cineral	092, 451	Harley Davidson	179
Citizen	060, 030, 056, 092, 186, 280, 046, 039	Harvard	180
Clairtone	185	Hitachi	145, 151, 056, 032, 038, 279, 409, 413
Concerto	056	Infinity	054
Contec	180, 157, 158, 185	Inteq	017
Craig	180	Janeil	046
Crosley	054	JBL	054
Crown	180, 039	JCB	000
Curtis Mathes	047, 054, 060, 030, 056, 451, 154, 051, 016, 039, 093, 145	JVC	053, 036, 069, 160, 169, 182
CXC	180	Kawasho	158
Daewoo	451, 092, 019, 091, 039		
Daytron	019		
Denon	145		

Need help? Call 1-800-763-9232

Brand	Codes	Brand	Codes
Kaypani	052	Nikko	092, 030, 178
KEC	180	Noblex	430
Kenwood	019, 030	Noshi	018
Kloss	024, 046	NTC	092
KMC	106	Onwa	180
KTV	180, 280, 030, 183, 185, 039, 217	Optimus	154, 250, 166
LG	056	Optonica	093, 165
Logik	016	Orion	236, 463, 179
Luxman	056	Panasonic	250, 051, 055
LXI	047, 054, 156, 154, 178, 148	JC Penney	047, 156, 019, 060, 051, 030, 056, 178, 002, 003, 018, 021, 027, 135, 032, 149, 039
Magnavox	054, 096, 186, 187, 179, 030, 020, 024, 028, 036, 386	Philco	054, 096, 019, 145, 030, 020, 028, 463
Majestic	016	Philips	054
Marantz	054, 030	Pilot	030, 019, 039
Matsushita	250	Pioneer	038, 166
Megatron	145, 178, 003	Portland	092, 019, 039
MEI	185	Prism	051
Memorex	150, 154, 016, 056, 178, 106, 250	Proscan	047
MGA	150, 019, 030, 178, 155	Proton	178, 003, 052
Midland	047, 017, 039, 051, 032, 135	Pulsar	017, 019
Minutz	021	Quasar	250, 051, 055, 165
Mitsubishi	150, 019, 093, 178, 155	RadioShack	047, 019, 180, 154, 030, 056, 178, 165, 409, 032, 039
Motorola	093, 055	RCA	047, 018, 019, 051, 029, 038, 090, 278, 135, 174, 093
MTC	019, 060, 030, 056, 091, 185	Realistic	019, 180, 165, 154, 030, 056, 178, 032, 039
Multitech	180, 217	Rhapsody	185, 183
NAD	156, 178, 166		
NEC	030, 019, 056, 036		

Need help? Call 1-800-763-9232

Brand	Codes	Brand	Codes
Runco	017, 030	Tatung	055, 003
Sampo	030, 032, 052, 039	Technics	250, 051
Samsung	060, 019, 030, 056, 178, 032, 427, 482	Technol Ace	179
Samsux	039	Techwood	051, 056, 003
Sansei	451	Teknika	054, 150, 019, 060, 180, 179, 016, 056, 092, 186, 312, 039
Sansui	463	Telefunken	056
Sanyo	154, 159, 146	TMK	177, 056, 178
Scimitsu	019	Toshiba	156, 060, 154, 036, 149
Scotch	178	Tosonic	185
Scott	236, 019, 180, 179, 178	Totevision	039
Sears	047, 054, 156, 179, 154, 056, 171, 178, 146, 148, 149, 159	Trical	157
Semivox	180	Universal	027
Semp	156	Vector Research	030
Sharp	093, 165, 153, 157, 386, 039	Victor	053
Shogun	019	Vidikron	054, 242
Signature	016	Vidtech	019, 178, 036
Simpson	186, 187	Viking	046, 312
Sony	000, 080	Wards	054, 019, 165, 179, 021, 016, 030, 056, 178, 020, 027, 028, 029, 080, 096, 174
Soundesign	180, 179, 178, 186	Yamaha	019, 030
Spectricon	003	Zenith	017, 092, 016
Squareview	171	Zonda	003
SSS	019, 180		
Starlite	180		
Supre-Macy	046		
Supreme	000		
Sylvania	054, 096, 030, 020, 028, 381		
Symphonic	171		
Tandy	093		

Need help? Call 1-800-763-9232



TO OPERATE YOUR VCR OR TV/VCR COMBINATION

Locate the codes for your VCR or TV/VCR combination in "Setup Codes for VCRs" on Page 16 or "Setup Codes for TV/VCR Combos" on Page 19 and write the codes in the space below. The brands are listed in alphabetical order, with the most popular codes listed first.

Codes: _____

Then follow these steps to program your 7-in-One to operate your VCR or TV/VCR combination.


1. Turn on your VCR or TV/VCR combination and insert a tape.
2. Press **VCR**.
3. Hold down **SETUP** until **TIMED SEQ** appears.
4. Press **MENU ▼**. **CODE SETUP** appears.
5. Repeatedly press **SELECT** until **VCR** appears.
6. Enter the first three-digit VCR code listed for your VCR's brand, then press **SELECT**.
7. Point the 7-in-One at the VCR and press **POWER** or **PL** (Play). Your VCR should turn off or start to play. If it does not, enter the next code from the code list then **SELECT** and **POWER** or **PL** again. When your VCR turns off or plays, press **ESC** to stop programming.

Setup Codes for VCRs

Brand	Codes
Admiral	048
Adventura	000
Aiko	278

Brand	Codes
Aiwa	037, 000
Akai	041, 049, 053, 061, 106
American High	035

 Need help? Call 1-800-763-9232



Brand	Codes	Brand	Codes
Asha	240	GE	060, 202, 035, 240, 048, 065
Audiovox	037	Go Video	232, 279, 432
Beaumark	240	Goldstar	037, 038
Bell & Howell	104	Gradiente	008, 000
Broksonic	209, 184, 479, 002, 121, 211, 295, 361	Harley Davidson	000
Calix	037	Harman/Kardon	038, 075
Canon	035	Harwood	072, 068
Capehart	020	Headquarter	046
Carver	081	HI-Q	047
CCE	072, 278	Hitachi	042, 105, 041, 000, 065, 166, 396
Cineral	278	Jensen	041
Citizen	037, 278	JVC	041, 008, 067, 206
Colt	072	KEC	037, 278
Craig	240, 037, 047, 072, 271	Kenwood	041, 067, 038
Curtis Mathes	060, 035, 041, 162	KLH	072
Cybernex	240, 051	Kodak	035, 037
Daewoo	045, 278, 020	Lloyd's	000, 208
Daytron	020	Logik	072
Denon	042	LXI	037
Dynatech	000	Magnasonic	278
Electrohome	037	Magnavox	035, 081, 039, 000, 110, 149
Electroponic	037	Magnin	240
Emerex	032	Marantz	035, 081
Emerson	184, 209, 479, 037, 002, 043, 000, 121, 278, 036, 061, 068, 208, 211, 212, 294, 295, 361	Marta	037
Fisher	104, 047, 066, 054	Matsushita	162, 035, 454
Fuji	035, 033	MEI	035
Funai	000	Memorex	035, 162, 037, 039, 047, 000, 240, 048, 104, 046
Garrard	000	MGA	043, 240, 061

Need help? Call 1-800-763-9232

Brand	Codes	Brand	Codes
MGN Technology	240	RadioShack	037, 000
Minolta	042, 105	Radix	037
Mitsubishi	043, 067, 048, 061, 075, 173	Randex	037
Motorola	035, 048	RCA	060, 202, 035, 042, 240, 048, 065, 105, 106, 149
MTC	000, 240	Realistic	035, 037, 047, 000, 048, 104, 066, 062, 046
Multitech	000, 072	Ricoh	034, 253
NEC	038, 041, 067, 104, 040	Runco	039
Nikko	037	Salora	075
Nikon	034	Samsung	240, 045, 051, 053
Noblex	240	Sanky	048, 039
Olympus	035	Sansui	000, 041, 067, 082, 271, 479
Optimus	037, 048, 104, 162, 454, 432	Sanyo	104, 047, 240, 046
Optonica	062	Scott	043, 045, 184, 121, 210, 211, 212
Orion	184, 479, 002, 295	Sears	035, 104, 037, 047, 042, 000, 066, 046, 054, 105
Panasonic	162, 035, 254, 378, 454	Semp	045
JC Penney	035, 037, 042, 240, 038, 040, 054	Sharp	048, 062
Pentax	042, 065, 105	Shintom	072
Philco	035, 209, 479	Shogun	240, 051
Philips	081, 035, 110, 062	Singer	072
Pilot	037	Sony	032, 033, 034, 000, 035, 253
Pioneer	067, 162	STS	042
Portland	020	Sunpak	253
Profitronic	240	Sylvania	081, 035, 043, 000, 110
Proscan	060, 202	Symphonic	000
Protec	072	Tatung	041
Pulsar	039, 051		
Quarter	046		
Quartz	046		
Quasar	035, 162, 454		

Need help? Call 1-800-763-9232

Brand	Codes
TEAC	041, 000
Technics	162, 035
Teknika	035, 037, 000
Thomas	000
TMK	240, 036, 208
Toshiba	045, 043, 066, 210, 212, 366
Totevision	037, 240
Unitech	240
Universum	325
Vector Research	038, 040
Vector	045
Video Concepts	045, 040, 061
Videosonic	240
Wards	060, 035, 047, 042, 000, 240, 048, 081, 072, 062, 149, 212
White Westing- house	278
XR-1000	035, 000, 072
Yamaha	038
Zenith	039, 000, 034, 033

Setup Codes for TV/VCR Combos




Brand	Codes
American High	035*
Broksonic	002, 479
Colt	072
Curtis Mathes	035*
Daewoo	278
Emerson	002, 294, 479
Funai	000
GE	035*, 060*, 048*, 240
Hitachi	000
Lloyds	000
MGA	240
Magnavox	000, 035*, 081*
Magnin	240
Memorex	037, 162*
Mitsubishi	048*
Optimus	1162*
Orion	002, 479
Panasonic	035*, 162*, 1162*
JC Penney	035*, 240
Quasar	035*, 162*
RCA	035*, 060*, 048*
Samsung	240*
Sansui	000, 479
Sanyo	240
Sears	000, 037
Sony	032*
Symphonic	000
Zenith	000

Need help? Call 1-800-763-9232



Note: If your TV/VCR works using a code (from the table) highlighted with an asterisk (*), you might need to program a separate TV code to control the volume. Check the list below and follow the instructions in "To Operate Your TV" on Page 12 to program the supplied TV code.

VCR Code	Code for TV Volume Control
032	000
035	051
048	093
060	047
081	054
162	250
240	060

   



TO OPERATE YOUR CABLE CONVERTER

 
Locate the codes for your cable converter in "Setup Codes for Cable Converters" on Page 22 and write them in the space below. The brands are listed in alphabetical order, with the most popular codes listed first.

Codes: _____

Follow these steps to program the 7-in-One to operate your cable converter.

1. Turn on your cable converter.
2. Press **CBL**.
3. Hold down **SETUP** until **TIMED SEQ** appears.
4. Press **MENU ▼**. **CODE SETUP** appears.
5. Repeatedly press **SELECT** until **CABLE** appears.
6. Enter the first three-digit code listed for your converter's brand, then press **SELECT**.
7. Point the 7-in-One at the cable converter and press **POWER**. Your cable converter should turn off. If it does not, enter the next code in the code list and press **SELECT** then **POWER** again. When your cable converter turns off, press **ESC** to stop programming.

Note: If your original cable converter remote does not have an **ON** key, press **CH+** on the 7-in-One to turn on your cable converter.



Setup Codes for Cable Converters

Brand	Codes
ABC	003, 008, 014, 007, 017, 013, 011, 001
Allegro	153, 315
Antronix	022, 207
Archer	797, 153, 022, 207
Cabletenna	022
Cableview	022
Century	153
Citizen	153, 315
Colour Voice	025, 031
Comband	232, 233
Comtronics	040, 060
Contec	019
Digi	637
Eastern	002
Electricord	078
Emerson	797
Everquest	015, 040
Focus	400
Garrard	153
GC Electronics	207
GE	232, 233
Gemini	015, 057, 242
General Instrument	276, 003, 011, 476
GMI	057
Goldstar	144, 040
Goodmind	797
Hamlin	020, 009, 259, 034, 273
Hitachi	011

Brand	Codes
Hytex	007
Jasco	153, 315
Jerrold	003, 276, 014, 476, 012, 011, 015, 024
Macom	033
Magnavox	027, 334
Memorex	000
Movie Time	063, 156
Novaplex	618
NSC	063, 156
Oak	007, 019
Optimus	021
Panasonic	107, 000, 021
Panther	637
Paragon	000
Philips	153, 025, 027, 031, 242, 290, 334
Pioneer	144, 533, 023, 260
Popular Mechanics	400
Pulsar	000
RadioShack	883, 015, 315
RCA	021
Realistic	207
Recoton	400
Regal	020, 259, 273, 279
Regency	002
Rembrandt	011
Runco	000
Samsung	144, 040
Scientific Atlanta	008, 477, 017, 006
Signal	015, 040
Signature	011

Need help? Call 1-800-763-9232

Brand	Codes
SL Marx	040
Sprucer	021, 307
Starcom	003, 015
Stargate	015, 040, 797
Starquest	015
Sylvania	001
Tandy	258
TeleCaption	221
Televue	040
Texscan	001
Timeless	418
Tocom	012, 013
Toshiba	000
Tusa	015
TV86	063
Unika	022, 153, 207
United Artists	007
United Cable	003
Universal	191, 077, 022, 153, 207
Videoway	250
Viewstar	063, 027, 060, 211, 258
Zenith	000, 525
Zentek	400

Need help? Call 1-800-763-9232



 
 
TO OPERATE YOUR SATELLITE RECEIVER

Locate the codes for your satellite receiver in "Setup Codes for Satellite Receivers" on Page 24 and write them in the space below. The brands are listed in alphabetical order, with the most popular codes listed first.

Codes: _____

Then follow these steps to program the 7-in-One to operate your satellite receiver.

1. Turn on your satellite receiver.
2. Press **SAT**.
3. Hold down **SETUP** until **TIMED SEQ** appears.
4. Press **MENU ▼**. **CODE SETUP** appears.
5. Repeatedly press **SELECT** until **SAT** appears.
6. Enter the first code listed for your receiver's brand then press **SELECT**.
7. Point the 7-in-One at the satellite receiver and press **POWER**. Your satellite receiver should turn off. If it does not, enter the next code in the code list and press **SELECT** then **POWER** again. When your satellite receiver turns off, press **ESC** to stop programming.




Setup Codes for Satellite Receivers

Brand	Codes
AlphaStar	772
Amplica	072
Amway	043, 075

Brand	Codes
Astro Industries	095
BSR	095
Cable Innovations	554
Capetronic	095
Century	538

 Need help? Call 1-800-763-9232



Brand	Codes	Brand	Codes
Channel Master	018, 212	Prosat	158
Chaparral	053, 209, 216	RCA	566
Citoh	164	RadioShack	554
Conifer	004	Ramsey	075
Curtis Mathes	061, 072	Realistic	051, 052
DX Antenna	041	STS	041, 210
Drake	018, 064, 149, 245	Sony	639
Echostar	148, 159, 218, 269, 280, 775	Star Choice	869
Expressvu	775	Star Trak	180, 421, 547
General Instrument	050, 361, 547, 554, 869	Strong	421
HTS	775	Toshiba	061, 082, 790
Hitachi	819	Town & Country	547
Homecable	238	Uniden	052, 074, 076, 238, 296, 370, 554, 724
Hughes Network Systems	749	Zenith	061, 064
HYTEK	095		
IQ	210		
IQ Prism	210		
Intersat	043		
JVC	775		
Janeil	152		
Jerrold	361, 627		
Legend	269		
Macom	018, 050, 061		
Magnavox	724		
Memorex	269, 724		
Norsat	004		
Panasonic	152, 701		
Pansat	647		
Philips	200, 724		
Pico	075		
Primestar	361, 627		

Need help? Call 1-800-763-9232



TO OPERATE YOUR CD PLAYER

Locate the codes for your CD player in “Setup Codes for CD Players” and write them in the space below. The brands are listed in alphabetical order, with the most popular codes listed first.

Codes: _____

Follow these steps to program the 7-in-One to operate your CD Player.


1. Turn on your CD player and insert a disc.
2. Press **CD**.
3. Hold down **SETUP** until **TIMED SEQ** appears.
4. Press **MENU ▼**. **CODE SETUP** appears.
5. Repeatedly press **SELECT** until **CD** appears.
6. Enter the first code listed for your CD player’s brand then press **SELECT**.
7. Point the 7-in-One at the CD player and press **PL**. Your CD player should play. If it does not, enter the next code in the code list and press **SELECT** then **PL** again. When the CD player plays, press **ESC** to stop programming.

Setup Codes for CD Players

Brand	Codes
ADC	018, 033
Acoustic Research	123
Adcom	155, 234
Aiwa	012, 124, 157
Akai	156

Brand	Codes
Audio Alchemy	194
Audio-Technica	170
BSR	194, 245
Bang & Olufsen	212
Burmester	420
California Audio Lab	029

 Need help? Call 1-800-763-9232






Brand	Codes	Brand	Codes
Capetronic	237, 690	NAD	019, 299
Carrera	194	NEC	043, 130, 234
Carver	157, 179, 299, 437	Nakamichi	147
Crown	122	Nikko	164, 169, 170, 174
DAK	245	Onkyo	101, 102, 138
DKK	000	Optimus	000, 032, 037, 048, 087, 145, 175, 179, 194, 196, 280, 305, 342, 420, 426, 437, 468, 536, 671, 690, 775
Denon	003	Panasonic	029, 303, 367, 752
Emerson	155, 164, 305, 469	Parasound	194, 420
Fisher	048, 088, 174, 179, 342	Philips	157, 274, 287
GE	009	Pioneer	032, 244, 305, 468
Garrard	245, 280, 393, 420, 425	Proton	152, 157
Genexxa	032, 164, 305	QED	157
GoldStar	030, 417	Quasar	029
Harman/ Kardon	108, 426	RCA	009, 053, 155, 179, 305, 764
Hitachi	032, 139, 155	Realistic	155, 164, 175, 179, 180, 237, 420
Inkel	065	Rotel	157, 420
JVC	072, 655, 658	SAE	157
Kenwood	028, 037, 048	STS	018
Kodak	287	Sansui	157, 202, 216, 305
Krell	157	Sanyo	087, 179
Kyocera	018	Scott	155, 164, 305
LXI	305	Sears	305
Linn	157	Sharp	037, 180, 262, 265
Luxman	093, 149, 327	Sherwood	065, 180, 196, 426
MCS	029, 043	Shure	043
MTC	420		
Magnavox	038, 129, 157, 305		
Marantz	005, 029, 038, 157, 180		
McIntosh	287		
Mission	157		
Mitsubishi	098		

Need help? Call 1-800-763-9232



Brand	Codes
Signature	108
Sony	000, 185, 490, 604, 605
Soundesign	145, 425
Symphonic	183
Tascam	420
Teac	016, 045, 153, 174, 180, 183, 378, 393, 420
Technics	029, 207, 303
Toshiba	019, 299
Vector Research	033, 194, 417
Victor	072
Wards	053, 108, 157
Yamaha	036, 170, 187
Yorx	461

   





TO OPERATE YOUR TUNER/ RECEIVER

Locate the codes for your tuner/receiver in "Setup Codes for Tuners/Receivers" on Page 29 and write them in the space below. The brands are listed in alphabetical order, with the most popular codes listed first.

Codes: _____

Then follow these steps to program the 7-in-One to operate your tuner/receiver.

  1. Turn on your tuner/receiver.
2. Press **TUN**.
3. Hold down **SETUP** until **TIMED SEQ** appears.
4. Press **MENU ▼**. **CODE SETUP** appears.
5. Repeatedly press **SELECT** until **TUNER** appears.
6. Enter the first code listed for your device's brand then press **SELECT**.
7. Point the 7-in-One at the tuner/receiver and press **POWER**. Your tuner/receiver should turn off. If it does not, enter the next code in the code list and press **SELECT** then **POWER** again. When the tuner/receiver turns off, press **ESC** to stop programming.




Setup Codes for Tuners/Receivers

Brand	Codes
ADC	531
Adcom	616
Admiral	182

Brand	Codes
Aiwa	121, 125, 158, 189, 405
Akai	076, 224
Bose	639
Capetronic	531
Carver	008, 042, 189, 360, 412

 Need help? Call 1-800-763-9232



Brand	Codes	Brand	Codes
Casio	195, 201	Panasonic	039, 309
Clarinette	195	JC Penney	195, 201
Curtis Mathes	080, 201	Philips	189, 412
Denon	004, 273, 771	Pioneer	014, 080, 150, 289, 531, 630
Emerson	424	Quasar	039
Fisher	042, 219, 360	RCA	054, 346, 360, 530, 531
Garrard	281, 286, 424, 440, 463, 744	RadioShack	744
Harman/ Kardon	110	Realistic	163, 181, 182, 195
Inkel	062	Sansui	189, 346
JVC	074, 464	Sanyo	219, 801
Jensen	754	Scott	105, 163, 390
Kenwood	027, 077, 186, 313, 314	Sears	201
Koss	424, 744	Sharp	186
LXI	181, 744	Sherwood	062, 491, 502
Linn	189	Sonic	281
Lloyd's	195	Sony	158, 415, 238
Luxman	166	Soundesign	670
MCS	039, 201, 346	Symphonic	182
Magnavox	128, 189, 195, 531	Teac	163, 298, 387, 463
Marantz	006, 039, 128, 189, 412	Technics	039, 208, 309
Modulaire	195	Techwood	281
NAD	320	Victor	074
NEC	235	Wards	014, 042, 054, 080, 158, 189
NTDE Geniesom	744	Yamaha	082, 176, 186
Nakamichi	347	Yorx	195
Onkyo	100, 119, 135, 380	Zenith	281, 622, 744
Optimus	042, 080, 177, 181, 186, 219, 286, 440, 531, 622, 670, 738, 744, 754, 801		
Orient Power	744		

Need help? Call 1-800-763-9232



 
 
 
TO OPERATE YOUR AMPLIFIER

Locate the codes for your amplifiers in “Setup Codes for Amplifiers” on Page 32 and write them in the space below. The brands are listed in alphabetical order, with the most popular codes listed first.

Codes: _____

Then follow these steps to program the 7-in-One to operate your amplifier.




1. Turn on your amplifier.
2. Press **AMP**.
3. Hold down **SETUP** until **TIMED SEQ** appears.
4. Press **MENU ▼**. **CODE SETUP** appears.
5. Repeatedly press **SELECT** until **AMP** appears.
6. Enter the first code listed for your amplifier’s brand then press **SELECT**.
7. Point the 7-in-One at the amplifier and press **POWER**. Your amplifier should turn off. If it does not, enter the next code in the code list and press **SELECT** then **POWER** again. When the amplifier turns off, press **ESC** to stop programming.





Setup Codes for Amplifiers

Brand	Codes
Acurus	765
AudioSource	011
Carver	269
Curtis Mathes	300
Denon	160
Elan	647
Forte	606
GE	078
GoldStar	031
Harman/ Kardon	106
Kenwood	356
Linn	269
Luxman	165
Magnavox	269
Marantz	269, 321
McIntosh	251
NEC	264
Nakamichi	321
Optimus	013, 300, 395
Panasonic	308
Philips	269
Pioneer	013, 300
Realistic	395
Sansui	321
Shure	264
Sony	220
Soundesign	078, 211
Technics	308
Wards	013, 078, 211
Yamaha	133, 143, 354, 504

   





TO OPERATE OTHER DEVICES

In addition to the labeled devices (**AMP**, **TUN**, **TV**, **CD**, **CBL**, **VCR**, or **SAT**), the 7-in-One can also operate laser disc players (LDP), cassette decks, digital audio tape (DAT) players, video accessories, and miscellaneous audio devices (graphic equalizers and digital audio service terminals, for example).

To access device codes for:	Use:
Digital Video Disc Players, Laser Disc Players, Cassette Decks, Digital Audio Tape Players	VCR
Phonographs	CD
Video Accessories	CBL
Miscellaneous Audio	AMP
Home Automation	PLUG 'N POWER

 


 For example, to set up a laser disc player:



1. Turn on your laser disc player and insert a disc.
2. Press **VCR**.
3. Hold down **SETUP** until **TIMED SEQ** appears.
4. Press **MENU ▼**. **CODE SETUP** appears.
5. Repeatedly press **SELECT** until **VCR** appears.
6. Press **MENU ▼** or **▲** to toggle between **VCR**, **LDP**, **TAPE**, and **DAT**.
7. When **LDP** appears, enter the first code listed for your laser disc player's brand in "Setup Codes for Laser Disc Players" on Page 35, then press **SELECT**.
8. Point the 7-in-One at the laser disc player and press **PL**. Your laser disc player should play. If it does not, enter the next code in the code list and press **SELECT** then **PL** again. When the laser disc player plays, press **ESC** to stop programming.

 Need help? Call 1-800-763-9232



Setup Codes for Cassette Players

Brand	Codes
ADC	171
Aiwa	029, 197, 200
Akai	283
Carver	029, 261
Denon	076
Fisher	074, 261
Garrard	300, 308, 309, 439
JVC	244, 273, 274, 303
Kenwood	070, 071, 092, 233, 234
Kyocera	171
MGA	313
Magnavox	029
Marantz	029
Mitsubishi	283, 313
Nakamichi	147, 151, 218, 247, 248
Onkyo	136, 282
Optimus	027, 220, 300, 337, 439
Panasonic	229
Philips	029
Pioneer	027, 099, 220
RCA	261
Sansui	029
Sanyo	261
Sharp	231
Sherwood	337
Sony	170, 243, 291
Teac	280, 289, 308, 309
Technics	229

Brand	Codes
Victor	273, 274
Wards	027
Yamaha	094, 097

Setup Codes for Digital Audio Tape (DAT) Players

Brand	Code
Carver	158
Marantz	158
Philips	158

Setup Codes For DVD Players

Brand	Codes
JVC	558
Kenwood	534
Magnavox	503
Mitsubishi	521
Onkyo	503
Panasonic	490
Philips	503, 539
Pioneer	525
Proscan	522
RCA	522
Sony	533
Technics	490
Toshiba	503
Zenith	503

Need help? Call 1-800-763-9232

Setup Codes for Home Automation

Brand	Codes
Audio Access	154
GE	240
LiteTouch	084
Lutron	318
One For All	167
RadioShack	240
Sanyo	336
Security System	167
Universal X10	167

Brand	Codes
Pioneer	023, 059, 525
Proscan	522
Quasar	204
RCA	128, 522
Realistic	203
Samsung	323
Sega	023
Sony	193, 201, 270, 533
Technics	204, 490
Theta Digital	194
Toshiba	503
Yamaha	217
Zenith	503

Setup Codes for Laser Disc Players

Brand	Codes
Aiwa	203
Carver	064, 194, 323
Denon	059, 172, 241
Disco Vision	023
Funai	203
Hitachi	023
JVC	558
Kenwood	534
Magnavox	194, 217, 241, 503
Marantz	064, 194
Mitsubishi	059, 521
NAD	059
NEC	286
Onkyo	503
Panasonic	204, 490
Philips	064, 194, 503, 539

Setup Codes for Miscellaneous Audio

Brand	Codes
Aiwa	203
Carver	064, 194, 323
Denon	059, 172, 241
Disco Vision	023
Funai	203
Hitachi	023
JVC	558
Kenwood	534
Magnavox	194, 217, 241, 503
Marantz	064, 194
Mitsubishi	059, 521
NAD	059
NEC	286
Onkyo	503
Panasonic	204, 490

Need help? Call 1-800-763-9232

Brand	Codes
Philips	064, 194, 503, 539
Pioneer	023, 059, 525
Proscan	522
Quasar	204
RCA	128, 522
Realistic	203
Samsung	323
Sega	023
Sony	193, 201, 270, 533
Technics	204, 490
Theta Digital	194
Toshiba	503
Yamaha	217
Zenith	503

Setup Codes for Phonographs

Brand	Codes
Aiwa	188
Carver	188
Magnavox	188
Marantz	188
Philips	188

Need help? Call 1-800-763-9232



SPECIAL FEATURES



SEARCHING FOR A CODE

Before Setup

If you have tried all the codes from the list and your device still will not respond to the 7-in-One (or if your brand is not listed), try searching for your code.

For example, to find the code for a TV:

1. Turn on your TV, then press **TV**.
2. Hold down **SETUP** until **TIMED SEQ** appears.
3. Press **MENU ▼**. **CODE SETUP** appears.
4. Press **SELECT**. **DEV SET UP** appears.
5. Press **MENU ▼**. **DEV SEARCH** appears.
6. Press **SELECT**. **TV** and the last entered three-digit code appear.
7. Press **POWER**. If your TV does not turn off, press **MENU ▼**. The next most recently entered code appears. Continue pressing **POWER** then **MENU ▼** until your TV turns off. Then press **SELECT** to lock in the code and stop programming.

Repeat these steps, using the appropriate device control button in Step 1 for each device you need to search.

Note: If you are searching for a VCR, laser disc player, or DVD player code, you might need to use **PL** (Play) instead of **POWER**.



 
 
After Setup

After you have set up your devices, you might need to find out which code is operating one of them. For example, to find out what three-digit code is operating your TV:

1. Press **TV**.
2. Hold down **SETUP** until **TIMED SEQ** appears.
3. Press **MENU ▼**. **CODE SETUP** appears.
4. Press **SELECT**. **DEV SET UP** appears.
5. Press **MENU ▼** twice. **DEV NUMBER** appears.
6. Press **SELECT**. **TV** and the code for that device appear.

Note: To view the three-digit code for another device, press the key for the device you want to view in Step 1.

7. Write down the three-digit code then press **ESC** to stop programming.




USING THE SLEEP FUNCTION

To use the sleep timer built into your TV, cable converter, satellite system, or audio device, press **SLEEP (SHIFT then MUTE)**. Most sleep timers advance in increments of 10 or 15 minutes. For specific instructions on setting your device's sleep timer, refer to the device's owner's manual.

Or, if your device does not have a sleep timer, follow these steps to enable Sleep Lock on the 7-in-One. Then you can use the 7-in-One's built-in sleep timer with all devices.

 1. Hold down **SETUP** until **TIMED SEQ** appears.







-
2. Press **MENU ▼** twice. **CONFIGURE** appears.
 3. Press **SELECT. THEATER SEL** appears.
 4. Press **MENU ▲** twice. **SLEEP LOCK** appears
 5. Press **SELECT. DISABLE** appears.
 6. Press **MENU ▼**. **ENABLE** appears.
 7. Press **SELECT** to stop programming.

Whenever you press **SLEEP (SHIFT then MUTE)**, **SLEEP 15** appears. To add time to the sleep timer, press **MENU ▼**. Each press of **MENU ▼** adds 15 minutes to the sleep timer, up to a total of 60 minutes. When the desired sleep time appears, press **SELECT**. **SLEEP** appears.

  When Sleep Lock is enabled, the 7-in-One activates its own Sleep Timer. To use another device's sleep timer, or to simply disable Sleep Lock, repeat the above steps, pressing **MENU ▲** to select **DISABLE** in Step 6.




CONVERTING DEVICE KEYS

You can use the 7-in-One to operate a second TV or VCR, or any combination of up to six devices. To do this, you must first convert an unused device key (**AMP**, **TUN**, **TV**, **CD**, **CBL**, **VCR**, or **SAT**) to operate the second device.

For example, to convert **CBL** to operate a second TV:

1. Hold down **SETUP** until **TIMED SEQ** appears.
2. Press **MENU ▼** twice. **CONFIGURE** appears.
3. Press **SELECT. THEATR SEL** appears.
4. Press **MENU ▼** three times. **MODE MAP** appears.
5. Press **SELECT. SOURCE** appears.
6. Press **TV. COPY TO** appears.

 Need help? Call 1-800-763-9232





-
7. Press **CBL**. **TV2** appears.
 8. Program the converted device key (**CBL**) with the code for the second TV. (See "To Operate Your TV" on Page 12.)

Repeat these steps for each key you want to convert.

VOLUME LOCK




The 7-in-One lets you choose one device to control the sound volume for all the devices the 7-in-One operates. When you first set up the 7-in-One, each device with a volume control operates its own volume. You can change this so that one device controls the volume no matter which device the 7-in-One is operating.

For example, to set-up the 7-in-One so your receiver always controls the volume:

1. Hold down **SETUP** until **TIMED SEQ** appears.
2. Press **MENU ▼** twice. **CONFIGURE** appears.
3. Press **SELECT**. **THEATR SEL** appears.
4. Press **MENU ▼** twice. **VOL LOCK** appears.
5. Press **SELECT**. **UNLOCK** appears.
6. Press **MENU ▼**. **LOCK** appears.
7. Press **SELECT** then the key for the device that you want to control the sound volume (**AMP**, **TUN**, **TV**, **CD**, **CBL**, **VCR**, or **SAT**), then press **SELECT**.

For example, to control the volume through your receiver, press **TUN** then **SELECT**. When you press the volume keys on your 7-in-One, your receiver controls the volume.

   8. Press **ESC** to exit.



Note: You might need to use the **MENU** or **VOL** keys to control volume, depending on which device you selected during these steps.

Resetting Volume Lock

To restore volume control to each individual device:

1. Hold down **SETUP** until **TIMED SEQ** appears.
2. Press **MENU ▼** twice. **CONFIGURE** appears.
3. Press **SELECT**. **THEATR SEL** appears.
4. Press **MENU ▼** twice. **VOL LOCK** appears.
5. Press **SELECT**. **LOCK** appears.
6. Press **MENU ▼**. **UNLOCK** appears.
7. Press **SELECT**. Each device now controls its own volume when you use the volume keys on your 7-in-One.


USING THE MACRO KEYS

The 7-in-One has two macro keys, **AUD** and **VID**. Each key lets you play back a series of up to 15 keystrokes at any time with the press of a single key, in any mode. You can set up a maximum of 36 macros, 15 timed sequences (see "Setting Up Timed Sequences" on Page 42), or a combination of both.

For example, follow these steps to set up a macro on **VID** that turns on your TV, VCR, and satellite system so you can record a program.

Note: If you make a mistake, press **ESC** and start over at Step 1.

 1. Hold down **SETUP**. **TIMED SEQ** appears.





-
2. Press **MENU ▼** twice. **CONFIGURE** appears.
 3. Press **SELECT**. **THEATR SEL** appears.
 4. Press **MENU ▼** four times. **KEY MACRO** appears.
 5. Press **SELECT**. **SEL MACKKEY** appears.
 6. Press **VID**. **SELECT SEQ** appears.
 7. Enter the sequence of up to 15 keystrokes that you want the 7-in-One to memorize, then press **ESC**.

For example: **TV POWER 0 4 TV VCR SAT POWER**

In our example, whenever you press **VID**, the TV turns on, tunes to channel 4, and changes its input to VIDEO 1, then the satellite turns on.

  Note: When setting up a macro, you must include all keystrokes that you would enter during regular usage, such as pressing **ENTER** after a channel number when changing channels (if your TV requires it).



Repeat these steps to set up a macro on the other macro key.


SETTING UP TIMED SEQUENCES

The 7-in-One lets you set up a sequence of keystrokes that can be played back at a time you specify, up to seven days in advance. You can set up a maximum of 15 timed sequences, 36 macros (see "Using the Macro Keys" on Page 41), or a combination of both.

For example, follow these steps to set your VCR to record a program from your satellite system.

Note: If you make a mistake, press **ESC** and start over at Step 1.

 1. Hold down **SETUP** until **TIMED SEQ** appears.





-
2. Repeatedly press **SELECT** until **START** and the time appear, with the first digit blinking. Enter the time in 12-hour format. **AM/PM** flashes.
 3. If necessary, press **MENU ▼** to toggle between AM and PM, then press **SELECT**. **ONCE** appears.
 4. Press **MENU ▲** or **▼** to toggle between **ONCE**, **DAILY**, and **WEEKLY**. When the desired frequency appears, press **SELECT**. The day of the week display appears.
 5. Use **MENU ▲** and **▼** to toggle through the days of the week until the day when you want the sequence to start running appears.
 6. Press **SELECT**. **ENTER SEQ** appears.
 7. Enter the sequence of keystrokes you want the 7-in-One to play at the selected time, then press **ESC**.

 
For example, to set up a sequence that turns on the satellite, tunes to channel 275, turns on the VCR, and starts recording, enter:

 
SAT POWER SAT 2 7 5 VCR POWER VCR RECORD

When your sequence is set up, the clock icon appears.

Deleting a Timed Sequence

1. Hold down **SETUP** until **TIMED SEQ** appears.
2. Press **SELECT**. **ADD MACRO** appears.
3. Press **MENU ▲** or **▼**. **DEL MACRO** appears.
4. Press **SELECT**. **DEL** and the first set day and time appear.
5. If necessary, use **MENU ▲** or **▼** to scroll through the saved timed sequences. When you see the one you want to delete, press **SELECT**. **DELETED**








appears. If there are more timed sequences, the next one appears.

SETTING UP THE HOME THEATER KEY

The 7-In-One lets you operate all of the most commonly used home theater functions in one mode. When setting up the Home Theater mode, you choose which devices will control volume, channel changing, playback, picture-in-picture, and menu functions.

   1. Press **HOME THEATER**.
2. Hold down **SETUP** until **TIMED SEQ** appears.
3. Press **MENU ▼** twice. **CONFIGURE** appears.
4. Press **SELECT** twice. **AUDIO** appears.
5. Press **SELECT** then the appropriate device key (**TV**, **CBL**, **SAT**, **VCR**, or **AUX**) to select the device that you want to control audio features in Home Theater mode, then press **SELECT**. **CHANNEL** appears.
6. Press **SELECT**, then the appropriate device key to select the device that you want to change channels in Home Theater mode. Then press **SELECT** again. **PLAYBACK** appears.
7. Press **SELECT**, then **CD** or **VCR** to select the device that you want to control the transport keys (**PLAY**, **REW**, **FF**, **PAUSE**, **STOP** and **REC**) in Home Theater mode. Then press **SELECT** again. **PIP** (Picture-in-Picture) appears.
8. Press **SELECT** then **TV**, **CBL**, or **VCR** to select the device that you want to control Picture-in-Picture features in Home Theater mode. Then press **SELECT** again. **MENU** appears.





-
9. Press **SELECT** then the appropriate key to select the device you want to control the menu features in Home Theater mode. Then press **SELECT** again to stop programming.

Setting Up a Power Key Macro

After you set up the **HOME THEATER** mode, you can create a macro sequence that lets you use **POWER** to turn on and off all of your Home Theater devices.

 
1. Press **HOME THEATER**, then hold down **SETUP** until **TIMED SEQ** appears.
2. Press **MENU ▼** twice. **CONFIGURE** appears.
3. Press **SELECT**. **THEATR SEL** appears.
4. Repeatedly press **MENU-** until **KEY MACRO** appears.
5. Press **SELECT**. **SEL MACKKEY** appears.
6. Press **POWER** then the key for each device in your home theater system.
Note: You cannot use **AUD** or **VID** in your Home Theater Power key macro.
7. Press **POWER** then **ESC** to stop programming.

 
To activate the Home Theater Power macro, press **HOME THEATER** so **THEATER** appears, then press **POWER** to turn all of your home theater devices on or off.

CLEAR ALL

Use the Clear All feature to reset all advanced functions of the 7-in-One. Clear All erases macro sequences, timed macro sequences, and Volume Lock from the 7-

Need help? Call 1-800-763-9232





in-One's memory. It does *not* erase the setup codes you programmed.

To reset the 7-in-One using the Clear All feature:


1. Hold down **SETUP**. **TIMED SEQ** appears.
2. Press **MENU ▼** twice. **CONFIGURE** appears.
3. Press **SELECT**. **THEATER SEL** appears.
4. Press **MENU ▲**. **CLR ALL** appears.
5. Press **SELECT**. **CLR ALL** appears.
6. Press **SELECT** again. **CONFIRM** appears.
7. Press **SELECT** once more. Your 7-in-One is reset.

USING THE IR/RF COMMAND CENTER

The 7-in-One comes with an IR/RF Command Center which receives radio frequency (RF) signals from the 7-in-One and converts them into infrared (IR) signals to control your components.

Note: The 7-in-One's actual range depends on the construction of the building where it is used, as well as other factors, such as radio frequency interference. For the best operation:


 
- Aim the 7-in-One toward the room where the Command Center is located.
- Do not position the Command Center near metal objects (such as heating ducts) that can absorb RF signals.
- Keep fresh batteries in the 7-in-One. Weak batteries reduce the 7-in-One's range.





After you have set up the 7-in-One to control your devices (see “Quick Setup” on Page 6 or “Setting Up the Remote” on Page 12), follow these steps to set up the Command Center:

  
1. Choose a location about 8 feet in front of the components you want to control. The location should be near an easily accessible standard AC outlet, with line-of-sight access to your components.
2. Plug the Command Center’s power cord into the AC outlet and raise its telescoping antenna.
3. Position the Command Center so its black IR lens is facing your components.
4. Be sure the remote is not pointing toward your equipment, then test the Command Center by pressing **POWER**. You should be able to control components from any room.




Using the IR Signal Extension Cord

You can use the supplied IR signal extension cord to control a device that is within 4 feet of the Command Center but out of its direct line of sight.

1. Plug the IR signal extension cord into the jack (shown here) on the back of the Command Center.

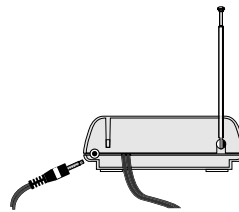


 2. Route the IR signal extension cord to the device.








-
3. Use the supplied double-sided tape to attach the IR signal extension cord to the device, with its LED on or next to the device's IR sensor.

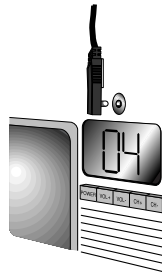

   4. Be sure the remote is not pointing toward your equipment, then test the Command Center by pressing **POWER**. The Command Center converts the 7-in-One's RF signal into an IR signal, and transmits that signal to the device through the cord.








TROUBLESHOOTING



Problem	Solution
Display begins to fade, does not appear, or the red light blinks five times when you press a key.	Replace the batteries with four fresh AAA alkaline batteries.
The 7-in-One does not operate your device.	Try all of the codes listed for your brand of device in the "Setup Codes" section. If this does not work, try searching for your code (see "Searching for a Code" on Page 37). Make sure the device you are setting up can be operated with an infrared remote.
The 7-in-One is not performing commands properly.	Try all of the codes listed for your brand of device in the "Setup Codes" section. Many set-up codes may allow some degree of operation. However, only one set-up code will work correctly with your device.
You make a mistake when setting up your 7-in-One.	During any set up procedure, except for timed sequences, the ESC key will return you to the DEVICE and the TIME screen without saving any of the entered information. If you make a mistake when setting up a timed sequence, return to the timed sequence menu and delete the incorrect sequence.
VCR not recording.	As a safety feature on the 7-in-One, you must press the REC key twice to begin recording.
CH+/- (Channel Up/Down) and LAST not working for your RCA TV.	Due to RCA design (1983-1987), only the original remote will operate these functions.

  




Need help? Call **1-800-763-9232**

 

Problem	Solution
Problems changing channels.	If your original remote required an ENTER keystroke when changing channels, press the ENTER key on the 7-in-One after you enter the channel number.
The red light blinks when you press a key but you receive no response from your device.	Press the appropriate device key (MAN, TUN, TV, CBL, CD, VCR, SAT, PLUG 'N POWER) for the device you are trying to operate. Make sure you aim your 7-in-One at your device and that you are within 15 feet of the device before using your remote.
You can turn your audio component on and off and control its volume, but you cannot change preset channels.	Some audio components might need both a Tuner/Receiver code (see Page 29) and an Audio Amplifier code (see Page 32) to control all the features of your audio component.
Your satellite receiver does not respond to the codes listed in the manual.	The codes listed in this manual are set up to operate your satellite receiver on the 1st or 2nd addresses only. Make sure the satellite receiver you are setting up can be operated with an infrared remote.
The 7-in-One does not operate Bang & Olufsen audio equipment.	Some Bang & Olufsen and other manufacturers' equipment operates at frequencies higher than 100 kHz. The 7-in-One will not operate such devices.



   NOTES





Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

 
 
This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600,
Fort Worth, TX 76102

We Service What We Sell

3/97



11A98N

Printed in Hong Kong

