

TelstraClear



User manual

Table of contents

Introduction	4
The Batteries	4
DTV Function Chart	4
TV Function Chart	6
DVD/VCR Function Chart	7
Additional feature	
Set-up the TelstraClear remote to control your television	8
Set-up the TelstraClear remote to control your DVD player / recorder	9
Code search	10
Blink out your Code	11
Code reference	11
Volume lock	12
Trouble Shooting	13
Set-up Codes	14



Introduction

After having inserted the batteries, your **TelstraClear** remote is ready to operate your **TelstraClear** digital television decoder. In addition to this, your **TelstraClear** remote gives you the possibility to control your television and DVD/VCR player/recorder.

The Batteries



Remove the battery cover from the back of your **TelstraClear** remote.



Your **TelstraClear** remote requires 2 new AA alkaline batteries. Match the batteries to the (+) and (-) marks inside the battery compartment, then insert the batteries.



Press the battery cover back into place.

DTV Function Chart

- 1 MUTE** : Turns the sound OFF or ON.
- 2 TV / Radio** : In normal viewing mode, switches your decoder circularly between the All TV Channels list and the All Radio Channels list. In Programme Guide, this key switches through all available channels lists.
- 3 POWER** : Switches your decoder between operate mode and standby mode.
- 4 TV** : Switches the remote to Universal Television mode
DTV : Switches the remote to Digital Television mode
DVD : Switches the remote to Universal DVD/VCR mode
- 5 MENU** : Displays/leaves the Menu System.
- 6 i** : Displays the Channel Banner or additional programme information.
- 7 CLOCK** : Toggles between displaying the Clock or currently tuned channel on the decoder's front panel display.

- 8 SET-UP / OPTIONS** : In TV viewing brings up the 'Options' menu. In the Programme Guide, jumps to a specific day.
- 9 EPG** : This key brings up the Programme Guide.
- 10 BACK** : In viewing mode or in the Channel Banner, toggles between the current and previous programme within the same channel list. In the Menu or Programme Guide, returns to the previous screen.
- 11 PPV** : Brings up the Pay Per View movie guide.
- 12 VOL +/-** : Increases and decreases the audio volume.
- 13 LEFT and RIGHT** : In the Channel Banner, switches between the current programme information and the next programme information. In the Menu, selects menu items or change parameters with predefined values.
- 14 UP and DOWN** : In the Channel Banner, scrolls the channel info up and down.
- 15 OK** : In the Channel Banner, tunes to the channel listed in the Channel Banner. In the Menu, selects the currently highlighted menu item or confirms your choices made in the menu screens.
- 16 CH +/-** : In viewing mode, Channel Banner or Menu tunes to the next/previous channel.
- 17 TRANSPORT KEYS** : These keys operate the transport functions (PLAY, FF, REW etc.) of your decoder.
- 18 SKIP** : Skip forward / back
- 19 TIMER** : Brings up Recording Timers List/Reminders List
- 20 LIB** : (Inactive)
- 21 COLOUR KEYS** : In the Channel Banner these keys perform the following functions: [Red] brings up the applications menu, and [Blue] brings up alternate viewing times for the current event.
- 22 NUMBER KEYS** : Select channels directly. Also, use number keys to type in letters and special characters in text entry boxes.
- 23 SUB** : (Inactive)
- 24 TEXT** : In normal TV viewing or in the Channel Banner, brings up the Mailbox.


TV Function Chart

- 1 **MUTE** : Turns the sound OFF or ON.
- 2 **TV / RADIO** : (Functionality dependent on TV model)
- 3 **POWER** : Switches your television to standby mode (you may have to press a number key to switch your TV back on).
- 4 **TV** : Switches the remote to Universal Television mode
DTV : Switches the remote to Digital Television mode
DVD : Switches the remote to Universal DVD/VCR mode
- 5 **MENU** : (Functionality dependent on TV model)
- 6 **i** : (Functionality dependent on TV model)
- 7 **CLOCK** : (Functionality dependent on TV model)
- 8 **SET-UP / OPTIONS** : (Functionality dependent on TV model)
- 9 **EPG** : Exit
- 10 **BACK** : Last Channel (P>P)
- 11 **PPV** : Display
- 12 **VOL +/-** : Increases and decreases the audio volume.
- 13 **LEFT and RIGHT** : Menu Left and Right
- 14 **UP and DOWN** : Menu Up and Down
- 15 **OK** : OK / Select
- 16 **CH +/-** : Switches to the next/previous channel.
- 17 **TRANSPORT KEYS** : (Functionality dependent on TV model)
- 18 **SKIP** : Skip Back displays Menu. (Skip Forward functionality dependent on TV model)
- 19 **TIMER** : (Functionality dependent on TV model)
- 20 **LIB** : Teletext
- 21 **COLOUR KEYS** : Fastext functionality
- 22 **NUMBER KEYS** : Select channels directly.
- 23 **SUB** : AV
- 24 **TEXT** : -/-- function.



DVD/VCR Function Chart


- 1 MUTE** : Turns the sound OFF or ON.
- 2 TV / RADIO** : (Functionality dependent on DVD/VCR model)
- 3 POWER** : Switches your DVD/VCR to standby mode (you may have to press another key to switch your DVD/VCR back on).
- 4 TV** : Switches the remote to Universal Television mode
DTV : Switches the remote to Digital Television mode
DVD : Switches the remote to Universal DVD/VCR mode
- 5 MENU** : Top Disk Menu
- 6 i** : (Functionality dependent on DVD/VCR model)
- 7 CLOCK** : (Functionality dependent on DVD/VCR model)
- 8 SET-UP / OPTIONS** : (Functionality dependent on DVD/VCR model)
- 9 EPG** : Exit
- 10 BACK** : (Functionality dependent on DVD/VCR model)
- 11 PPV** : Display
- 12 VOL +/-** : Increases and decreases the audio volume.
- 13 LEFT and RIGHT** : Menu Left and Right
- 14 UP and DOWN** : Menu Up and Down
- 15 OK** : OK / Select
- 16 CH +/-** : Next/Previous DVD Track or DVD Chapter
- 17 TRANSPORT KEYS** : These keys operate the transport functions (PLAY, FF, REW etc.) of your DVD/VCR.
- 18 SKIP** : Skip Back displays Menu. (Skip Forward functionality dependent on DVD/VCR model)
- 19 TIMER** : Language
- 20 LIB** : (Functionality dependent on DVD/VCR model)
- 21 COLOUR KEYS** : (Functionality dependent on DVD/VCR model)
- 22 NUMBER KEYS** : Select DVD tracks directly.
- 23 SUB** : Input select, TV or DVD/VCR
- 24 TEXT** : /-- function.


Set-up the TelstraClear remote to control your television

- 1**  **Find the brand of your television in the Set-up Code section and select the first 4 digit code in the list. Switch on your TV (not on standby).**

- 2**  Press the **TV** key and release it.

- 3**  **Press and hold down** the  key until the red LED underneath the TV key lights up twice.

- 4**  Enter the **4-digit code** for your television (the red LED should light up twice after having entered the fourth digit).

- 5**  Press the **Power** key and see if you are able to switch off your television.

If your television does not respond, repeat steps 1 to 5 with each code listed for your brand. If none of the codes listed for your brand operate your television, or if your brand is not listed, try the code search described on page 10.





 

- 6** Switch your television back on by pressing a number key (or CH+) and check if all the functions are working correctly.

- 7** Write down the code for your television on the inside of the battery cover and on page 11 for quick easy reference.

Important:

- If there are some functions that are not working, repeat steps 1 to 5 with each code listed for your brand or try the code search described on page 10, as you may be using the wrong code.

Set-up the TelstraClear remote to control your DVD/VCR player/recorder

-  **Find the brand of your DVD/VCR in the Set-up Code section and select the first 4 digit code in the list. Switch on your DVD/VCR (not on standby).**
-  Press the **DVD** key and release it.
-  **Press and hold down** the  key until the red LED underneath the **DVD** key lights up twice.
-  Enter the **4-digit code** for device (the red LED should light up twice after having entered the fourth digit).
-  Press the **Power** key and see if you are able to switch off your device.

If your device does not respond, repeat steps 1 to 5 with each code listed for your brand. If none of the codes listed for your brand operate your device, or if your brand is not listed, try the code search described on page 10.
- Switch your device back on by pressing a number key (or CH+) and check if all the functions are working correctly.
- Write down the code for your device on the inside of the battery cover and on page 11 for quick easy reference.









Important:

- If there are some functions that are not working, repeat steps 1 to 5 with each code listed for your brand or try the code search described on page 10, as you may be using the wrong code.
- If your device does not have a POWER key, press PLAY during step 5.

Code search



If your device does not respond to the **TelstraClear** remote after having tried all the codes listed for your brand, you can try the Code search. During the Code search you will run through every available code in the **TelstraClear** remote library. This method may also work if your brand is not listed at all.

Example: To search for your **television** code.

- 1 Make sure that your television is switched on.
- 2  Press the **TV** key and release it.
- 3  **Press and hold down** the  key until the red LED (underneath the TV key) lights up twice.
- 4    Press **9 9 1**. The red LED will light up twice.
- 5 Aim the **TelstraClear** remote at your device.
- 6  Next press **power**.
- 7  Aim the **TelstraClear** remote at your Television. Now press **CH+** over and over, until your Television turns off.

*Every time you press the **CH+** key the **TelstraClear** remote will send out a **POWER** signal from the next code contained in the **TelstraClear** library).*

You may have to press this key many times (up to 150 times) so please be patient. The Code search can take approximately 15 minutes.

*If you skip past a code, you can go to the previous code(s) by pressing the **CH-** key. Remember to keep pointing the **TelstraClear** remote at your device during the Code search.*
- 8  As soon as the device switches off, **press**  to store this code.









Important:

- Press the corresponding device key when doing a Code search. If your device does not have a **POWER** key, press **PLAY** instead during step 6.

Blink out your code

By blinking out you code you can determine which code is actually working for your device.

Example: To blink back the code for your **television**.

-  Press the **TV** key and release it.
-  **Press and hold down** the  key until the red LED (underneath the TV key) lights up twice.
-  Press **9 9 0**. The red LED (underneath the TV key) will light up twice.
-  Press **1** and count how many times the LED lights up. If it does not light up the first digit is 0.
-  Press **2** and count how many times the LED lights up. If it does not light up the second digit is 0.
-  Press **3** and count how many times the LED lights up. If it does not light up the third digit is 0.
-  Press **4** and count how many times the LED lights up. If it does not light up the fourth digit is 0.
Now you have found the 4-digit code.

Important:

- If during step 4, 5, 6 or 7 the LED does not light up at all, the digit is 0.
- Press the corresponding device key during step 1 if you want to blink back the code for another device you programmed.

Code reference

Write down the codes for your devices in the boxes below and in the battery compartment for quick and easy reference.

.....


.....

Volume lock


The **TelstraClear** remote comes with a "Volume Punch Through" feature. This allows you to control the TV volume also if you are in "DTV" or "DVD" mode.

"Volume Punch Through" can be cancelled for a specific mode.


To cancel the "Volume Punch Through" for DVD mode:

- 1 Press DVD.**
- 2 Press and hold down** the  key until the red LED underneath the DVD key lights up twice.
- 3 Press 9 9 3.**
- 4** Then press the **VOL (-)** key and the LED will light up four times.

To cancel the "Volume Punch Through" for all modes:

- 1 Press and hold down** the  key until the LED (underneath TV or DVD key) lights up twice.
- 2 Press 9 9 3.**
- 3** Then press the VOL (+) key and the LED will light up four times.

To restore the punch through to TV volume, being in DTV or DVD mode:

- 1 Press and hold down** the  key until the LED (underneath TV or DVD key) lights up twice.
- 2 Press 9 9 3.**
- 3** Then press the **TV** key and the LED will light up twice.

Trouble Shooting

◇ **Your brand is not listed in the code section?**

Try the search method.

◇ **The TelstraClear remote does not operate your television or DVD-player?**

A) Try all the codes listed for your brand.

B) Try the search method.

◇ **The TelstraClear remote is not performing commands properly?**

You may be using the wrong code. Try repeating the Direct Set-Up using another code listed under your brand or start the search method over again to locate the proper code.

◇ **Problems changing channels?**

Enter the program number exactly as you would on your original remote.

◇ **The TelstraClear remote does not respond after pressing a key?**

Make sure you are using new batteries and are aiming the **TelstraClear** remote at your device.

Set-up Codes

TV

A.R. Systems	0403	0586	0404	
Accent	0039	0067	0586	
Acer	1369	1539	1433	1674
Adcom	0655			
Admiral	0123	0393	0448	0117
	0193	0294		
Advent	0906			
Adyson	0247	0246		
AEA	0067	0586		
AEG	0636			
Agashi	0246	0247		
AGB	0546			
Agef	0117			
Aiko	0039	0099	0246	0910
Aim	0067	0102	0442	0586
	0783	0238	0736	0728
	0664	0404	0481	0485
	0636	0529		
Aiwa	1938	1535		
Akai	0391	0238	0401	0833
	0067	0463	0221	0065
	0039	0102	0783	0248
	0582	0744	0193	0736
	0518	0728	0546	0745
	0632	0586	0578	0611
	0510	0247	0661	0246
	0294	0478	0208	0407
	0636	1067	1938	0503
	1289	1278	1338	
Akashi	0039			
Akiba	0248	0312	0485	0067
	0586	0324		
Akira	0220	0448	0783	0067
Alaron	0209	0246		
Alkos	0065			
Allorgan	0236	0324	0247	
Allstar	0067	0586		
Ambassador	0207			
Amoi	1559			
Amstrad	0207	0039	0546	0294
	0384	0401	0248	0067
	0586	0463	0442	0392
	1067	0611	2012	
Anam	0067	0586	0039	0680
Anam National	0067	0586	0680	
Andersson	1193	1179		
Anglo	0039	0294		
Anitech	0039	0294	0067	0586
	0312	0132		
Ansonic	0400	0067	0586	0039
	0698	0404	0193	0322
	0132	0441	0289	0277
	0458	0134		
AOC	1119	1618		
Apollo	0503			
Arcam	0246	0247		
Ardem	0516	0067	0586	
Arena	0067			
Aristona	0586	0067		
ASA	0135	0376	0100	0134
	0117	0193	0209	
Asberg	0067	0586	0132	
ASK	1777			
Asora	0039			
Astra	0067	0586		
ATD	0728			
Atlantic	0067	0586	0246	0236
	0350	0289		
Atori	0039			
Audiosonic	0067	0850	0586	0139
	0744	0745	0247	0400
	0367	0294	0248	0516
	0458			
Audioton	0247	0516	0400	0294
	0458			
Audiovox	0481			
Audioworld	0728			
Aumark	0090			
Autovox	0117	0236	0267	0379
	0247	0277	0366	
AVP	1938			
AWA	0041	0066	0039	0187
	0404	0481	0442	0067
	0586	0246	0636	0247
	0138	0294	2015	1406
	0208	0728		
Axxent	0039			
B&D	1247			
Baier	0906	1402		
Bang & Olufsen	0595	0117	0305	
Barco	0582	0193		
Base	1600			
Baseline	1274			
Basic Line	0404	0067	0193	0698
	0586	0039	0248	0312
	0247	0485	0369	1067
Bastide	0247			
Bauer	0039	0728	0736	0294
Baur	0039			
Beaumarck	0208			
Beko	0744	0516	0458	0400
	0067	0586	0636	0745
	0838	1682		
Bennett	0586	0067		
BenQ	1592			
Beon	0067	0586	0448	
Best	0367	0400	0451	
Bestar	0067	0586	0400	0404
Black Diamond	0850	1067	0586	0783
	1193			
Black Panther	0132			
Blackway	0312	0248		
Blaupunkt	0584	0221	0565	0225
	0230	0357	0358	0478
	0485	0200	0066	
Blue Sky	0067	0744	1067	0517
	0698	0745	1939	0586
	0248	0312	0485	1938
	1221	0838	1393	1418
	1344	1769		
Bondstec	0277			
Boots	0247	0039		
Bosch	0350	0357		
BPL	0067	0586	0312	0403
Brandt	0655	0139	0267	0226
	0317	0365	0501	0373
	0590	1395		
Brandt				
Electronique	0317	0365		
Brinkmann	0067	0586	0698	0448
	0516			
Brother	0294			
Bruns	0117	0458	0516	
BSR	0193	0324	0582	0391
BTC	0248			
Candle	0216			

Europhon	0067	0546	0132	0193	Genexxa	0248	0067	0586	0442
	0247	0586	0344	0277		0193	0039		
	0582	0461	0246		Gericom	1636			
Expert	0236	0289	0193		Gevalt	1401			
Fenner	0404	0039			G-Hanz	1393			
Filsai	0247				Giant	0247	0039		
Finlux	0135	0134	0067	0586	G-Luxon	0874			
	0744	0376	0247	0102	Goldfunk	0698			
	0582	0193	0546	0745	Goldline	0367			
	0100	0117	0209	0132	GoldStar	0067	0039	0400	0407
	0344	0441	0661	0522		0247	0277	0208	0246
	0510	1586	0659	0503		0586	0461	0193	0391
	0448	0636	0838	1615		0139	0393	0636	0744
Firstline	0067	0586	0404	0698		0745	0485		
	0744	0193	0039	0324	Gooding	0517			
	0351	0246	0415	0277	Goodmans	1289	1278		
	0582	1939	0344	0132	Gorenje	0400	0451		
	0247	0441	0379	0561	GP	0783			
	0268	0102	0265	0238	GPM	0248			
	0391	1067	1221	0838	Gradiente	0683	0200	0067	0586
	1393	1193	1418	1401	Graetz	0391	0401	0193	0067
	1338					0369	0586	1193	
Fisher	0134	0247	0066	0238	Grundig	0225	1401	0565	0221
	0400	0585	0075	0117		0584	0100	0517	0067
	0187	0391	0582	0193		0473	0736	0267	0586
	0333	0379	0102			0617	0039	0066	0400
FNR	0132					0770	1938	0660	1253
Force	1179					1338	0208	1406	1830
Formenti	0193	0067	0586	0516		1612	0373		
	0246	0117	0350	0582	Grunpy	0209			
Formenti-Phoenix	0246	0350	0582		H&B	0838			
Fortress	0123	0117			Haaz	0736			
Fraba	0067	0586	0400	0561	Halifax	0294	0246	0247	
Friac	0039	0067	0586	0132	Hammerstein	0294	0090		
	0451	0400	0529	0685	Hampton	0246	0247		
	0640				Hanimex	0248			
Frontech	0277	0294	0379	0393	Hannspree	1806			
	0461	0478	0247	0039	Hantarex	0039	0067	0586	0132
	0193					0546	0268	0859	1368
Fuchsware	0810				Hantor	0067	0586		
Fujitsu	0209	0713	0216	0883	Harley Davidson	0209	0073		
	0839	0236	0102	0132	Harsper	0895			
	0344	0247	0193	0039	Harwa	0803	1226	1299	
	0382	0067	0586	0391	Hauppauge	0067	0586		
	0289				HCM	0039	0442	0067	0586
Fujitsu General	0039	0216	0247	0236		0247	0248	0448	0312
	0193					0294			
Fujitsu Siemens	1696	1328	1289	1278	Hedzon	0586	0067		
	1403	1193	0838	0839	Hema	0247	0039		
Funai	0698	0209	0294	0324	Hicon	1497	1328		
	0333	0442	1696	1535	Highlander	1561			
	0744				Highline	0294	0067	0586	
Futronic	0294	0728			Hisense	1393	1344	0238	1056
Future	0067	0586				1103	0728	0921	0810
Galaxi	0132	0067	0586	0391	Hit	0117			
	0193				Hitachi	0255	1255	0379	0608
Galaxis	0400	0448	0067	0132		0066	0386	0180	0138
	0586					0073	0503	0193	0582
Galeria	0039					0373	0226	0247	0606
GBC	0582	0193	0039	0404		0224	0546	0102	0511
	0248	0393				0529	0067	0586	0139
GE	0373	0765	0208	0312		0393	0578	0664	0774
	0481	0590	0317	0139		0208	1167	0135	0522
	0365	0655				1511	0391	0542	0510
GEC	0193	0391	0379	0067		0827	0659	1067	1606
	0546	0586	0073	0102		1179	1224	1990	1514
	0247					0907	1802		
Geloso	0277	0039	0393	0582	Hitachi Fujian	0138	0858	0180	0067
	0193	0404				0255	0586	0606	0529
General	0139	0317	0501	0216	HMV	0117			
General Electric	0373	0317			Höher	0744	1586	0895	1193
General Technic	0039				Huanyu	0404	0246		
Genesis	0039	0067	0586		Humax	1565			
					Hyper	0039	0246	0247	0277

Hypersonic	0391				Kendo	0640	0067	0586	0193
Hypson	0067	0586	0744	0745		0542	0400	0407	0393
	0294	0247	0312	0485		0458	0441	0132	0265
	0268	1938	1067	0698		0277	0392	0581	1615
	0516					1067	0516		
Hyundai	0833	0895	0736	1561	Kennedy	0193	0236	0582	0465
	0728	1274	1324	0906	Kenwood	0135			
	1311	1800	1498	1307	KIC	0247			
	0294	1586	1661	1636	Kingsley	0246			
	1406	0808			Kiton	0586	0067	0698	
Iberia	0067	0586			Kolster	0067	0586	0132	0379
ICE	0294	0067	0401	0039		0277	0248		
IIsonic	0586	0248	0247	0246	Konichi	0039			
Iiyama	1406				Konka	0067	0586	0401	0744
Imperial	1247	0920				0448	0248	0671	0617
	0067	0193	0400	0104		1220	0636		
	0114	0586	0660	0441	Kontakt	0517			
	0391	0379	0448	0277	Korpel	0067	0586		
	0226	0461	0561	0582	Kotron	0442	0294	1930	
Indesit	0267				Koyoda	0039			
Indiana	0067	0586			Kross	1566			
InFocus	0782	1194	1236	1460	KTV	0247			
	1777				Kuba	0379	0193		
Ingelen	0517	0640	0744	0193	Kuba Electronic	0333	0379	0193	
	0391				Kyoshu	0442	0448	0294	
Inno Hit	0039	0102	0067	0586	Kyoto	0415	0193	0246	0247
	0248	0247	0546	0277	LaSAT	0516	0400		
	0132	0312	1193		Leader	0039			
Inotech	0803	0850			Legend	0039	0367		
Interactive	0067	0586	0117	0542	Lemair	0441			
	0305	0357	0193	0391	Lenco	0067	0039	0193	0404
	0400	0139	0441			0586	0134	0617	1067
Interbuy	0039	0067	0294	0277		1661			
	0542	0586			Lenox	1219			
Internal	0067	0586	0529	0404	Lentec	1561			
	1939				Lesa	0277			
International	0246				Levis Austria	0067	0586		
Intervision	0312	0247	0485	0067	Lexsor	1226	1537		
	0401	0407	0478	0516	Leyco	0294	0102	0067	0586
	0400	0424	0517	0248		0324			
	0132	0461	0193	0294	LG	0208	0067	0400	1262
	0277	0039	0586			1453	1349	0906	0407
Isukai	0248	0067	0586	0312		0039	0586	0744	0247
	0485					0246	0461	0193	0636
ITC	0247	0582	0350			0139	0728	0745	0853
ITS	0067	0401	0248	0312		0859	1667	1176	1178
	0294	0246	0039	0586		1221	0277	0391	
ITT	0193	0510	0379	0391	Liesenk & Tter	0357	0067	0586	
	0503	0578	0376	0369	Lifetec	0067	0039	0404	0698
	0238	0209	0640			0542	0685	1067	1167
ITT Nokia	0391	0578	0193	0503		0586	0744	0248	0294
	0510	0379	0376	0238		0713	1278	1289	
	0209	0369	0636	0640	Loewe	0542	0663	0820	0067
	0661	0393	0461			0586	0685	0400	0117
ITV	0294					0322	0581	0392	0546
Jean	0066					0821			
JEC	0065				Logik	0041	0728	0090	0803
JNC	0906	1566				0039	0294	0401	0910
Jubilee	0586					1247	1067		
JVC	0683	0220	0066	0713	Logix	0698			
	0222	0401	0248	0636	Luma	0067	0393	0236	0193
	0448	0099	0761	1183		0441	0586	0404	0039
	0123	0680	1683			0392	0289		
Kambrook	0407	0461	0294		Lumatron	0393	0236	0067	0586
Kamp	0246					0392	0193	0289	0391
Karcher	0067	0586	0451	0400		0247	0294	0103	
	0640	0193	0312	0132	Luxor	0224	0267	0393	0510
	0344	0294	0808	0744		0522	0379	0391	0238
	1586	0636	2012			0386	0578	0193	0376
Kathrein	0586	0067	0910			0503	0209	1067	0247
Kawasho	0246					0661			
					LXI	0208			
					Madison	0067	0586		

Magnavox	0067	0586	0066	0209	MTlogic	1338
	0810	1169	1233	0783	Multimat	0344
Magnum	0744	0067	0586	0745	Multitec	0067 0586 0516 0698
	1319					1067 1586 2012
Mandor	0294				Multitech	0379 0039 0393 0516
Manesth	0067	0586	0265	0247		0067 0400 0586 0247
	0294	0350	0065	0324		0246 0277 0132 0344
	0193	0393				0294 0582
Manhattan	0067	0586	0698	1067	Murphy	0134 0246 0102 0193
	0193	0808			Myryad	0586 0067
Maqma	1497	1328	1739	1636	NAD	0196 0208 0895 0391
Marantz	0067	0586	0442			0193
Mark	0067	0586	0247	0246	Naiko	0067 0636 0586
	0404	0039	0744	0745	Nakimura	0404 0067 0586
Masuda	0248	0401	0039	0294	Naonis	0393 0193
	0067	0247	0586		NAT	0256 0370 0244
Matsushita	0680				National	0244 0256 0267 0370
Maxam	0294				NEC	0200 0617 1200 1397
Maxdorf	0803	0728	0736	0294		0066 0350 1549 0906
Maxim	2012	1586				0485 0039 0404 0247
MAXIVIDEO	0344					0067 0586 0041 0734
MCE	0039					0275 0267 1734 0529
McMichael	0073					0683 0801 1400 1165
Medialine	1236					0691 0912
Mediator	0067	0586			Neckermann	0067 0221 0400 1535
Medion	0744	0838	0067	0698		1040 0230 0584 0586
	0586	0542	1167	0728		0582 0193 0357 0448
	1938	1067	1930	1278		0379 0117 0277 0247
	1289	0275	1251	0910		0441 0350 0393 0542
	1319	1196	1586	1179	NEI	0067 0586 0367 0461
Megas	0640					0401 0193 1067
Megatron	0208				Neovia	1236 0895 1403 1401
MEI	1067	0067	0586			0906 1406 1420 1414
Meletronic	0376	0067	0542	0139		1368
	0373	0277	0135	0134	Nesco	0277 0209 1938
	0404	0039	0247	0510	Netsat	0067 0586
	0522	0246	0441	0379	Network	0367
	0193	0317	0586	0664	Neufunk	0067 0039 0586 0640
	0391	0221	0225	0691		0248 0312 0744
	0744	1682			New Tech	0067 0039 0586 0373
Memorex	0039	0180	0208	0680		0247 0478
	0090				Nicamagic	0246
Memphis	0367	0102	0039	0415	Nikkei	0744 1624
Mercury	0067	0039	0728	0294	Nikko	0208
	0586	0736	0090		Nintaus	0921
Metz	0776	0418	0477	0397	Nobliko	0132 0100 0246 0344
	0117	1193	0225	0565	Nokia	0391 0193 0510 0379
	0584	0221	0067	0586		0578 0522 0503 0369
	0305	0698	1067			0238 0404 0661 0636
MGA	0180	0208	0067	0586		0376 0209 0350 0640
	0248	0134				0139 0581
Micromaxx	0067	0586	0698	1067	Nordmende	0139 0921 0317 0226
	0660	0838				0590 0373 0225 0067
Microstar	0838					0586 0365 0193 0501
MicroTEK	0850	0728	0736	0294		1289 1278 0744 1319
Minato	0067	0586			Norfolk	0193
Minerva	0517	0565	0225	0100	Normerel	0067 0586
	0221	0584	0267	0546	Novak	0067 0586
	0138	0180			Novatronic	0067 0135 0404 0561
Minoka	0442	0067	0586			0586
Mirai	1696				NU-TEC	0485 0728 0850 0067
Mitsubishi	0138	0180	0542	0123		0586 0736 0294
	0067	0208	0384	0117	Oceanic	0193 0391 0324 0238
	0066	0267	0388	0565		0503 0578 0510
	0586	0721	0238	1067	Odeon	0294
	1552				Olidata	1406
Mitsuri General	0193				Omega	0294
Mivar	0322	0400	0246	0639	Omni	0810 0921 0728
	0546	0247			Onwa	0401 0248 0463 0611
Monaco	0039					0132 0461
Morgan's	0067	0586			Optimus	0680 0196
Motorola	0123				Optoma	1652
MTC	0090	0400	0379	0542	Optonica	0123
	0193	0246	0391	0478	Orbit	0067 0586

Orion	0067	0209	0473	0385	Policom	0132	0139	0226	0236
	0586	0744	0685	0265		0267	0268	0305	0391
	0324	0207	0350	0041		0193	0100	0104	0114
	0039	0351	0241	0344		0117	0565		
	0132	0294	0442	0546	Polytron	0312			
	0561	1938	0910	1226	Poppy	0039			
Orline	0067	0248	0586		Portland	0404	1939		
Ormond	0415	0698	1067	0067	Powerpoint	0517	0067	0586	0728
	0586				Prandoni-Prince	0277	0546	0391	0393
Orsowe	0546				Precision	0247			
Osio	0067	0586			Premier	0039	0294		
Oso	0248				Prima	0039	0294	0333	0442
Osume	0187	0102	0066	0248		1299	1537		
	0067	0586			Princess	0728	1356		
OTIC	1233	1036			Prinz	0102	0379	0391	0224
Pace	1938				Profex	0039	0193	0461	0391
Pacific	0067	0586	1167	0744		0393			
	1067	0473			Profi	0039			
Pael	0246				Profitronic	0067	0586	0344	0132
Palladium	0400	0067	0685	0441	Proline	0067	0586	0655	0664
	0660	0744	1167	0221		0660	0441	0351	0102
	1535	1040	0230	0448		1406	1067		
	0584	0586	0379	0277	Prosonic	0067	0586	0400	0404
	0357	0117	0582	0193		0401	0698	0744	0481
	0247	0393				0246	0244	0247	1762
Palsonic	0294	0442	0067	0247	Protech	0067	0586	0247	0039
	0407	0248	0728	0586		0277	0379	0132	0294
	0478	0518	0803	0448		0461	0448	0367	0698
	0808	1519	1226	1537		0312	0582	0193	0516
	1299	1735	1356			1067			
Panama	0039	0247	0294	0246	Proton	0208			
	0067	0586	0277		Provision	0529	0067	0586	1067
Panasonic	0680	1680	0138	0256		0744			
	1666	1340	0244	0391	Proxima	0765			
	0267	0397	0370	0546	PVision	1221	0906	1248	
	0067	0586	0193	0578	Pye	0067	0586	0117	0584
	0801	1240	0883	0208		0404	0379	0442	
	0090				Pymi	0039			
Papouw	0067	0586			Quasar	0277	0680	0895	0039
Pathe Cinema	0193	0268	0246	0350	Quelle	0067	1535	1040	0041
	0322	0379	0461	0582		0139	0542	0565	0379
	0400					0584	0221	0391	0066
Pathe Marconi	0139	0226	0267			0247	0277	0104	0357
Pausa	0039					0114	0358	0100	0134
Perdio	0102	0350	0193	0067		0135	0698	0586	0187
	0246	0312	0586			0225	0230	0294	1067
Philco	0117	0114	0104	0448		0324	0376	0451	0582
	0277	0582	0193	0400		0039			
	0067	0586	0216		Questa	0066			
Philex	0581	0193			Radiola	0067	0586	0247	
Philharmonic	0247				Radiomarelli	0117	0546	0277	0067
Philips	0586	0067	0268	0751		0586			
	0584	0221	0073	0117	RadioShack	0067	0586	0208	
	0453	0373	0404	0635	Radiotone	0039	0067	0586	0458
	0802	0669	0039	0230		0400	0448	0442	0698
	1334	1536	1484	0391		0294	1067		
Phocus	1319	1338	0744	1682	Rank	0100			
	1830				Rank Arena	0066	0187	0632	0783
Phoenix	0067	0586	0400	0516	RBM	0100			
	0193	0117	0102	0246	RCA	0655	0123	0590	0365
	0350	0415	0582			0373	0783		
Phonola	0067	0586	0117	0246	Realistic	0208			
Pioneer	0790	0041	0196	0200	Recor	0067	0448	0586	
	0067	0709	0586	0453	Rectiligne	0067	0586		
	1290	0458	0400	0373	Rediffusion	0391	0578	0066	0376
	0391	0139	0193	0317	Redstar	0067	0586		
	0516	0542			Reflex	0067	0586	1067	0698
Pionier	0400	0516			Relisys	0895	0906	0907	1236
Plantron	0067	0586	0294	0039		1237	1243	1239	1328
Playsonic	0744	0067	0247	0369		1406	1615	1771	1770
	0745	1830	1682		Revox	0067	0586	0400	
Plus	0801	1582			Rex	0236	0393	0441	0277
Polaroid	1553	1675				0193	0289	0294	0581
					Rhapsody	0246			

Ricoh	0067	0586				
Rinex	0803	0448	0728	0294		
	0736					
Roadstar	1067	0039	0448	0067		
	0586	0744	0698	0248		
	0294	0312	1219	1930		
Robotron	0117					
Rover	0066					
Rowa	0294	0728	0742	0247		
	0039	1471	0736	0246		
	0617	0067	0586			
Roxy	0478					
Royal	0448	0636				
Royal Lux	0451	0400	0442	0365		
Rukopir	0586	0067				
Saba	0655	0139	0590	0373		
	0317	0117	0193	0546		
	0391	0528	0226	0365		
	0578	0501	0680	0744		
	1618					
Saccs	0268					
Sagem	0640	0485	0312	0860		
	1343	0648				
Saisho	0664	0404				
Saivod	0067	0586	0698	0742		
	1067					
Sakaï	0193					
Sakura	1233					
Sakyno	0485					
Salora	0224	0379	0193	0386		
	0391	0546	0393	0403		
	0578	0369	0238	0582		
	0510	0661	1196	1586		
	0808	1401				
Salsa	0365					
Sambers	0546	0132	0344			
Samsung	0648	0617	0067	0208		
	0586	1279	1660	0123		
	0674	1265	0039	0247		
	0478	0512	0400	0518		
	0090	0294	0246	0102		
	0238	0712	0193	0655		
	1649	0844				
Sandra	0246	0247				
Sanela	0268					
Sansei	0481					
Sansui	0067	0586	0736	0685		
	0401	0632	0451	0485		
	0918	0783	1401	1561		
	1727	1583	1624	0728		
	0294	0744	1414			
Santon	0039					
Sanyo	0238	1238	0187	0322		
	0751	0066	0041	0400		
	1537	0369	0102	0246		
	0247	0134	0075	0585		
	0039	0193	0403	0067		
	0138	0586	0516	0765		
	0923	0200	0734	1677		
	1678	1679	1684	1067		
	1179	1193				
Save	0067	0586				
Saville	1938					
SBR	0067	0586	0073			
Schaub Lorenz	0578	0744	0391	0379		
	0636	0516	0404	1221		
	1224	1393	1401			
Schneider	1167	0067	0586	0333		
	0379	0424	0382	0366		
	0289	0373	0247	0277		
	0401	0391	0248	0698		
	1067	0193	0744	1939		
	1938	1398	2012	0100		
	1402					
Scotland	0193					
Scott	1219	0208	0209			
Sears	0208	0209				
Seaway	0664					
SEG	1067	0067	1193	0586		
	0698	0247	0517	0039		
	0379	0193	0294	0664		
	0066	0132	0277	0392		
	0344	0246	0582	0248		
	1939	0744				
SEI	0117	0132	1535	1040		
	0582	0193	0546	0379		
	0324	0344	0236	0067		
	0586	0207				
Sei-Sinudyne	0132	0236	0324	0344		
	0546	1535	1040	0582		
	0067	0586	0117			
Seleco	0236	0393	0289	0392		
	0193	0441	0703	0581		
	0401	0066	0294	0376		
	0465					
Sencora	0039					
Sentra	0065	0248	0039	0379		
Sharp	0123	1223	0187	0066		
	0324	0521	0683	0216		
	0546	0230	0790	1423		
	1193	1616	1689			
Sherwood	1429					
Shintoshi	0067	0586				
Shivaki	0067	0586	0473	0481		
	0404	0208				
Show	0448	0039	0102	0728		
	0294	0736	0067			
Siarem	0582	0193	0117	0132		
	0546					
Siemens	0221	0565	0584	0230		
	0225	0357	0358	0187		
	0067	0586	0391			
Siera	0067	0586	0617			
Siesta	0400					
Silva	0067	0586	0246	0391		
Silva Schneider	0783					
Silver	0066	0485	0391	0209		
	0745	0193				
SIM2 Multimedia	0703					
Simpson	0216					
Singer	0039	0117	0728	1586		
	0067	0586	0132	0277		
	0465	0365	0193			
Sinotec	0803	0448	0636	0728		
Sinudyne	0207	0117	0265	0132		
	0324	0582	0193	0391		
	0546	0379	1535	1040		
	0344	0236	0067	0586		
	1938	0636				
Skantic	0386					
Sky	0067	0586	1636	1805		
	1775	1808	0691	0895		
Skymaster	0135					
Skysonic	0783					
Sliding	0895	0910	1402	1404		
	1405	1407	1413	1418		
	1398					
Smaragd	0517					
S-Media	1247					
Sogera	0350					
Sogo	1406					
Solavox	0391	0102	0193	0578		
	0067	0586				
Sonawa	0248					
Sonic	0783					
Soniko	0067	0586				
Soniq	1497	1328				
Sonitron	0238	0400	0369	0247		

Sonoko	0067	0586	0039	0294	TEC	0247	0039	0277	0501
	0312	0247				0365	0367	0289	0582
Sontec	0067	0586	0400	0324		0067	0586	0391	0193
	0039				Tech Line	0067	0586	0698	1193
Sony	1535	1681	1655	1040	Techica	0248			
	1781	0041	0383	0066	Technica	2012			
	0132	0344	0067	0586	Technics	0680			
	0187	1955	0123	0200	TechniSat	0685	0067	0586	0193
	0104	0840			Technol Ace	0209	0728	0294	0664
Sound & Vision	0132	0248	0404	0067		0404	0246		
	0586				Techwood	1193	1067		
Soundesign	0208	0209	0216		Teco	1070	1343	1553	
Soundwave	0067	0586	0350	0448	Tedalex	0247	0728	0736	0636
	0745					0067	0448	0039	0238
Soyea	0803					0921	0617	0586	0461
Staksonic	0039					1739	1561	0294	1729
Standard	0067	0586	1067	0248	Tek	0850	0067	0728	0039
	0039	0247	0350	0404	Teknika	0090	0209	0216	
Starlite	0039	0582	0193	0067	Telefunken	0655	0590	0617	0104
	0586	0294	0442			0139	0728	0742	0373
Stenway	0312	0248				0528	0850	0926	0501
Stern	0236	0289	0193	0393		0810	0317	0921	0114
	0294	0441	0581	0465		0131	1733	1736	0365
Strato	0067	0586	0294	0039		0103	0226	1566	0783
Strong	1193	1179	1067	0067		0736	0067	0586	0516
	0586					0744	0520	1586	0376
Stylandia	0247				Telefusion	0067	0586		
Sunic Line	0067	0586			Telemeister	0350	0067	0586	
Sunstar	0401	0067	0586	0039	Telesonic	0067	0586		
	0294				Telesar	0039	0067	0586	0442
Sunwatt	0485				Teletech	0067	0586	0698	0039
Sunwood	0067	0586	0039			0277	0367	1067	
Superla	0546	0246	0247		Teleton	0247	0305	0236	0193
Supersonic	0039	0238	0586	0728		0379	0289	0216	0066
	0294	0485	0067			0393			
SuperTech	0039	0067	0586	0246	Televideon	0350	0582	0193	0246
	0248				Televiow	0067	0586		
Superton	0461				Telexa	0132			
Supervision	0728	0294			Tempest	0039	0067	0586	0294
Supra	0208	0404	0039	0067	Tensai	0134	0248	0067	0586
Susumu	0365	0248	0317			0247	0324	0350	0039
Sutron	0039					0135	0404	0401	0407
SVA	0728	0294	0485	0238		0277	0745	0193	1067
	0736				Tenson	0350	0039		
Svasa	0728	0238	0736	0294	Tesla	0067			
Swedx	1636				Tevion	1278	1289	1220	1586
Sydney	0246	0247				0838	0895		
Sylvania	0216				Textet	0247	0404	0039	0246
Sysline	0067	0586				0248			
Sytong	0246				Thomson	0655	0590	0373	0317
T+A	0477					0139	0501	0365	0226
Tandberg	0397	0441	0139	0367		0267	0067	0586	0520
	0226	0392	0391	0193		0379	0246	0582	1618
Tandy	0248	0102	0247	0277	Thorn	0138	0139	0255	0373
	0123	0193				0391	1535	1040	0565
Targa	1401	0648				0102	0041	0066	0073
Tatung	1586	1086	0067	1583		0075	0100	0131	0386
	0586	0102	0546	0247	Thorn-Ferguson	0134	0138	0139	0220
	0041	0659	1938	1401		0222	0268	0391	0529
	1289	1278	1221	1593		0365	0103	0065	
	1402				TMK	0208	0207		
TCL	1729				Tobishi	0248			
TCM	0744	1319	0838		Tokyo	0246	0065	0478	0333
Teac	0728	0067	1067	0586	Tongtel	0810	0617		
	0542	0742	0698	0485	Top Show	0728	0803	0448	0039
	0247	0736	0294	1939		0294	0736		
	0208	0039	0442	0379	Topline	1067	0698		
	0751	0312	0366	0448	Toshiba	0538	0090	1538	0065
	0461	0785	0200	0744		1319	0066	0100	0132
	1179	1785	1233	1036		0744	0271	0247	0139
	1651	1559	1393	0617		0520	0225	0221	0648
	1800	1739				1938	0039	0728	0067
						1194	0862	1193	1586
						0680	1734	1612	

Towada	0379	0132	0344	0247
	0582			
Toyoda	0039	0401	0294	
Trakton	0039	0294	0247	
Transonic	0067	0586	0485	0617
	0542	0294	0728	0742
	0448	0039	1393	
Triad	0067	0586	0248	0039
Trical	0187			
Trident	0546	0247		
Trio	1593	1583	1278	
Tristar	0294	0248		
TVTEXT 95	0586			
Uher	0067	0586	0236	0350
	0333	0404	0448	0516
	0400	0289	0510	
Ultravox	0117	0132	0404	0277
	0246	0582	0193	0344
	0067	0586		
Unic Line	0067	0586	0503	0485
	0379			
United	0744	0067	0745	0586
	1938	1067	0617	2012
Univox	0067	0586	0367	0117
	0193	0268		
Utax	0193			
V7 Videoseven	1785	0208	0910	1406
	1247	1696	0648	1681
	1535			
Vestel	0067	0582	0193	0247
	0586	0698	1067	1193
	1615			
Vexa	0039	0067	0586	
Victor	0683			
Videologic	0248	0246		
VideoSystem	0067	0586		
Videoton	0386	0193	0461	0520
Vidikron	0132	0703	0765	
Vidtech	0066	0208		
Viewpia	0906			
ViewSonic	1608	1785	1360	1618
Viper	0367			
Visiola	0246			
Vision	0067	0294	0586	0350
	0518	0247		
Vistar	0236	0391		
Vortec	0067	0586		
Voxson	0117	0067	0586	0393
	0448	0193	0208	
Vue	1600			
Waltham	0247	0386	0448	0317
	0415	0067	0586	0698
	0139	1067	0461	0520
	0193	0473		
Wards	0209			
Watson	1067	1278	1289	0350
	0586	0067	0193	0039
	0698	0248	0424	1938
	1406	0357		
Watt Radio	0132	0379	0582	0193
	0246	0344		
Wega	0067	0586	0066	0117
Wegavox	0039	0067	0586	
Weltblick	0067	0586	0350	0247
Weltstar	1067			
Weston	0067	0586		
Wharfedale	0926	0921	0728	0736
White Westinghouse			0350	0246
	0067	0586	0367	1939
Wilson	0586			
Windstar	0312	0367		
Windy Sam	0586			
Wintel	0744	1036		
Worldview	0485	0075		

XLogic	0728			
XMS	1471			
Xrypton	0067	0586		
X-View	1221			
Yamada	1370			
Yamaha	0680	0827	1556	1606
Yokan	0067	0586		
Yoko	0247	0067	0586	0248
	0294	0039	0461	0451
	0400	0369	0246	0277
	0403			
Yorx	0248			
Zanussi	0236	0393	0247	
Zenith	1939			

DVD/VCR

3 Plus	0520			
3D LAB	0569	1579		
4Kus	1188			
Acoustic Solutions	0760	0743	1272	1258
AFK	1228	1258	1182	1953
	1081			
Afreey	0728			
Aim	0808	1195	1207	0729
	0702	0820		
Aiwa	0671	0725	0899	0563
	1273	2050	2073	
Akai	0820	0809	0818	1145
	0928	0796	0746	0914
	0743	0882	0735	2005
	1119	1425	1725	1263
	1721	1587		
Akashi	0868			
AKI	1035			
Akira	1650	0729	0808	1351
Amitech	0152			
Amoi	0882			
Amoisonic	0794			
Amstrad	1181	1397	1601	1695
AMW	0902			
Apex Digital	0702	0829	1086	1284
Arianet	0923			
Aristona	0569	0676		
ASCOMTEC	1953			
ATD	0911			
Atlantis Land	0828			
Audiosonic	1670	1953	1557	
Audioworld	0820			
Autovox	0743			
Auvio	0873	1120		
Auvion	1518			
AWA	0760	0902	1693	1585
	0152			
Base	1481	2118		
Bellagio	0902	1275	1034	
Binatone	1953			
Biostek	1035			
Black Diamond	0743	0796	0914	1371
	0863			
Blaupunkt	0747			
Blu:sens	1519	1263	1351	
Blue Sky	0743	0729	0725	0834
	0702	0873	0808	0681
	0820	0914		
BlueTinum	1203			
Bose	2053			
Brainwave	0800	1145	1265	
Brandt	0681	0581	0533	
Cambridge Audio	1139	1114	0781	0726

Cambridge					Enzer	0695	1258	0796	1035
Soundworks	0726					1390	0800		
CAT	0729	1844			EuroLine	1145			
Celestial	0702	1050			Ferguson	0681	1760	0928	0743
Celestron	2005					0914			
Centrex	0702	1034	1945		Finlux	0800	0813	0702	0781
Centrum	0743	0819	0809	0923		1177	1195	1914	0706
	2024	1035	1953	1535		0292			
	0705				Firstline	0829	0899	0681	1560
CineVision	0906				Funai	0725	0705		
CJ Digital	2203				Futronic	0923	1035		
Classic	0760	1947	1760		GE	0747			
Clayton	0743				Giec	1251			
Coby	0808	0760	1137	0882	Global Link	1254			
Conia	0702	0882	1660	0794	Global Solutions	0798	1182		
	0546	1155	1351		Go Video	0813			
C-Tech	0828	0798	1182		GoldStar	0621	0771		
Cybercom	0861				Goodmans	1034			
CyberHome	0744	0846	1053		GP Audio	1170			
Daewoo	0862	0863	1513	0735	Graetz	0695			
	0800	0744	1948	1466	Gran Prix	0861	0928		
	0902	1171	1871	1471	Grundig	0805	0569	0735	0700
	0808	1102	1693			0753	2076	1034	1760
Dansai	0800	0777	0813	1145		1950	1466	1513	1862
	1725					1207			
Daytek	0902	1035			Grunkel	0800	1186	0861	
Dayton	0902				GVA	1689			
DEC	0808	0729	0848	1720	H&B	0848	0743	0871	0880
Denon	0664	1664	1874	0520		1263	1265	1451	0152
Denver	0808	0729	0818	0928	Haaz	0798	0781		
	0848	1137	1351	1445	Haier	0873	1120		
	1480	1953	1086	1871	Harman/Kardon	0732			
	1295	0702	1207		HCM	0818			
Denzel	0695				HDT	0735			
Diamond	0681	0798	0781	0808	Henß	0743			
	1186	0753	0820	1182	Hicon	0702			
	0800	1145			Highlander	1254			
Digihome	0743				Himage	0855	1119		
digiRED	0747				HiMAX	0887	0873		
Digital i	0923				Hitachi	0694	0809	1950	2024
Digitech	1862					0695	0603	0887	0743
Digitor	0157	1035	0681			1865	1778	0171	0914
Digitrex	1945	0702	1086	1034	Hiteker	0702	1953		
Disney	1253	0861			Höher	1034			
DiViDo	0735				Home Electronics	0800			
DK digital	0861	1140	0870	1276	HYD	1263			
	1284	1587			Hyundai	0813	0880	1186	1258
DL	0883					2076	1557	0818	0798
DMTECH	0813	0820	2076	1301		1182	2142		
	1541	1102			ICP	1182			
Dragon	0861				Ingelen	0818			
DSE	1760	0863	1182	1427	Inotech	0624			
	1425	1859	1557	0152	Jamo	1066			
	0705				Jay-tech	1265			
Dual	0861	0743	0695	0681	JBL	0732	1956		
	0760	0813	0809	0820	JDB	0760			
	1053	1466	1560	0914	Jeutech	0796			
Durabrand	0861	0743	1693		JNC	1301			
D-Vision	1145	1397	1521	1203	JNL	0765			
DVX	0798	1862	1182		Jocel	0810			
EagleTec	0744				JVC	0653	0588	1931	1970
eBench	1182					1194	0569	0533	0668
Ecco	1585					0897	1271	1890	1893
Eclipse	0753	0781			Karcher	1397			
Electrohome	0800				Kendo	0743	0729	0861	0702
Elin	0800					1377			
Ellion	0880	1451	0152		Kenwood	0564	0520		
Elta	0800	0818	0820	2021	Kiss	0871	1553	0695	0426
	1145	1181	1140	1263	Koda	0848			
	1081	1203	1689	2203	Koss	0681			
Eltax	1351	2017			Kotron	0909			
Emerson	0621	0735	0899		KXD	0887	1351	1953	
Encore	0728				Labway	0561			
					Lasonic	0828			

Lawson	0735	0746	0798	1182	Optimus	0601	0555		
Lenco	0729	0681	0800	0808	Orion	0725	1158	1725	1036
	0848	0743	0861	1195		1263	1449	0928	
	1535	0618	1207		Oritron	0681			
Lenoxx	2044	0868	1035	1953	OTIC	1371			
LG	0771	1920	1936	0899	P&B	0848	1481		
	2032	0621			Pacific	1182	0798	0789	0834
Lifetec	0681	0861	1377			0743	0861		
Limit	0746	1182	0798		Packard Bell	0861			
LiteOn	1188	1446	1088	1768	Palladium	0725	0809	0743	
	1674				Palsonic	0702	0882	1086	1584
Loewe	0569	0771				2094	0863		
Logic3	0802				Panasonic	0520	1864	1938	1935
Logik	0743	0914	1862			0662	1937	1040	1041
Logix	0735	0813				1609	1668		
Lumatron	0735	1145	0771	0863	Panda	0747			
	1351	0743	0760	0928	Papouw	0563			
	1862				Paramount Pictures			0809	
Luxman	0603	1121	2136		peekTON	1070	1254	0928	
Magnavox	0533	0848	1170	0705	Philips	0569	0676	1370	1384
	0569	1207	0743	1251		0915	1941	0705	1536
	1384					1842	1843	2086	0533
Magnum	2044	1466	1535			1188	0701	1876	2079
Manhattan	0735	0743				2123			
Marantz	0569				Phocus	1722			
Marquant	1481				Phonotrend	0729	1195	1871	1207
Master-G	1186				Pioneer	0601	1995	0661	0555
Matsui	0681	0725	1760			0668	1930	1932	0662
Maxdorf	0818					1841	1601	1490	
Maxim	0855	0743	1272	1425	Plu2	0880			
	1397				Pointer	0800			
Maya	1375				Portland	0800			
MDS	0729	0808			Powerpoint	0883	0810	1670	
Mebeteck	0592				Prima	1258	1472		
Medialine	1301				Pro2	1302	1375		
Medion	0861	0813	1377	0681	ProCaster	1034			
	0746	0788	1375	0909	Proline	0681	0702	0820	1034
	0660	2042	1120	1195		1513	0863	1945	1768
	1036	1579	1446	1674		2119			
MEI	0820				Proscan	0552			
Memorex	0861				Prosonic	0729	1137	0782	1953
MICO	0753	0781	1251	1253		1471			
	1209	1284			Provision	0729	0848	1193	1953
Micromaxx	1725	0725	1377			1351	1137	0760	1207
Micromedia	0533	0569				1302			
Micromega	0569				Pye	0676	0569		
Microsoft	0552	1738			Raite	0695			
Microstar	0861				Rank Arena	0810	1209		
Minerva	0735				RCA	0552	0681		
Minowa	1195				REC	0796	0520		
Mitsubishi	0743				Redbell	1535			
Mizuda	0887				Relisys	1377	2121		
Monyka	0695				Revoy	0729	0871		
Multitec	1397				Ritech	1390			
Mustek	0760	1760			Roadstar	0729	0743	0848	1069
Mx Onda	2010					0760	1081	0928	0863
Myryad	1284					2044	1859	1959	1257
NAD	0771	1857				1207	1862		
Naiko	0800	1034			Rocksonic	0819			
NEC	0899	0621	1948	0771	Ronin	0902			
Neovia	1301	2005			Rotel	0653	0588		
Nevir	0861	0800	0702		Rowa	0789	1034	0546	0555
Nikenny	1119					0747			
Nikkei	1284				S&V	1195			
Nintaus	0823	1081			Saba	0681	0581		
Noriko	0782				Sabaki	0828	0798		
Nowa	0873				Sakyno	1182	0798		
NU-TEC	0546	1258	1472	0624	Salora	0771			
Omni	0728	0870	0729	0808	Sampo	0728	0782	1377	
	0863	1095	1134	1862	Samsung	0603	0774	1962	0850
	1258	2135	2118			1105	1966	2038	0520
Onix	0868					1603	1665	1778	0328
Onkyo	0657	0533	1799			2137	2143		
Oopla	1188								

Sansui	0725	0746	0798	0800	Teac	0747	0771	0820	0546
	1182	0753	0781	1258		0601	0798	0788	1036
	1371	0881	1579	1862		1182	0765	0621	0789
	1914	1725	2017	1859		1959	0863	1966	0680
	0152	1081	1145	0793		1257	1195	0705	1254
Sanyo	0700	1471	0862	0725		1258	1689	2142	
	0820	0903	0743	1258	Technica	1203	1397		
SAST	0836				Technics	0520	1935	1937	1938
Scan	0735	0880			Technika	0800	1145	0861	1195
ScanSonic	0887					1519	0157	1182	
SCE	0819				Techwood	0743	1560	0569	2024
Schaub Lorenz	1195				Tedalex	1034	0798	0800	1182
Schneider	0813	0861	0809	0569	Telefunken	0820	0819	0818	1258
	0735	0834	0818	0743		1953	1862	1720	0680
	0681	0899	0820	1183		0863	1513	1145	0788
	1914	1397	0676	1535		0800	0624	1375	1585
	0292	1257			Tensai	0681	0800		
Scientific Labs	0798	1182			TerraTec	0855			
Scott	0810	0681	0702	0911	Tevion	0681	0828	1451	1182
	0883	1066	2044	1263		0798	1959	2044	1257
	1660					0863	1377	1760	1660
SEG	0743	0695	0798	1182	Theta Digital	0601			
	0828	0914	0902	0793	Thomson	0581	0552	0147	1284
	2024	2005	1560	1203		2010			
	1513				Tokai	0695	0728	0818	
Sharp	0660	0782	0743	0725	Tokaido	0728			
	2045	1286	1449	2054	Tom-Tec	0863			
					Tongtel	0794			
Sherwood	0747	0771			Toshiba	0533	0788	1075	1540
Shinco	0747					2036	1667	1799	
SilverCrest	1182	1398	0798	0156	Transonic	0702	1195	1469	
	0161				Tredex	0829	0873		
Singer	0746	0753	0781	0798	Trio	0800			
	1182				TruVision	0887	1481		
Sinotec	0794	0800	1145		Umax	0561	1181		
Sky	0152				United	0818	0760	0820	1258
Skymaster	0760	0798	1182			0702	1371	1195	0725
Skysonic	0796					1145	0729	0798	1263
Skyworth	0928	0796				1203	1519	1585	0743
Sliding	1145					0914	1182	1862	1397
Slim Art	0800					2021	0705	1689	1102
Slim Devices	0563				Universal	1588			
SM Electronic	0760	0798			Universal				
Smart	0735	0743			Multimedia	0798	1182		
Sogo	0883				Venturer	0820			
Sonashi	0746	0861			Vestel	0743			
Soniq	1689				Viewmaster	1114	0892	1254	
Sony	0563	1100	2011	1663	Voxson	0760	0861		
	2050	1933	0894	0802	VTrek	1258			
	1964	1063	1099	1047	Walkvision	0747	1069	0618	
	2073	1897	1566	1854	Welkin	0861			
	2162				Welltech	1251			
Soundmax	0798	1182			Weltstar	0743			
Soundwave	0813				Wharfedale	0798	1862	0820	1182
Spectra	0902					0800			
Standard	0681	1182	0798	0818	Wilson	0861	1263		
	0861	0928			Windy Sam	0603			
Star Clusters	0798	1257	1182	0828	Wintel	1160			
Star Sound	1472				Wistar	1469			
StarLogic	1035				Woxter	1181	0911	1254	1521
Strong	0743				XBox	0552			
Sunfly	0887				XLogic	1862	0911	0800	0798
Sunstech	0861	1102	1650			1182	0828	1258	1445
Supervision	0760	0798			XMS	0818	1352	0800	
Supratech	0923				Xwave	0561			
SVA	0702	0782			Yakumo	1034	1086		
Symphonic	0705				Yamada	1034	0902	1181	1446
T.D.E. Systems	1186					1086	1519	1188	1521
Tangent	2017	1351			Yamaha	0569	0676	0847	0520
Targa	1188	1674	2106			1188			
					Yamakawa	1579			
					Yukai	0760	1947		
					Zenith	0533	0621	0771	
					Zeus	0881			



706997
URC-6025-R01-04

UIM-01Q68-TNZA-B
RDN-1160608