

Code Lists 10820N

Audio

Amplifier

Adcom	0577, 1100
Bel Canto Design	1583
Bose	0674
Classe	1461, 1462
Durabrand	1561
GE	0078
Harman/Kardon	0892
JVC	0331
Left Coast	0892
Lenoxx	1561
Marantz	0892, 0321
Mark Levinson	1483
Nakamichi	0321
NEC	0264
Optimus	0395
Panasonic	0521
Parasound	0246
Philips	0892
Polk Audio	0892
Realistic	0390
Sansui	0321
Shure	0264
Sony	0669, 0815
Soundesign	0078
Technics	0521
Victor	0331
Wards	0078
Yamaha	0354, 0133

Receiver

ADC	0531
Adcom	0616
Aiwa	1405, 0121, 1388, 1641
Akai	1512
Alco	1390
Anam	1609, 1074
Apex Digital	1257, 1774
Audiotronic	1189
Audiovox	1390
B & K	0820
Bose	1229, 0639, 1253, 1629, 1933
Cambridge Soundworks	1370
Capetronic	0531
Carver	1189
Coby	1389
Daewoo	1250
Denon	1360, 1142, 2857
Fisher	1801
Gateway	1517
Harman/Kardon	0110, 0891, 1304, 1306, 2241
Hitachi	1801
iLive	2013
Insignia	1030, 1077, 1893, 2169, 2175
Integra	1298, 1320, 1805
iSymphony	2258
JBL	0110, 1306
JVC	1374, 1495, 2239, 2331
Kenwood	1313, 1570, 1569
KLH	1390, 1412, 1428
LG	1293, 2197
Magnavox	1189, 1269, 0531, 1514
Marantz	1189, 1269, 1289
MCS	0346
Mitsubishi	1393
Nakamichi	0097
Norcent	1389
Nova	
Onkyo	0842, 1298, 1320, 1531, 1805
Optimus	1023, 0531, 1074
Panasonic	1308, 1518, 1275, 1288, 1316, 1548, 1633, 1763, 1764, 2967
Philips	1189, 1269, 1266, 2311
Pioneer	1023, 0014, 0150, 0531, 0630, 1384, 1935
Polaroid	1508
Polk Audio	1289
Proscan	1254
RCA	1023, 1609, 1254, 0346, 0531, 1074, 1390, 1511, 2041
Rio	1869
Samsung	1295, 1500, 1868

Sansui	0346
Sanyo	1469, 1801
Sherwood	1077, 1517, 1653, 1905, 2169
Sherwood Newcastle	2169
Sonic Blue	1869
Sony	1759, 1058, 1441, 1258, 1622, 1558, 1658, 1758, 1822, 1858, 2172
Stereophonics	1023
Sunfire	1313
Teac	1074, 1390
Technics	1308, 1518
Thorens	1189
Venturer	1390
Vizio	1517
Wards	0014
Yamaha	0176, 1176, 1276, 1331, 1375, 1376, 1476, 2061
Zenith	0857, 1293

CD Players

Aiwa	0157
Burmester	0420
California Audio Labs	0029, 0303
Carver	0157, 0179
Classic	1297
Denon	0003
DKK	0000
DMX Electronics	0157
Emerson	0305
Fisher	0179, 1325
Garrard	0393, 0420
Genexxa	0032, 0305
GPX	1296
Harman/Kardon	0157, 0173, 1202
Hitachi	0032
Integra	0101
JVC	0072, 1294
Kenwood	0626, 0028, 0037, 0190
KLH	1318
Koss	1317
Krell	0157
LG	1208
Lion	0157
LXI	0305
Magnavox	0157, 0305
Marantz	0626, 0029, 0157, 0180
Mark Levinson	1484
MCS	0029
Miro	0000
Mission	0157

MTC	0420
NAD	1208
NSM	0157
Onkyo	0101
Optimus	0000, 0032, 0037, 0087, 0145, 0179, 0305, 0420, 0468
Panasonic	0029, 0303, 0752
Parasound	0420
Philips	0626, 0157
Pioneer	1062, 0032, 1087, 0305, 0468
Polk Audio	0157
Proton	0157
QED	0157
Quad	0157
Quasar	0029
RCA	1062, 0032, 0053, 0179, 0305, 0420, 0468, 0704
Realistic	0179, 0180, 0420
Rotel	0157, 0420
SAE	0157
Sansui	0157, 0305
Sanyo	0087, 0179
Scott	0305
Sears	0305
Sharp	0037, 0180
Sherwood	0180
Sonic Frontiers	0157
Sony	0490, 0000, 0100, 1364, 0185
Soundesign	0145
Symphonic	0305
TAG McLaren	0157
Tascam	0420
TDK	1208
Teac	0180, 0393, 0420
Technics	0029, 0303
Tivoli Audio	1553
Victor	0072
Wards	0157, 0053
Yamaha	0490, 0036, 0187, 1292

CD Recorders

Classic	1297
Fisher	1325
GPX	1296
Harman/Kardon	1202
JVC	1294
Kenwood	0626
LG	1208
Marantz	0626
NAD	1208
Philips	0626
Pioneer	1062, 1087
RCA	0053, 0420
Sony	0000, 0100, 1364
TDK	1208
Teac	0420
Yamaha	1292

Audio Accessories

Accurian	1106
Altec Lansing	0607
Apple	1115
DLO	1155
GPX	2113
Griffin	1891
iDeck	1106
iHome	2152
iLive	2113
Memorex	2119
Monitor Audio	1106
Polk Audio	2228
Roku	1828
Yamaha	2021

Media Centers

ABS	1272
Alienware	1272
Apple	1115
CyberPower	1272
Gateway	1272
Hewlett Packard	1272
Howard Computers	1272
HP	1272
Hush	1272
iBUYPOWER	1272
Linksys	1272
Media Center PC	1272
Microsoft	2049, 1272
Mind	1272
Niveus Media	1272
Northgate	1272
Ricavision	1272
Sony	1272, 1324
Stack 9	1272
Systemax	1272
Tagar Systems	1272
Toshiba	1272
Touch	1272
Viewsonic	1272
Voodoo	1272
Xbox	2049
ZT Group	1272

Controlled by VCR

CyberPower	1972
Gateway	1972
Hewlett Packard	1972
iBUYPOWER	1972
Microsoft	1972
Northgate	1972
Tagar Systems	1972
Touch	1972

DTV Converters

Access HD	2185
Airlink 101	2491
Alpha Digital	2185
AMTC	2189
Apex Digital	2478

Artec	2490
ASTi	2305
Channel Master	2365
Coship	2487
Daewoo	2338
Daytek	2305
Digital Stream	2303
Dish Network System	2470
Echostar	2470
Evolution	2479
GE	2380, 2450
Goodmind	2490
Gridlink	2348
Insignia	1415
Lasonic	2348
Magnavox	1563
Memorex	2486
MicroGEM	2489
Philco	1563
RCA	2325, 2454
Sansonic	2348
Sylvania	1563
Tivax	2185
Ventura	2454
Venturer	2454
Winegard	2454
Zenith	1415
Zentech	2491
Zinwell	2488

Video Accessories

2Wire	2045
ABS	1272
Access HD	2185
ADB	2254, 2586
Airlink 101	2491
Alienware	1272
Alpha Digital	2189
Amino	1481, 2482
AMTC	2185
Apex Digital	2478
Artec	2480
AT&T	0858, 2049
CASTi	2305
Channel Master	2365
Cisco	2345
Coship	2487
CyberPower	1272
Daewoo	2338

Daytek	2309
Digital Stream	2303
Dish Network System	2470
Echostar	2470
Entone	2302
Epson	1563
Evolution	2479
Gateway	1272
GE	2360, 2450
Goodmind	2450
Gridlink	2348
Hewlett Packard	1272, 1267
Howard Computers	1272
HP	1272
Hush	1272
iBUYPOWER	1272
Insignia	1415
KoolConnect	1481
Lasonic	2348
LG	1415
Linksys	1272
Magnavox	1563
Media Center PC	1272
Memorex	2486
MicroGEM	2489
Microsoft	2049, 1272
Mind	1272
Motorola	1988, 0858, 1363, 2378
Niveus Media	1272
Northgate	1272
Panasonic	1120
Philco	1563
Pioneer	1010
Popcorn Hour	2260
RCA	2325, 2454
Ricavision	1272
Roku	1486, 2371
Samsung	1190, 1490
Sansonic	2348
Scientific Atlanta	0858, 2345
Sharp	1010
Sony	1272, 1324, 1364
Stack 9	1272
SureWest	1481
Sylvania	1563
Systemax	1272
Tagar Systems	1272
Tivax	2185
Toshiba	1272
Touch	1272

Ventura	2454
Venturer	2454
Verizon	2378
Viewsonic	1272
Voodoo	1272
Vudu	2298
Winegard	2454
Xbox	2049
Zenith	1415
Zentech	2491
Zinwell	2488
ZT Group	1272

Home Automation

Accutek	1215
Amana	1716
Bonaire	0846, 1215, 1861
Frigidaire	1333
GE	0240
GoldStar	1537
Holmes	1215
Kenmore	1537
Lasko	0546, 1890
LG	1537
Lightolier	0184, 1204, 1205, 1206
LiteTouch	0054
Lutron	0597, 0318, 1239, 1997
One For All	0167
PCS	0154, 1204, 1205, 1206
RadioShack	0240
Royal Sovereign	1651
Russound	1232, 1233, 1413
Security System	0167
Sharper Image	0846
SmartLinc	0154, 1204, 1205, 1206
Universal X10	0167
Whirlpool	1332
Windmere	1215
X10	0167, 2267

Cable

Amino	1602, 1822
Bright House	1376, 1877
Cable One	1376, 1877
Cablevision	1376, 1877
Charter	1376, 1877, 2187
Cisco	1877, 0877, 1982
Comcast	1376, 1877, 1982
Cox	1376, 1877
Digeo	1187, 2187
Director	0476
General Instrument	0476
Homecast	2301
i3 Micro	1602
Insight	1376, 1877
Jerrold	0476
Mediacom	1376, 1877
Motorola	1376, 0476, 1187, 1106, 1951
MTS	1951
Myrio	1602, 1822
Pace	1977, 0237
Panasonic	1982
Philips	1305
Pioneer	1977, 0877
RCA	1296
Scientific Atlanta	1877, 0877
Sejin	1602
Suddenlink	1376, 1877
Thomson	1296
Time Warner	1376, 1877, 2187

Cable-PVR (DVR) Combos

Amino	1822
Bright House	1376, 1877
Cable One	1376, 1877
Cablevision	1376, 1877
Charter	1376, 1877, 2187
Cisco	1877, 1882
Comcast	1376, 1877, 1882
Cox	1376, 1877
Digeo	1187, 2187
Homecast	2301
Insight	1376, 1877
Mediacom	1376, 1877
Motorola	1376, 1187, 1106
Myrio	1822
Pace	1877, 0237

Panasonic	1982
Pioneer	1877
RCA	1256
Scientific Atlanta	1877
Suddenlink	1376, 1877
Thomson	1256
Time Warner	1376, 1877, 2187

Satellite

Bell ExpressVu	0775
DirecTV	1377, 0392, 0566, 0639, 1142, 0247, 0749, 1749, 1856, 1076, 1442, 1609
Dish Network System	0775, 1505, 1775
Dishpro	0775, 1505, 1775
Echostar	0775, 1505, 1775
Expressvu	0775, 1775
GE	0566
General Instrument	0869
GOI	0775, 1775
HTS	0775, 1775
Hughes Network Systems	1142, 0749, 1749, 1442
JVC	0775, 1775
Mitsubishi	0749
Motorola	0869
Next Level	0869
Panasonic	0247, 0701
Philips	1142, 0749, 1749, 1076, 1442
Proscan	0392, 0566
RadioShack	0869
RCA	0566, 0855, 0143
Samsung	1377, 1276, 1442, 1609
Sony	0639
Star Choice	0869
Tivo	1142, 1442
Toshiba	0749, 1749, 0790
Voom	0869
Zenith	1856

Satellite-PVR (DVR) Combos Controlled by CBL or SAT key

Echostar	0775, 1505, 1170
Expressvu	0775
Hughes Network Systems	1142, 1443, 1539, 1442, 1538, 1444
JVC	1170
Philips	1142, 1442
Proscan	0392

RCA	1392
Sony	0639, 1640

Controlled by VCR

Eurol	1962
RCA	1964
Echostar	1944, 1943, 1946, 1945
Expressvu	1944
Hughes Network Systems	0745, 1949, 0740, 1240, 0739, 1239
Hyundai	1951
JVC	1945
Philips	1949, 0739
Proscan	1954
RCA	1989
Sony	1956, 1957

TVs

Admiral	0093, 0463
Advent	0761, 0783, 0815, 0817, 1933
Aiko	0092
Akai	0812, 1675, 0702, 0672, 1935, 2078, 2232
Albatron	0700, 0843
America Action	0180
Anam	0180
AOC	1365, 2014
Apex Digital	0748, 0879, 0765, 1943
Audiovox	0451, 0180, 0092, 0623, 0802, 0846, 0875, 1937, 1951, 1952
Aventura	0171
Axion	1937
Bell & Howell	0154, 0016
BenQ	1032, 1315
Bradford	0180
Broksonic	0236, 0463, 1929, 1935
Byd:sign	1309
Candle	0056
Carver	0054
Celebrity	0000
Celera	0765
Changhong	0765
Citizen	0060, 0092, 0056, 1928, 1935
Clarion	0180
Coby	2017
Commercial Solutions	1447, 0047
Concerto	0056
Contec	0180
Craig	0180
Crosley	0054
Crown	0180
Curtis Mathes	0047, 0054, 0154, 0451, 0093, 0060, 0702, 0145, 0166, 0016, 0056, 1147, 1347
CXC	0180
Cytron	1326
Daewoo	0451, 0092, 1661, 0623, 0661, 0672, 1928
Dell	1264, 1080, 1178, 1403, 1863
Denon	0145
Diamond Vision	1997
Digital Lifestyles	1765
DirecTV	1501
Dumont	0017
Durabrand	0463, 0180, 0178, 0171, 1034
Dynex	1463, 1810, 2049, 2184
Electroband	0000
Electrograph	1755
Electrohome	0463
Element	1687

Emerson	1864, 0154, 0236, 0403, 0180, 0178, 0171, 0623, 1394, 1928, 1929, 1944, 1963
Emprex	1422, 1765
Envision	0813, 1365, 2014
Epson	0833
ESA	0812, 0171, 1944, 1963
Fisher	0154, 0159
Fujitsu	0809, 0683, 0853, 2008
Funai	0180, 0171, 1271, 1963
Futuretech	0180
Gateway	1755, 1001, 1002, 1003, 1756
GE	1447, 0047, 0051, 0451, 0178, 0021, 1347, 1917, 1922
GFM	0171, 1963, 2167
Gibraltar	0017
Go Video	0886
GoldStar	0178, 1926
Grunpy	0180
Haier	1034, 1748, 1749, 1753
Hallmark	0178
Hannspree	1745
Harman/Kardon	0054
Harvard	0180
Havermy	0093
Helios	0865
Hello Kitty	0451
Hewlett Packard	1494, 1502
Hisense	0748
Hitachi	1643, 1145, 0145, 0016, 0056
HP	1494, 1502
Humax	1501
Hyundai	0849
I-Inc	1746
iLo	1286, 1603, 1684, 1990
Infinity	0054
Initial	1603, 1990
Insignia	1564, 0171, 1204, 1326, 1517, 1641, 1710, 1963, 2002, 2049,
2088	
Inteq	0017
iRIS	2189
JBL	0054
JCB	0000
Jensen	0761, 0815, 0817, 1933
JVC	0053, 0731, 1253, 1601, 1774, 1923, 2271
KDS	1498, 1687
KEC	0180
KLH	0765
KTV	0180
LG	1423, 1265, 0178, 0700, 0856, 1178, 1768, 0067
Logik	0016
Luxman	0056

LXI	0047, 0054, 0154, 0156, 0178
MAG	1498, 1687
Magnasonic	1928
Magnavox	1454, 1866, 0054, 0096, 0802, 1198, 1254, 1365, 1931, 1944, 1963, 1990
Majestic	0016
Marantz	0054, 0704, 0855
Matsushita	0250, 0650
Maxent	1755, 1211, 1757
Megapower	0700
Megatron	0178, 0145
Memorex	0154, 0463, 0150, 0178, 0016, 1924, 1926, 1927
MGA	0150, 0178
Midland	0047, 0017, 0051
Mintek	1603, 1990
Minutz	0021
Mitsubishi	1250, 0093, 0150, 0178, 0836, 0868, 1917
Monivision	0700, 0843
Motorola	0093
MTC	0060, 0056
Multitech	0180
NAD	0156, 0178, 0056, 0866, 1156
NEC	0056, 0882, 1704, 1797
NetTV	1755
Nexus Electronics	2183
Nikko	0178, 0092
Norcent	0748, 0824, 1365
Norwood Micro	1286
NTC	0092
NuVision	1657, 2158
Olevia	1610, 1144, 1240, 1331
Onwa	0180
Optimus	0250, 0154, 0166, 06S0, 1924, 1927
Optoma	2161
Optonica	0093
Orion	0236, 0463, 1463, 1929
Panasonic	0250, 1480, 0051, 0650, 1291, 1410, 1924, 1927, 1941, 1946, 1947
PARK	2194, 2202
Penney	0047, 0156, 0051, 0060, 0178, 0021, 1347, 1926
Petters	1523
Philco	0054, 0096
Philips	1454, 0054, 0690, 1744, 1867
Pioneer	1457, 0166, 0679, 0866, 1260
Polaroid	1523, 0769, 0865, 1276, 1286, 1314, 1326, 1328, 1341, 1498, 1687, 1766, 2002, 2121
Portland	0092
Prima	0761, 0783, 0815, 0817, 1933
Princeton	0700

Prism	0051
Proscan	1447, 0047, 1347, 1922, 2147, 2256
Proton	0178
Proview	1498, 1687
Pulsar	0017
Quasar	0290, 0051, 0650, 1924
RadioShack	0047, 0154, 0180, 0178, 0056
RCA	1547, 1447, 0047, 2247, 2187, 2002, 1958, 1953, 1948, 1922,
1917,	1781, 1347, 1247, 1147, 1047, 0679
Realistic	0154, 0180, 0178, 0096
Runco	0017
Sampo	1755
Samsung	0812, 0060, 0702, 0178, 0056, 0766, 0814, 1060
Sansui	0463, 1929, 1935
Sanyo	0154, 0159, 0799, 1142
Sceptre	1599
Scotch	0178
Scott	0236, 0180, 0178, 1711
Sears	0047, 0054, 0154, 0156, 0178, 0171, 0056, 0159, 1926
Sharp	0818, 0093, 0491, 0851, 1602, 1917
Sheng Chia	0093
Signature	0016
Sony	1100, 0000, 0810, 0834, 1317, 1685, 1791, 1925
Soundesign	0180, 0178
Sova	1952
Soyo	1920, 1746, 1826
Spectroniq	1498, 1687
Squareview	0171
SSS	0180
Starlite	0180
Studio Experience	0843
Superscan	0093, 0864
Supreme	0000
SVA	0748, 0587, 0865, 0870, 0871
Sylvania	1864, 0054, 0171, 0096, 1271, 1314,
	1394, 1866, 1931, 1944, 1963
Symphonic	0180, 0171, 1944
Syntax	1610, 1144, 1240, 1331
Tandy	0093
Tatung	1286, 1756
Technics	0250, 0051
Techview	0847
Techwood	0051, 0056
Teknika	0094, 0180, 0150, 0060, 0092, 0016, 0056
Telefunken	0702, 0056
TMK	0178, 0056
TNCi	0017
Toshiba	1524, 0154, 0156, 1256, 1265, 0060, 0845, 1156, 0832, 0650,
	1306, 1656, 1704, 1918, 1935, 1936, 1945

TruTech	1723, 2066
TVS	0463
US Logic	1286
Victor	0053
Vidikron	0054
Vidtech	0178
Viewsonic	17SS, 0857, 0864, 0885, 1627, 1742, 2014, 2087
Viore	1684
Vistron	2142
Vizio	1758, 0864, 0885, 1796
Wards	0054, 0178, 0016, 0021, 0056, 0096, 0866, 1156
Waycon	0156
Westinghouse	1712, 0885, 0889, 1282, 1577
White Westinghouse	0463, 0623
Wyse	1365
Yamaha	0768, 0833
Zenith	0017, 0465, 1265, 0178, 0092, 0016, 1929

LCD / ACL

Akai	1675, 1935, 2232
AOC	1365, 2014
Audiovox	0180, 0802, 0846, 0875, 1937, 1951, 1952
BenQ	1315
Byd:sign	1309
Citizen	1935
Coby	2017
Dell	1264, 1080, 1178, 1863
Digital Lifestyles	1765
DirecTV	1501
Dynex	2049, 2184
Element	1687
Emerson	1864, 1394, 1963
Emprex	1422, 1765
Envision	0813, 1365, 2014
Funai	0171
GFM	2167
Go Video	0886
Haier	1748, 1749, 1753
Hannspree	1745
Hitachi	1645
Humax	1501
Hyundai	0849
I-Inc	1746
iLo	1286, 1603, 1684, 1990
Initial	1603, 1990
Insignia	1564, 1204, 1517, 1710, 2002, 2049
iRIS	2189
JVC	1601, 1774, 2271
LG	1423, 0856, 1178, 1768

Magnavox	1866, 0802, 1198, 1365, 1990
Marantz	0855
Maxent	1755, 1211, 1757
Mintek	1603, 1990
Mitsubishi	1250
NEC	1797
Nexus Electronics	2183
Norcent	1365
Norwood Micro	1286
NuVision	1657, 2158
Olevia	1610, 1144, 1240, 1331
Panasonic	1480, 0650, 1941
PARK	2194, 2202
Petters	1523
Philips	1454, 1744, 1867
Pioneer	1260
Polaroid	1523, 1276, 1341, 1498, 1687, 1766, 2121
Proscan	2147, 2256
RCA	0047, 1781, 1958, 2187, 2247
Sampo	1755
Samsung	0812, 0766, 0814
Sanyo	1142
Sceptre	1599
Scott	1711
Sharp	0818, 0093, 1602
Sony	0810, 1685, 1791
Soyo	1520, 1746, 1826
Superscan	0864
SVA	0987, 0870, 0871
Sylvania	1884, 0171, 1271, 1314, 1384, 1886
Symphonic	0171
Syntax	1610, 1144, 1240, 1331
Tatung	1286
Techview	0847
Toshiba	1524, 0845, 1656
TruTech	1723
US Logic	1286
Viewsonic	0857, 0864, 0885, 1627, 1742, 2014, 2087
Viore	1684
Vistron	2142
Vizio	1758, 0864, 0885, 1756
Westinghouse	1712, 0885, 0889, 1282, 1577
Wyse	1365
Zenith	1265

Plasma

Akai	0812, 1675, 2078
Albatron	0843
BenQ	1032

Daewoo	0661
Dell	1264, 1863
Electrograph	1755
ESA	0812
Fujitsu	0809, 0683, 0853, 2008
Funai	1271
Gateway	1755, 1001, 1002, 1003, 1756
Haier	1748
Helios	0865
Hewlett Packard	1502
Hitachi	1643
HP	1502
iLo	1684
Insignia	1564
JVC	0731
LG	1423, 0178, 0856
Magnavox	1866
Marantz	0704
Maxent	1755, 1757
Mitsubishi	0836
Monivision	0843
NEC	1704
NetTV	1755
Nexus Electronics	2183
Norcent	0824
Panasonic	0250, 1480, 0650
Philips	0690, 1744
Pioneer	1457, 0679, 1260
Polaroid	0865, 1276, 1328
Sampo	1755
Samsung	0812
Sanyo	1142
Sony	0000, 0810, 1317
Studio Experience	0843
SVA	0865
Sylvania	1271, 1394
Tatung	1756
Toshiba	0650, 1704
Viewsonic	1755
Viore	1684
Vizio	1758, 1756
Zenith	0178

TV/VCR Combos
Controlled by TV key

America Action	0180
Audiovox	0180
Broksonic	1929

Citizen	1928
Daewoo	1928
Emerson	0236, 1928, 1929
GE	1917, 1922
GoldStar	1926
JVC	1923
Magnasonic	1928
Magnavox	1931
Memorex	1924, 1926, 1927
Mitsubishi	1917
Optimus	1924, 1927
Orion	1929
Panasonic	1924, 1927
Penney	1926
Quasar	1924
RCA	1917, 1922
Sansui	1929
Sears	1926
Sony	1925
Sylvania	1931
Toshiba	1918, 1936
Zenith	1929

Controlled by VCR key

Broksonic	1479
Citizen	1278
Curtis Mathes	1035
Daewoo	1278
Emerson	0593, 1278, 1479
Funai	0000
GE	0807, 1035, 1060
GoldStar	1237
Harley Davidson	0000
Hitachi	0000
Lloyd's	0000
Magnasonic	0593, 1278
Magnavox	0000, 0593, 1781
Memorex	0162, 1162, 1237, 1262
Mitsubishi	0807
Optimus	0162, 0593, 1162, 1262
Orion	1479
Panasonic	0162, 1035, 1162, 1262
Penney	1035, 1237
Quasar	0162, 1035, 1162
RadioShack	0000
RCA	0807, 1035, 1060
Samsung	1014
Sansui	0000, 1479
Sears	0000, 1237

Sony	1232, 0000
Sylvania	1781
Symphonic	0000, 0593
Thomas	0000
Toshiba	0845, 1145
Zenith	0000, 1479

VCRs

ABS	1972
Accurian	0000
Admiral	0048
Adventura	0000
Aiwa	0000
Alienware	1972
American High	0035
Broksonic	1479
Canon	0035
Carver	0081
Citizen	1278
Curtis Mathes	0060, 0035, 0162, 1035
CyberPower	1972
Daewoo	1278
Dell	1972
DirecTV	0739
Durabrand	0039
Dynatech	0000
Emerex	0032
Emerson	0000, 0043, 0593, 1278, 1479, 1593
Fuji	0035
Funai	0000, 0593, 1593
Garrard	0000
Gateway	1972
GE	0060, 0035, 0202, 0607, 1035, 1060
GFM	1093
Go Video	0614
GoldStar	1237
Gradiente	0000
Harley Davidson	0000
Harman/Kardon	0081
Headquarter	0046
Hewlett Packard	1972
Hitachi	0000
Howard Computers	1972
HP	1972
Hughes Network Systems	0739
Humax	0739
Hush	1972
iBUYPOWER	1972

Instant Replay	0035
JVC	0067
Kenwood	0067
Kodak	0035
Linksys	1972
Lloyd's	0000
Magnasonic	0593, 1278
Magnavox	0035, 0039, 0081, 0000, 0563, 0593, 1593, 1781
Marantz	0035, 0081
Matsushita	0035, 0162, 1162
Media Center PC	1972
MEI	0035
Memorex	0035, 0162, 0048, 0039, 0000, 0046, 1162, 1237, 1262
MGA	0043
Microsoft	1972
Mind	1972
Mitsubishi	0067, 0043, 0807
Motorola	0035, 0048
MTC	0000
Multitech	0000
NEC	0067
Niveus Media	1972
Northgate	1972
Olympus	0035
Optimus	1062, 0162, 0048, 0593, 1162, 1262
Orion	1479
Panasonic	1062, 0035, 0162, 0614, 0616, 1035, 1162, 1262
Penney	0035, 1035, 1237
Philco	0035
Philips	0739, 0035, 0081, 0618, 1081, 1181
Pioneer	0067
Polk Audio	0081
Presidian	1593
Proscan	0060, 0202, 1060
Pulsar	0039
Quarter	0046
Quartz	0046
Quasar	0035, 0162, 1035, 1162
RadioShack	0000
RCA	0060, 0202, 0807, 0880, 1035, 1060
Realistic	0035, 0048, 0000, 0046
ReplayTV	0614, 0616
Ricavision	1972
Runco	0039
Samsung	0739, 1014
Sanky	0048, 0039
Sansui	0000, 0067, 1479
Sanyo	0046
Scott	0043
Sears	0035, 0000, 0046, 1237

Sharp	0048, 0807, 0848
Sonic Blue	0614, 0616
Sony	1232, 0032, 0035, 0000, 0636, 1972
Stack 9	1972
Sylvania	0035, 0081, 0000, 0043, 0593, 1593, 1781
Symphonic	0000, 0593, 1593
Systemax	1972
Tagar Systems	1972
Teac	0000
Technics	0035, 0162
Teknika	0035, 0000
Thomas	0000
Tivo	0739, 0618, 0636, 1996
Toshiba	0043, 0845, 1008, 1145, 1972, 1996
Touch	1972
Viewsonic	1972
Villain	0000
Voodoo	1972
Wards	0060, 0035, 0048, 0081, 0000
XR-1000	0035, 0000
Zenith	0039, 0000, 1479
ZT Group	1972

DVD

Accurian	0675, 1072, 1416
Aiwa	0641
Akai	0695, 0770, 0899, 1089
Alco	0790
Allegro	0869
Apex Digital	0672, 0717, 0755, 0794, 0796, 0797, 0830, 1004, 1020, 1056, 1061, 1100
Arrgo	1023
Aspire Digital	1407
Astar	1489
Audiovox	0790, 1041, 1072, 1121, 1122
Axion	1072
BBK	1224
Bel Canto Design	1571
Blaupunkt	0717
Blue Parade	0571
Bose	1895, 2023
Broksonic	0695, 0868
Buffalo	1882
Cinea	0831
CineVision	0833, 0869
Citizen	0695
Coby	0778, 1086, 1107, 1177, 1351
Craig	0831
Curtis Mathes	1087

CyberHome	0816, 0874, 1023, 1024, 1117, 1129, 1502, 1537
D-Link	1881
D-Vision	1173
Daewoo	0784, 0833, 0869, 1169, 1172
Denon	0490, 0634, 2258
Desay	1407
Diamond Vision	1316
DigitalMax	1738
Disney	0675, 1270
Dual	1068, 1085
Durabrand	1127, 2164
DVD2000	0521
Emerson	0591, 0675, 0821, 1268
Enterprise	0591
ESA	0821, 1268
Fisher	0670
Funai	0675, 1268, 1334
Gateway	1158
GE	0522, 0815, 0717
GPM	0675, 1268
Go Video	0744, 0715, 0741, 0783, 0833, 0869, 1044, 1075, 1158, 1730
Go Vision	1072
GoldStar	0741
GPX	0769
Greenhill	0717
Harman/Kardon	0582, 0702, 1229
Helios	2192
Hello Kitty	0831
Hitachi	0573, 0664, 1247
Hiteker	0672
Humax	1500, 1588
iLo	1348
Initial	0717
Insignia	0675, 1268, 2095, 2428
Integra	0627, 1769, 2147
JBL	0702
JSI	1423
JVC	0558, 0623, 0867, 1164, 1275, 1550
jWin	1049
Kawasaki	0790
Kenwood	0490, 0S34
KLH	0717, 0790, 1020, 1149
Konka	0711
Koss	0651, 1423
Lasonic	0798, 1173
Lenoxx	1127
LG	0591, 0741, 0869
LiteOn	1058, 1158, 1416, 1656, 1738
Magnavox	0503, 0539, 0846, 0675, 0821, 1268, 1384, 1506
Marantz	0539, 2414

McIntosh	1273
Memorex	0695, 0831, 1270, 2213
Microsoft	0522, 2083
Mintek	0839, 0717
Mitsubishi	1521, 0521
NAD	0741
Nesa	0717
NexxTech	1402
Norcent	1107
Olevia	2331
Onkyo	0503, 0627, 1769, 2147
Oppo	0575, 1224, 2185
Oritron	0651
Panasonic	0490, 0632, 0703, 1362, 1462, 1490, 1641, 1762, 1907, 2017
Philco	0675
Philips	0503, 0539, 2056, 0846, 0675, 0854, 1260, 1267, 1340, 1354, 2084, 2334, 2434
Pioneer	0525, 0571, 0142, 0631, 0632, 1460, 1S12, 1571, 2442
Polaroid	1020, 1061, 1086, 1316
Polk Audio	0539
Portland	0770
Presidian	0675, 1072, 1738
Proscan	0522
ProVision	0778
Qwestar	0651
RCA	0522, 0571, 0717, 0790, 0822, 1022, 1132, 1769
Rio	0869
RJTech	1360
Rotel	0623
Sampo	0698, 0752
Samsung	0490, 0573, 0199, 0820, 0899, 1048, 1075, 1932
Sansui	0695
Sanyo	0670, 0695, 0873
Sensory Science	1158
Sharp	0630, 0675, 0752, 1256, 22S0
Sharper Image	1117
Sherwood	0770, 1043, 1889
Shinsonic	0533, 0839
Sonic Blue	0869
Sony	0S33, 1533, 0884, 1033, 1070, 1431, 1516, 2020
Sova	1122
Superscan	0821
Sylvania	0675, 0821, 1268
Symphonic	0675, 0821
Teac	0790
Technics	0490, 0703
Theta Digital	0571
Tivo	1503, 1512
Toshiba	0503, 0695, 1045, 1154, 1503, 1510, 1588, 1769, 2006, 2277

Tredex	0803
Urban Concepts	0S03
US Logic	0839
Venturer	0790
Vizio	1084, 1226
Vocopro	1360
Xbox	0522, 2083
Yamaha	0490, 0539, 0545
Zenith	0503, 0591, 0741, 0869

Home-Theatre-In-A-Box (HTIB)

Controlled by AUD key

Aiwa	1388, 1641
Akai	1512
Anam	1609
Apex Digital	1257, 1774
Audiovox	1390
Bose	1229, 1629, 1933
Cambridge Soundworks	1370
Coby	1389
Daewoo	1250
Denon	2857
Durabrand	1561
Fisher	1801
Gateway	1517
Hitachi	1801
Insignia	1030, 2175
Integra	1298
JBL	1306
JVC	1374, 1495, 2239, 2331
KLH	1390, 1412
Lenoxx	1561
LG	1293, 2197
Magnavox	1514
Norcent	1389
Nova	1389
Onkyo	1298, 1531
Panasonic	1288, 1316, 1548, 1633, 1763, 1764, 2967
Philips	1266, 2311
Pioneer	1384
Polaroid	1508
Polk Audio	1289
RCA	1609, 1390, 1511, 2041
Rio	1869
Samsung	1295, 1500, 1868
Sanyo	1469, 1801
Sherwood	1517, 1905
Sonic Blue	1869
Sony	1622, 1558, 1658, 1798, 1822, 1858

Teac	1390
Venturer	1390
Yamaha	1331, 1379, 2061
Zenith	1293

Controlled by DVD key

Aiwa	0641
Audiovox	0790
Bose	1895, 2023
KLH	0790
Koss	0651
Oritron	0651
Panasonic	1907, 2017
Philips	1267, 2334
Polk Audio	0539
RCA	0790
Rio	0869
Samsung	1932
Sherwood	1889
Sonic Blue	0869
Sony	2020
Teac	0790
Toshiba	2006
Venturer	0790

DVD Recorders

Accurian	0675, 1416
Apex Digital	1056
Astar	1489
Coby	1086
CyberHome	1129, 1502
DigitalMax	1738
Funai	0675, 1334
Gateway	1158
Go Video	0741, 1158, 1730
Humax	1588
iLo	1348
JVC	1164, 1275
LG	0741
LiteOn	1158, 1416, 1738
Magnavox	0646, 0675, 1506
Panasonic	0490
Philips	0646, 1340
Pioneer	0631, 1460, 1512
Polaroid	1086
Presidian	1738
RCA	0522

Samsung	0490
Sanyo	0670
Sensory Science	1158
Sharp	0675
Sony	1033, 1070, 1431
Sylvania	0675
Toshiba	1510, 1588, 2277
Zenith	0741

TV-DVD Combos

Controlled by TV key

Advent	1933
Akai	1675, 1935, 2232
Apex Digital	1943
Audiovox	1937, 1951, 1952
Axion	1937
Broksonic	1935
Citizen	1935
Diamond Vision	1997
Dynex	1810, 2049, 2164
Emerson	1864, 1394, 1963
ESA	1963
Funai	1963
GFM	1963
Haier	1753
iLo	1990
Initial	1990
Insignia	1963, 2002, 2049
Jensen	1933
JVC	2271
LG	1423
Magnavox	1866, 1963, 1990
Mintek	1990
Panasonic	1941
Polaroid	1523, 1766, 2002
Prima	1933
Proscan	2256
RCA	1948, 1958, 2002, 2187
Sansui	1935
Sharp	0818
Sova	1952
Sylvania	1864, 1394, 1886, 1963
Toshiba	1524, 1935
TruTech	2066

Controlled by DVD key

Akai	0695
Apex Digital	0830

Audiovox	1121, 1122
Broksonic	0695
Citizen	0695
Emerson	0675, 1268
ESA	1268
Funai	1268
GFM	1268
Hitachi	1247
Insignia	1268
Magnavox	1268
Panasonic	1490
Philips	0854, 1260
RCA	1022
Samsung	0899
Sansui	0695
Sova	1122
Sylvania	0675, 1268
Toshiba	0695

TV-VCR-DVD Combos

Controlled by TV key

Emerson	1944
ESA	1944
Insignia	2088
Magnavox	1944
Panasonic	1946, 1947
RCA	1953
Sharp	1917
Sylvania	1944
Symphonic	1944
Toshiba	1945

Controlled by VCR key

Sharp	0807
-------	------

Controlled by DVD key

Akai	0899
Broksonic	0868
Emerson	0821
ESA	0821
Funai	1334
Magnavox	0821
Panasonic	1362, 1462
RCA	1132
Sharp	0630
Superscan	0821
Sylvania	0821

Symphonic	0821
Toshiba	1045

PVR (DVR)-DVD Combos

Controlled by PVR key

RCA	0880
Sylvania	0000
Toshiba	1008, 1996

Controlled by DVD key

Go Video	1730
Humax	1500, 1588
LG	0741
Panasonic	0490
Philips	1340
Pioneer	0631, 1512
RCA	0522
Sharp	1256
Sony	1033, 1070
Sylvania	0675
Tivo	1512
Toshiba	1503, 1510, 1588

PVRs (DVRs)

ABS	1972
Alienware	1972
CyberPower	1972
Dell	1972
DirecTV	0739
Gateway	1972
Go Video	0614
Hewlett Packard	1972
Howard Computers	1972
HP	1972
Hughes Network Systems	0739
Humax	0739
Hush	1972
iBUYPOWER	1972
Linksys	1972
Media Center PC	1972
Microsoft	1972
Mind	1972
Niveus Media	1972
Northgate	1972
Panasonic	0614, 0616
Philips	0739, 0618

RCA	0880
ReplayTV	0614, 0616
Samsung	0739
Sonic Blue	0614, 0616
Sony	0636, 1972
Stack 9	1972
Systemax	1972
Tagar Systems	1972
Tivo	0739, 0619, 0636
Toshiba	1008, 1972, 1996
Touch	1972
Viewsonic	1972
Voodoo	1972
ZT Group	1972

DVD-VCR Combos

Controlled by VCR key

Accurian	0000
Emerson	1593
Funai	1593
GFM	1593
Hitachi	0000
Magnavox	0000, 1593
Presidian	1593
RCA	0060
Sharp	0848
Sylvania	0000, 0593, 1593
Symphonic	0000, 1593

Controlled by DVD key

Accurian	0675
Allegro	0869
Apex Digital	1061
Broksonic	0695
CineVision	0833, 0869
Daewoo	0833, 0869
Emerson	0670
Funai	0675
GFM	0675
Go Video	0744, 0710, 0741, 0833, 0869, 1044, 1075
GoldStar	0741
Hitachi	0664
JVC	0867, 1164, 1550
LG	0741
LiteOn	1656
Magnavox	0675
Memorex	0695

Panasonic	1762
Philips	0675, 1267
Pioneer	1460
Polaroid	1061
Presidian	0675
RCA	0522, 0822
Samsung	0820, 1044, 1075
Sansui	0695
Sanyo	0670, 0873
Sharp	0630
Sony	0864, 1033, 1070, 1431
Sylvania	0675
Symphonic	0675
Toshiba	0503
Zenith	0741, 0869