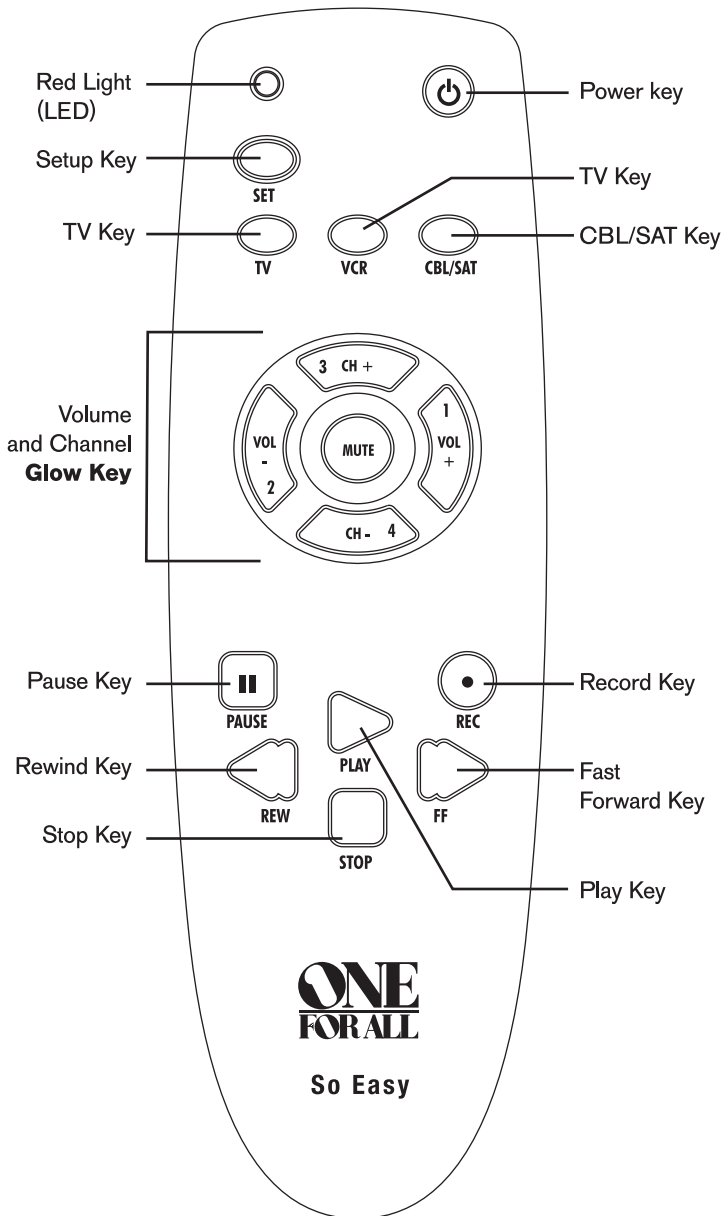 




URC 3050 So Easy 3

Features and Functions

The illustration below and chart on the next page describe the features and functions of the *One For All® So Easy 3 Device* universal remote control.



Feature

Function

RED Light (LED)

The LED flashes red to show that the remote is working.



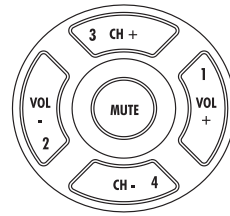 
The TV, VCR and CBL keys are used to select the home entertainment device you want to control.



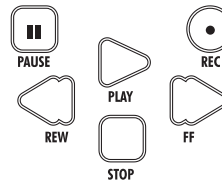 
The POWER key operates the same as on your original remote.



The SETUP key is used to set up your devices.



The **Glow Keys**: VOL (Volume), CH (Channel), and M (Mute) operate the same as on your original remote. To activate the "**Glow**" Feature, you must expose the **Glow Keys** to bright light. The length of time the **Glow Keys** remain illuminated will be determined by the length of time the remote is exposed to bright light. These keys are also used to enter set-up codes for your devices.



 
The REW (Rewind), FF (Fast Forward), STOP, PLAY, PAUSE and REC (Record) keys control the same functions as those found on your VCR remote.

 
Thank you for purchasing the *One For All® So Easy 3 Device* universal remote. Before you can use your new remote, you will need to program it. To do this, you need to tell the remote what equipment you wish to operate. This is done by following these three easy steps.

- Step 1: Install two (2) new AAA alkaline batteries.
- Step 2: Look up the code for your TV, VCR or Cable Box.
- Step 3: Enter the code.

Step 1: Installing the Batteries

Your *One For All® So Easy 3 Device* needs two (2) **new** AAA alkaline batteries. To install the batteries:

- 

On the back of the *One For All® So Easy 3 Device*, push down on the tab and lift the cover off.
- 

Match the batteries to the + and - marks inside the battery case, then insert the batteries.
- 

Press the battery cover back into place.
- 

Test the unit by pressing **POWER**. The red light (LED) should blink once.

Note: Removing the batteries for more than 30 minutes will require you to reprogram the remote control.

 
Step 2: Looking Up Your Electronic Device Code

- Look at your Electronic Device to find out the brand name and write it in the space below:

TV _____

VCR _____

Cable _____

- 

Find your Device brand in the listing on the reverse side of these instructions. The most popular codes are listed first. Write your codes here:

1st TV code				
2nd TV code				
3rd TV code				
1st VCR code				
2nd VCR code				
3rd VCR code				
1st Cable code				
2nd Cable code				
3rd Cable Code				

You will need one of these codes to program your *One For All® So Easy 3 Device* remote.

Step 3: Setting Up Your Devices

- Turn on your TV, VCR or Cable Box, depending on the device you are programming.

- 

 
 
Press **TV*** and release. Press and hold **SETUP** until the *One For All® So Easy 3 Device*'s red light blinks twice. Release **SETUP**.

*** Note:** When setting up your VCR and/or Cable Box, substitute the appropriate device key (VCR or CBL).

- Using the example shown on the right, enter the first four-digit code you wrote down for the device you are setting up. (See "Looking Up Your Electronic Device Code".) If you put in the code correctly, the red light will blink twice.

How to Enter Codes

If your TV Press code is:

1	
2	
3	
4	

- 

TV Set Up

Aim the *One For All® So Easy3 Device* at your TV and press **POWER**. Your TV should turn off. If it doesn't, repeat Steps 2-4, trying each code listed for your brand until you find the one that operates your TV.



or

 


VCR Set Up

Aim the *One For All® So Easy3 Device* at your VCR and press **POWER**. Your VCR should turn off. If it doesn't, repeat Steps 2-4, trying each code listed for your brand until you find the one that operates your VCR. If your original VCR remote did not have a **POWER** key, put a tape in your VCR and press **PLAY** on the *One For All® So Easy3 Device*.



or



Cable Set Up

Aim the *One For All® So Easy 3 Device* at your Cable Box and press **POWER**. Your Cable Box should turn off. If it doesn't, repeat Steps 2-4, trying each code listed for your brand until you find the one that operates your Cable Box. If your original Cable Box remote did not have a "ON" key, Use **CH +** on the *One For All® So Easy 3 Device* to turn your Cable Box on.

Troubleshooting

If you cannot get the *One For All® So Easy 3 Device* to operate your equipment or perform commands properly:

- Try all of the codes listed for your TV, VCR or Cable Box in the Set-Up Codes section to the right. Many set-up codes may allow partial functionality, however, only one code will operate your device correctly.
- Make sure you are within 15 feet of your equipment when using your remote control.
- If the red light on the remote control does not blink when you press a key, replace the batteries with two (2) new AAA alkaline batteries. Be sure you match the batteries to the plus (+) and minus (-) marks inside the battery case.
- No volume when in the Cable mode or when operating a second TV or TV/VCR combination? Press and hold SETUP until the red light blinks twice, then release SETUP. Press CH- + CH- + VOL- then press VOL+.
- As a safety feature on the *One For All® So Easy 3 Device*, you must press the REC key twice.
- World Wide Web: <http://www.oneforall.com>

Re-Assigning Device Keys

You can use the *One For All® So Easy 3 Device* to operate a second TV or a second VCR. To do so, you must re-assign one of the device keys (TV, VCR, or CBL) to operate your second TV or VCR. The chart below shows you how to re-assign the device keys.

*** Please note: Here you must press and hold SETUP until the *One For All® So Easy 3 Device's* red light blinks twice.**

To Change	Press
 to 	SETUP* + CH - + CH - +VOL+ + VCR + TV + TV + SETUP* + VCR code.
 to 	SETUP* + CH - + CH - +VOL+ + CBL + TV + TV + SETUP* + Cable Box code.
 to 	SETUP* + CH - + CH - +VOL+ + TV + VCR + VCR + SETUP* + TV code.
 to 	SETUP* + CH - + CH - +VOL+ + CBL + VCR + VCR + SETUP* + Cable Box code.
 to 	SETUP* + CH - + CH - +VOL+ + TV + CBL + CBL + SETUP* + TV code.
 to 	SETUP* + CH - + CH - +VOL+ + VCR + CBL + CBL + SETUP* + VCR code.

Set-Up Codes for TVs

A-Mark	1112
Abex	1143
Accuscan	1213
Admiral	1244, 1334
Adventura	1212
Aiko	1243
Akai	1142, 1231
Alleron	1412, 1421
Ambassador	1344
Americana	1232, 1322
Anam	1233, 1413
Anam National	1224
AOC	1112, 1123, 1142, 1422, 1221
Archer	1112
Audiovox	1413, 1112
Bay Crest	1123, 1334
Belcor	1123
Beaumarck	1121
Bell & Howell	1324, 1114, 1244
Bench Mark	1232, 1123, 1413, 1114
Bradford	1413
Brockwood	1123
Broksonic	1112, 1432, 2112
Candle	1142, 1231, 1423, 1212
Capehart	1221
Carver	1223
CCE	1431
Celebrity	1111
Citizen	1243, 1232, 1231, 1142, 1441, 1423, 1211, 1212
Claitone	1422
Colortyme	1223, 1232, 1411
Concerto	1231
Conic	1143
Contec	1413, 1422, 1332
Craig	1413
Crosley	1223
Crown	1413, 1211
Curtis Mathes	1342, 1232, 1142, 1444, 1211
CXC	1413
Daewoo	1243, 2111, 1123, 1211
Daytron	1123, 1231
Dumont	1123, 1121
Electroband	1111, 1422
Electrohome	1443, 1322
Emerson	1432, 2112, 1413, 1412, 1344, 1411, 1441, 1442, 1123, 1211, 1422, 1414, 1144, 1332, 1324
Encor	1143
Envision	1142
Fisher	1324, 1333
Fujitsu	1412
Funai	1342, 1412, 1413
Futuretech	1413
GE	1213, 1214, 1224, 2111, 1131, 1133, 1442, 1312, 1411, 1141, 1343
Gibraltar	1142, 1123, 1121
Goldstar	1231, 1142, 1123, 1411, 1143, 2113, 2114
Granada	1313, 1323
Grundy	1412, 1413
Grunpy	1412, 1413
Hallmark	1411
Harley Davidson	1411, 1111, 1413, 1223
Harman/Kardon	1234
Harvard	1413, 1233
Heathkit	1114, 1121, 1243
Hitachi	1313, 1323, 1231, 1144, 1143
Ima	1413
Infinity	1223
Janeil	1212
JBL	1223
JCB	1111
JVC	1222, 1414, 2121, 2122
Kamp	1332
Kawasho	1332
Kaypani	1221
Kenwood	1142, 1123
KLH	1233, 1413
Kloss Novabeam	1234, 1132
Kloss	1234, 1132, 1212
KMC	1143
KTV	1142, 1413, 1422, 1441, 1211, 1421, 1431
Lloyds	1432, 1413, 1412
Logik	1114
Luxman	1231
LXI	1324, 1223, 1213, 1411, 1331
Magnasonic	1412, 1142
Magnavox	1223, 1311, 1423, 1424, 1142
Majestic	1114
Marantz	1223, 1142
Matsui	1431
Megatron	1411, 1112, 1313
MEI	1422
Memorex	1322, 1324, 1231, 1114, 1411, 1433
MGA	1322, 1142, 1411
Midland	1213, 1121, 1214, 1312, 1211, 1143
Minut	1131, 1133
Mitsubishi	1322, 1123, 1411, 1244, 2123
Motorola	1244, 1224
MTC	1422, 1232, 1231, 1142, 1123

Multitech	1413, 1431
NAD	1341, 1331, 1411
NEC	1142, 1231, 1123
Nikko	1243, 1411
NTC	1243
Okron	1123
Onwa	1413
Optimus	1341, 1324, 1433
Optonica	1244, 1334
Orion	1432, 2112
Oritron	1413, 1112
Panasonic	1433, 1214, 1224, 1223
PCE	1331, 1232
Penney	1213, 1232, 1214, 1142, 1123, 1122, 1412, 1131, 1133, 1312, 1331, 1321, 1112, 1121, 1143, 1433, 2114
Performance	1111
Philco	1223, 1311, 1142, 1123
Philips	1223, 1311
Pilot	1142, 1123, 1211
Pioneer	1341, 1144
Portland	1243, 1123, 1211
Priceclub	1232
Prism	1214
Proscan	1213
Proton	1221, 1411, 1112
Pulsar	1121
Pulser	1123
Quasar	1433, 1214, 1224
RadioShack	1334, 1413, 1123, 1211, 1143
RCA	1213, 1122, 1123, 1141, 1312, 1434, 1343, 1242
Realistic	1324, 1334, 1231, 1142, 1123, 1413, 1411, 1211, 1143
Rhapsody	1422, 1421
Runco	1142, 1121
Sampo	1221, 1211, 1143
Samsung	1232, 1231, 1142, 1123, 1411, 1143
Samsux	1211
Sanky	1142, 1232, 1211
Sansui	1142, 1232, 1334
Sanyo	1324, 1333, 1314
Scimitsu	1123
Scotch	1411
Scott	1432, 1123, 1413, 1411
Sears	1213, 1324, 1342, 1223, 1231, 1331, 1333, 1411, 1412, 1321, 1314
Sharp	1244, 1334, 1211
Shogun	1123
Signature	2000 1114, 1244
Signature	1114, 1244
Simpson	1423, 1424
Sony	1111, 1113, 1241
Soundesign	1413, 1423, 1411, 1412
Spectricon	1112
Squareview	1342
SSS	1123, 1413
Starlite	1413
Supre-Macy	1212
Supreme	1111
Sylvania	1223, 1311, 1142
Symphonic	1423
Tandy	1244, 1334
Tatung	1224, 1112
Technics	1433, 1214
Technol Ace	1412
Techwood	1214, 1231, 1112
Teknika	1243, 1223, 1322, 1123, 1114, 1232, 1413, 1231, 1423, 1412, 1211
Thomas	1231, 1411
TMK	1231, 1344, 1411
Toshiba	1331, 1232, 1321
Tosonic	1422
Totevision	1211
Truetone	1433, 1214, 1224
Universal	1131, 1133
Vector Research	1142
Victor	1222
Vidikron	1223
Vidtech	1123, 1411
Viking	1212
Wards	1223, 1334, 1311, 1114, 1231, 1142, 1123, 1141, 1411, 1131, 1133, 1124, 1412, 1134, 1343, 1241
Wellton	1411, 1123
XR1000	1432, 1413, 1342
Yamaha	1142, 1123
York	1142
Zenith	1121, 1243, 1114
Zonda	1112

Set-Up Codes for VCRs

Adventura	1111
Aiko	1413
Aiwa	1111
Akai	1141, 1214, 1313, 1224
American High	1124
Asha	1411
Astra	1124, 1411, 1111
Audiovox	1131
Avis	1241, 1111
Beaumarck	1411
Bell & Howell	1311
Broksonic	1311, 1413, 1341, 1314, 1422, 1424

Calix	1311
Canon	1124
Calin	1131, 1132
Candle	1131, 1413
Capehart	1114
Carver	1243
CCE	1413, 1241
Citizen	1131, 1413
Colt	1241
Colortime	1124, 1223, 1413
Craig	1411, 1241, 1131, 1212, 1412
Crosley	1124, 1243
Curtis Mathes	1124, 1223, 1332, 1141
Cybernex	1411
Daewoo	1413, 1114, 1144
Daytron	1114
Dynatech	1111
Electrohome	1131
Electrophonic	1131
Emerex	1121, 1122, 1123
Emerson	1331, 1431, 1413, 1421, 1112, 1341, 1314, 1131, 1111, 1342, 1234, 1422, 1424, 1224, 1143, 1333, 1334, 1244
Fisher	1311, 1212, 1221, 1232
Fuji	1124, 1122
Funai	1111, 1423
GAB	1241
Garrard	1111, 1423
GE	1223, 1332, 1124
Go Video	1344, 1414, 1411
Goldstar	1131, 1132
Gradiente	1111
Harley Davidson	1111
Hamman/Kardon	1132
Harvard	1241, 1234
Harwood	1241, 1234
Headquarter	1211
Hi-Q	1212
Hi Point	1331, 1342, 1314
Hitachi	1142, 1111, 1312, 1323, 1141
Jensen	1141, 1233
JVC	1113, 1233, 1141
KEC	1413, 1131
Kenwood	1233, 1113, 1141, 1132
KLH	1241
Kodak	1124, 1131
Lloyd	1111, 1333
Logik	1241
LXI	1131
Magnasonic	1411, 1131, 1413
Magnavox	1124, 1243, 1133, 1321
Magnin	1411
Marantz	1124, 1243
Marta	1131
Matsushita	1124
MEI	1124
Memorex	1111, 1124, 1311, 1411, 1131, 1213, 1212, 1133, 1211, 1322
MGA	1143, 1244
MGN Technology	1411
Minolta	1142, 1312
Mitsubishi	1143, 1324, 1224, 1233, 1113
Motorola	1124, 1213
Movie Walker	1241
MTC	1111, 1411
Multitech	1111, 1241
NAD	1222
NEC	1132, 1311, 1134, 1141, 1233, 1113
Nikko	1131
Noblex	1411
Olympus	1124
Optimus	1213, 1131, 1222, 1311, 1322
Optonica	1231
Orion	1331, 1431, 1413, 1422
Panasonic	1322, 1124, 1343, 1242
Penney	1124, 1411, 1131, 1142, 1323, 1132, 1134, 1221, 1322
Pentax	1142, 1312
Philco	1124
Philips	1124, 1243
Pilot	1131
Pioneer	1222, 1233, 1113
Portland	1114
Protec	1241
Proton	1231
Pulsar	1133
Quarter	1211
Quartz	1211
Quasar	1322, 1124, 1242
RadioShack	1111, 1131, 1423
Randex	1131
RCA	1223, 1332, 1142, 1312, 1321, 1242, 1313
Realistic	1111, 1411, 1124, 1131, 1213, 1311, 1212, 1211, 1232, 1231
Ricoh	1123, 1122, 1121
Runco	1133
Samsung	1411, 1144, 1214
Sanky	1213, 1133
Sansui	1141, 1233, 1113
Sanyo	1311, 1341, 1342, 1314, 1143, 1144
Scott	1331, 1341, 1342, 1314, 1143, 1144
Sears	1311, 1131, 1124, 1142, 1312, 1212, 1211, 1221, 1232, 1111
Sharp	1213, 1231
Shintom	1241
Shogun	1411
Singer	1241
Signature	1124, 1131
Sony	1121, 1122, 1123, 1124

Soundesign	1111
STS	1142, 1312
Sylvania	1124, 1243, 1143
Symphonic	1111, 1423
Tatung	1141
TEAC	1111, 1141
Technics	1322, 1124
Teknika	1111, 1124, 1131
TMK	1411, 1333
Toshiba	1143, 1144, 1232, 1342
Totevision	1411, 1131
Unitech	1411
Vector	1144
Vector Research	1132, 1134
Victor	1141, 1233
Viceo Concepts	1144, 1134, 1224
Videosonic	1411
Wards	1111, 1124, 1142, 1312, 1414, 1212, 1213, 1223, 1332, 1241, 1342, 1321, 1231
XR 1000	1111, 1241, 1124
Yamaha	1132
Zenith	1133, 1122, 1123, 1121

Set-Up Codes for Cable Boxes

ABC	1112, 1114, 1122, 1123, 1131, 1133, 1134, 1142
American	1233
Antronix	1212, 1312
Arbatron	1114, 1134, 1131, 1322
Archer	1212, 1244, 1312
Belcor	1232
Cable Star	1232
Cabletenna	1212
Cableview	1212
Century	1244
Citizen	1244
Colour Voice	1221, 1222
Comtronics Eagle	1224, 1233
Contec	1143
Dae Ryung Eagle	1123
Eastern	1113
Everquest	1141
Focus	1341
Garrard	1244
GC Electronics	1232, 1312
Gemini	1141, 1241
General Instruments	1322, 1131, 1114
Goldstar	1243, 1224
Hamlin	1124, 1144, 1223, 1314, 1321
Hitachi	1131
Hytex	1122
Jasco	1244, 1334
Jerrold	1114, 1322, 1134, 1131, 1141, 1132, 1214
Memorex	1111
Movie Time	1234, 1311
Novaplex	1342
NSC	1234, 1311, 1241
Oak	1122, 1143
Omega	1141
Panasonic	1211, 1242, 1111
Paragon	1111
Philips	1244, 1221, 1222
Pioneer	1332, 1243, 1213
Popular Mechanics	1341
Prism	1132, 1133
Pulsar	1111
Quest	1243, 1144
RCA	1211
Realistic	1312
Recoton	1341
Regal	1314, 1144, 1321
Regency	1113
Rembrandt	1131, 1241
Runco	1111
Samsung	1243, 1224
Scientific Atlanta	1123, 1323, 1142, 1121
Seam	1324
Sigma	1143
Signal	1141, 1224
Signature	1131
SL Marx	1224
Sprucer	1211
Starcom	1114, 1141
Stargate	1141, 1224
Starquest	1141
Sylvania	1112
Tandy	1313
Televue	1224
Texscan	1112
Tocom	1132, 1133
Toshiba	1111
Tusa	1141
TV86	1234
Unika	1244, 1312, 1212
United Artists	1122
United Cable	1114
Universal	1244, 1312, 1212, 1232
U.S. Electronics	1114, 1322, 1323, 1142, 1123
Viewstar	1234, 1233, 1313
Videoway	1333, 1111
Zenith	1111, 1331, 1231
Zentek	1341

ONE FOR ALL® PRODUCTS Limited Warranty

One For All ("OFA") warrants, to the original purchaser only, that this product will be free from defects in materials and workmanship, under normal use, for ninety (90) days from the date of original purchase.

This warranty does not cover damage or failures caused by products or services not supplied by OFA, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, or that is attributable to acts of God.

There are no express warranties except as listed above. OFA SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

To obtain warranty service for a defective product during the warranty period, please return the product, preferably in the original carton, along with your purchase receipt, to the store of original purchase. A note detailing the complaint would be helpful. The store, at its option, will replace or repair this product if found to be defective.

One For All
(330)-405-8655
www.allforone.com

As you add new components to your home entertainment system, One For All® has a remote control that will fit your needs. Look for these exciting products at a retailer near you.

ONE FOR ALL® is the registered trademark of Universal Electronics Inc. Computime International Ltd. is the Licensee of the ONE FOR ALL® brand for USA and Canada.

Copyright 1996 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

One For All® is designed for compatibility in North America excluding Mexico.

URC-3050 So Easy 3

12/00