

Setup Codes for URC 5650

Setup Codes For TVs

Abex	0032
Admiral	0093, 0179, 0180, 0016, 0047
Adventura	0046
Aiko	0092
Akai	0030
Alaron	0179
A-Mark	0003
Ambassador	0177
Anam National	0055
Anam	0180
AOC	0030, 0019, 0185, 0003, 0052
Archer	0003
Audiovox	0451, 0092, 0180, 0003
Baysonic	0180
Belcor	0019
Bell & Howell	0154, 0016
Bradford	0180
Brockwood	0019
Broksonic	0003
Candle	0056, 0030, 0186, 0046
Carnivale	0030
Carver	0054
Celebrity	0000
Cineral	0451, 0092
Citizen	0060, 0092, 0030, 0056, 0186, 0280, 0039, 0046
Clairtone	0185
Concerto	0056
Contec	0180, 0185
Craig	0180
Crown	0180, 0039
Curtis Mathes	0030, 0060, 0154, 0039
CXC	0180
Daewoo	0451, 0092, 0019, 0039
Daytron	0019
Denon	0145
Dumont	0017, 0019
Electroband	0000, 0185
Emerson	0463, 0236, 0180, 0019, 0154, 0177, 0178, 0179, 0185, 0280, 0282, 0038, 0039
Envision	0030
Fisher	0154, 0159
Fujitsu	0179
Funai	0171, 0179, 0180
Futuretech	0180
GE	0047, 0051, 0451, 0021, 0027, 0055, 0178, 0282, 0135
Gibraltar	0019, 0030, 0017
Goldstar	0019, 0030, 0178, 0032, 0039
Gradiente	0053, 0056
Grunpy	0179, 0180
Hallmark	0178
Harvard	0180
Hitachi	0145, 0151, 0038, 0056, 0032
Infinity	0054
Janeil	0046
JBL	0054
JCB	0000
JVC	0053
Kaypani	0052
KEC	0180
Kenwood	0019, 0030
Kloss	0024, 0046
KTV	0030, 0180, 0185, 0280, 0032
LG	0056
Logik	0016
Luxman	0056
LXI	0047, 0054, 0154, 0156, 0178
Magnavox	0054, 0096, 0186, 0187, 0020, 0024, 0030, 0386, 0171, 0179
Majestic	0016
Marantz	0054, 0030
Matsushita	0250
Megatron	0145, 0003, 0178
MEI	0185
Memorex	0056, 0150, 0154, 0016, 0178

MGA	0150, 0019, 0030, 0178
Midland	0017, 0047, 0051, 0135, 0032, 0039
Minutz	0021
Mitsubishi	0150, 0093, 0019, 0178
Motorola	0093, 0055
MTC	0060, 0019, 0030, 0056, 0185
Multitech	0180
NAD	0156, 0166, 0178
NEC	0019, 0030, 0056
Nikko	0030, 0092, 0178
Noshi	0018
NTC	0092
Onwa	0180
Optimus	0250, 0154, 0166
Optonica	0093, 0165
Orion	0236, 0436
Panasonic	0250, 0051, 0055
Penney	0047, 0156, 0051, 0030, 0019, 0003, 0018, 0021, 0027, 0060, 0135, 0178, 0032, 0039
Philco	0054, 0145, 0096, 0019, 0020, 0030
Philips	0054
Pilot	0019, 0030, 0039
Pioneer	0166, 0038
Portland	0092, 0019, 0039
Prism	0051
Proscan	0047
Proton	0003, 0052, 0178
Pulsar	0017, 0019
Quasar	0250, 0051, 0055, 0165
RadioShack	0047, 0056, 0154, 0019, 0030, 0165, 0178, 0180, 0032, 0039
RCA	0047, 0018, 0019, 0038, 0090, 0135
Realistic	0056, 0154, 0019, 0030, 0165, 0178, 0180, 0032, 0039
Rhapsody	0185
Runco	0017, 0030
Sampo	0030, 0052, 0032, 0039
Samsung	0060, 0019, 0030, 0056, 0178, 0032, 0039
Samsux	0039
Sansei	0451
Sanyo	0154, 0159
Scimitsu	0019
Scotch	0178
Scott	0236, 0019, 0178, 0179, 0180
Sears	0047, 0054, 0056, 0154, 0156, 0171, 0178, 0159, 0179
Semivox	0180
Semp	0156
Sharp	0093, 0165, 0039, 0386
Shogun	0019
Signature	0016
Simpson	0186, 0187
Sony	0000, 0080
Soundesign	0178, 0179, 0180, 0186
Spectricon	0003
Squareview	0171
SSS	0019, 0180
Starlite	0180
Supre-Macy	0046
Supreme	0000
Sylvania	0054, 0096, 0020, 0030
Symphonic	0171
Tandy	0093
Tatung	0055, 0003
Technics	0250, 0051
Technol Ace	0179
Techwood	0051, 0056, 0003
Teknika	0054, 0056, 0060, 0092, 0150, 0016, 0019, 0179, 0180, 0186, 0039
Telefunken	0056
TMK	0056, 0177, 0178
Toshiba	0156, 0060, 0154
Tosonic	0185
Totevision	0039
Universal	0027
Vector Research	0030
Victor	0053
Vidikron	0054

Vidtech	0019, 0178
Viking	0046
Wards	0016, 0019, 0030, 0054, 0056, 0080, 0096, 0165, 0178, 0179, 0020, 0021, 0027 0451, 0463, 0236, 0180
White Westinghouse	0019, 0030
Yamaha	0017, 0092, 0016
Zenith	0003
Zonda	

Setup Codes For VCRs

Admiral	0048, 0121, 0184, 0039, 0060, 0202
Adventura	0000
Aiko	0278
Aiwa	0037, 0000
Akai	0041, 0061, 0106
American High	0035
Asha	0240
Audiovox	0037
Beaumarck	0240
Bell & Howell	0104
Broksonic	0184, 0209, 0479, 0002, 0121, 0295, 0361
Calix	0037
Canon	0035
Capehart	0020
Carver	0081
CCE	0072, 0278
Cineral	0278
Citizen	0037, 0278
Colt	0072
Craig	0072, 0240, 0037, 0047, 0271
Curtis Mathes	0035, 0041, 0060, 0202
Cybernex	0240
Daewoo	0278, 0020, 0045
Daytron	0020
Denon	0042
Dynatech	0000
Electrohome	0037
Electroponic	0037
Emerex	0032
Emerson	0209, 0184, 0479, 0278, 0000, 0002, 0036, 0037, 0043, 0061, 0068, 0121, 0184, 0208, 0212, 0295, 0361
Fisher	0104, 0047, 0054, 0066
Fuji	0033, 0035
Funai	0000
Garrard	0000
GE	0060, 0202, 0035, 0048, 0240
Goldstar	0037, 0038
Go-Video	0432, 0526
Gradiente	0000, 0008
Harley Davidson	0000
Harman/Kardon	0038
Harwood	0072, 0068, 0072
Headquarter	0046
HI-Q	0047
Hitachi	0041, 0105, 0000, 0042
Jensen	0041
JVC	0008, 0041, 0067
KEC	0037, 0278
Kenwood	0038, 0041, 0067
KLH	0072
Kodak	0035, 0037
Lloyd's	0000, 0208
Logik	0072
LXI	0037
Magnasonic	0278
Magnavox	0035, 0081, 0000, 0039, 0110, 0149
Magnin	0240
Marantz	0035, 0081
Marta	0037
Matsushita	0162, 0035, 0454
MEI	0035
Memorex	0162, 0240, 0035, 0037, 0104, 0000, 0039, 0046, 0047, 0048
MGA	0043, 0061, 0240
MGN Technology	0240
Minolta	0042, 0105
Mitsubishi	0043, 0048, 0061, 0067

Motorola	0035, 0048
MTC	0240, 0000
Multitech	0000, 0072
NEC	0038, 0040, 0041, 0067, 0104
Nikko	0037
Nikon	0034, 0253
Noblex	0240
Olympus	0035
Optimus	0162, 0048, 0037, 0104, 0454
Optonica	0062
Orion	0209, 0184, 0479, 0002, 0295
Panasonic	0162, 0035, 0077, 0225, 0454
Penney	0035, 0037, 0038, 0040, 0042, 0054, 0240
Pentax	0042, 0105
Philco	0035, 0209, 0479
Philips	0035, 0081, 0062, 0110
Pilot	0037
Pioneer	0067, 0162
Portland	0020
Proscan	0060, 0202
Protec	0072
Pulsar	0039
Quarter	0046
Quartz	0046
Quasar	0162, 0035, 0077, 0454
RadioShack	0000, 0037
Radix	0037
Randex	0037
RCA	0060, 0202, 0240, 0042, 0035, 0048, 0077, 0105, 0106, 0149
Realistic	0000, 0035, 0037, 0046, 0047, 0048, 0062, 0066, 0104
Ricoh	0034, 0253
Runco	0039
Samsung	0240, 0045
Sanky	0048, 0039
Sansui	0000, 0041, 0067, 0271, 0479
Sanyo	0104, 0046, 0047, 0054, 0240
Scott	0043, 0045, 0121, 0184, 0210, 0212
Sears	0000, 0035, 0037, 0042, 0046, 0047, 0054, 0066, 0104, 0105
Semp	0045
Sharp	0048, 0062
Shintom	0072
Shogun	0240
Singer	0072
Sony	0032, 0033, 0034, 0000, 0035, 0253
STS	0042
Sunpak	0253
Sylvania	0035, 0081, 0043, 0000, 0110
Symphonic	0000
Tatung	0041
TEAC	0000, 0041
Technics	0162, 0035
Teknika	0000, 0035, 0037
Thomas	0000
TMK	0240, 0036, 0208
Toshiba	0043, 0045, 0066, 0210, 0212
Totevision	0037, 0240
Unitech	0240
Vector Research	0038, 0040
Vector	0045
Video Concepts	0040, 0045, 0061
Videosonic	0240
Wards	0000, 0035, 0042, 0047, 0048, 0060, 0062, 0072, 0081, 0149, 0212, 0240
White Westinghouse	0278, 0479, 0209, 0184
XR-1000	0000, 0035, 0072
Yamaha	0038
Zenith	0039, 0000, 0033, 0034

Setup Codes For TV/VCR Combos

American High	0035*
Brocksonic	0002, 0294, 0479
Colt	0072
Curtis Mathes	0035*
Daewoo	0278*
Emerson	0002, 0294, 0479
Funai	0000
GE	0035*, 0060*, 0048*, 0240
Hitachi	0035*, 0000
HQ	0000
Lloyds	0000
Magnavox	0000, 0035*, 0081*
Magnin	0240
Memorex	0037, 0162*
MGA	0240
Mitsubishi	0048*
Orion	0002, 0294, 0479
Panasonic	0035*, 0162*
Penney's	0035*, 0240, 0162*
Quasar	0035*, 0162*
RCA	0035*, 0060*, 0048*
Sansui	0000, 0479
Sanyo	0240
Sears	0000, 0037
Sony	0032*
Symphonic	0000
Zenith	0000

Setup Codes For Receivers/Tuners

ADC	0531
Aiwa	0121, 0158, 0189
Capetronic	0531
Carver	0008, 0042, 0189, 0360
Casio	0195
Clarinette	0195
Denon	0004
Emerson	0424
Fisher	0042, 0219, 0360
Garrard	0424, 0463
Harman/Kardon	0110
JVC	0074
Kenwood	0027, 0313, 0314, 0077, 0186
Koss	0424
Linn	0189
Lloyd's	0195
LXI	0181
Magnavox	0189, 0195, 0531
Marantz	0039, 0189
MCS	0039
Modulaire	0195
NAD	0320
Nakamichi	0347
Onkyo	0135
Optimus	0042, 0080, 0177, 0181, 0186, 0219, 0531, 0670
Panasonic	0039
Penney	0195
Philips	0189
Pioneer	0014, 0080, 0150, 0531, 0630
Quasar	0039
RCA	0054, 0360, 0531
Realistic	0163, 0181, 0195
Sansui	0189
Sanyo	0219
Scott	0163, 0322
Sharp	0186
Sherwood	0491, 0502
Sony	0158, 0474
Soundesign	0670
TEAC	0163, 0463
Technics	0039, 0309, 0518
Victor	0074
Wards	0014, 0042, 0054, 0080, 0158, 0189
Yamaha	0176, 0186
Yorx	0195

Setup Codes for Cable Converters

ABC	0003, 0008, 0014, 0007, 0001, 0011, 0013, 0017
Allegro	0153, 0315

Antronix	0022, 0207
Archer	0797, 0153, 0022, 0207
Belcor	0056
Cable Star	0056
Cabletenna	0022
Cableview	0022
Century	0153
Citizen	0153, 0315
Colour Voice	0025, 0031
Comtronics	0040
Contec	0019
Digi	0637
Eastern	0002
Emerson	0797
Everquest	0015, 0040
Focus	0400
Garrard	0153
GC Electronics	0056, 0207
Gemini	0015
General Instrument	0476, 0003, 0014, 0011
Goldstar	0144, 0040
Goodmind	0797
Hamlin	0259, 0009, 0020, 0034
Hitachi	0011
Hytex	0007
Jasco	0153, 0315
Jerrold	0476, 0003, 0014, 0011, 0012, 0015
Linsay	0440
Magnavox	0027
Memorex	0000
Movie Time	0063, 0156
Novaplex	0618
NSC	0063, 0156
Oak	0007, 0019
Optimus	0021
Panasonic	0021, 0107, 0000
Panther	0637
Paragon	0000
Philips	0153, 0025, 0027, 0031
Pioneer	0753, 0144, 0023
Popular Mechanics	0400
Prelude	0770
Pulsar	0000
RadioShack	0015, 0315, 0797
RCA	0021
Realistic	0207
Recoton	0400
Regal	0259, 0020
Regency	0002
Rembrandt	0011
Runco	0000
Samsung	0144, 0040
Scientific Atlanta	0477, 0008, 0017
Seam	0510
Signal	0015, 0040
Signature	0011
SL Marx	0040
Sprucer	0021
Starcom	0003, 0015
Stargate	0770, 0015, 0040
Starquest	0015
Sylvania	0001
Tandy	0258
Televue	0040
Texscan	0001
TFC	0310
Timeless	0418
Tocom	0012, 0013
Toshiba	0000
Tusa	0015
TV86	0063
Unika	0153, 0022, 0207
United Artists	0007
United Cable	0003
Universal	0153, 0022, 0056, 0191, 0207
Videoway	0250
Viewstar	0063, 0027, 0258
Zenith	0525, 0000
Zentek	0400

Setup Codes for Satellites

AlphaStar DBS	0772
Chaparral	0053, 0216
Echostar DBS	0775
Echostar	0159, 0269, 0280
Express Vu DBS	0775
General Instrument	0361
Hitachi DBS	0819
Homecable	0238
HTS DBS	0775
Hughes Network Systems	
DBS	0749
IQ Prism	0210
IQ	0210
Janeil	0152
Jerrold Primestar	0627
Jerrold	0361
Legend	0269
Magnavox DBS	0722, 0724
Memorex DBS	0724
Memorex	0269
Panasonic	0152
Panasonic DBS	0701
Philips DBS	0722, 0724
Primestar	0361, 0627
RCA DSS	0566
Realistic	0052
Sony DBS	0639
Star Choice DBS	0869
Star Trak	0180
STS	0210
Toshiba DBS	0790
Toshiba	0082
Uniden DBS	0724
Uniden	0052, 0074, 0076, 0238

Setup Codes For Audio Cassette Decks

Aiwa	0029, 0197
Carver	0029
Denon	0076
Harman/Kardon	0182
JVC	0244, 0273
Kenwood	0070
Magnavox	0029
Marantz	0029
Onkyo	0135, 0282
Optimus	0027, 0220
Philips	0029
Pioneer	0027, 0099, 0220
Sansui	0029
Sony	0170, 0243, 0291
Technics	0229
Victor	0273
Wards	0027
Yamaha	0094, 0097

Setup Codes For Video Accessories

Archer	0160
GC Electronics	0160
Jebsee	0160
Rabbit	0081
RadioShack	0160
Roctec	0456
SuperGuide	0169
TeleCaption	0171

Setup Codes For Integrated Amplifier/Preamplifiers/Amplifiers

Carver	0269
Curtis Maths	0300
Denon	0160
GE	0078
JVC	0331
Linn	0269
Luxman	0165
Magnavox	0269
Marantz	0269, 0321
Nakamichi	0321
Optimus	0013, 0300, 0395
Panasonic	0308
Pioneer	0013, 0300
Realistic	0395
Sansui	0321
Sony	0220, 0689
Soundesign	0078
Technics	0308
Victor	0331
Wards	0013, 0078
Yamaha	0354

Setup Codes For Miscellaneous Audio

Aiwa	0010, 0159
Fisher	0052
Harman/Kardon	0477
Jerrold	0459, 0520
JVC	0073
Nikko	0376
Paramount Pictures	0317
RCA	0056
Schneider	0376
Scientific Atlanta	0460
Sony	0010, 0159
Soundesign	0376
SSI	0317
Starcom	0459
Yorx	0376