

## Set-up codes for the URC 6800 / Cinema 6+

### Setup Codes For TVs

|               |                                                                        |
|---------------|------------------------------------------------------------------------|
| Admiral       | 0093, 0179, 0180, 0016, 0047                                           |
| Aiko          | 0092                                                                   |
| Akai          | 0030                                                                   |
| Alaron        | 0179                                                                   |
| Ambassador    | 0177                                                                   |
| Ampro         | 0751                                                                   |
| Anam          | 0180                                                                   |
| AOC           | 0019, 0185, 0003                                                       |
| Audiovox      | 0451, 0092, 0180, 0003                                                 |
| Baysonic      | 0180                                                                   |
| Beaumark      | 0017, 0030, 0179                                                       |
| Belcor        | 0019                                                                   |
| Bell & Howell | 0154, 0016                                                             |
| Bradford      | 0180                                                                   |
| Brockwood     | 0019                                                                   |
| Candle        | 0056, 0030                                                             |
| Carnivale     | 0030                                                                   |
| Carver        | 0054                                                                   |
| Celebrity     | 0000                                                                   |
| Cineral       | 0451, 0092                                                             |
| Citizen       | 0060, 0092, 0030, 0056, 0039                                           |
| Clairtone     | 0185                                                                   |
| Concerto      | 0056                                                                   |
| Contec        | 0180, 0185                                                             |
| Craig         | 0180                                                                   |
| Crown         | 0180, 0039                                                             |
| Curtis Mathes | 0030, 0060, 0154, 0039, 0466, 1147, 1347                               |
| CXC           | 0180                                                                   |
| Daewoo        | 0451, 0092, 0019, 0039, 0624                                           |
| Daytron       | 0019                                                                   |
| Denon         | 0145                                                                   |
| Dumont        | 0017, 0019                                                             |
| Dwin          | 0720, 0774                                                             |
| Electroband   | 0000, 0185                                                             |
| Emerson       | 0463, 0236, 0180, 0019, 0154, 0177, 0178, 0179, 0185, 0282, 0039, 0624 |
| Envision      | 0030                                                                   |
| Fisher        | 0154, 0159                                                             |
| Fujitsu       | 0179                                                                   |
| Funai         | 0171, 0179, 0180                                                       |
| Futuretech    | 0180                                                                   |
| GE            | 0047, 0051, 0451, 0021, 0178, 0282, 0135, 1147, 1347                   |
| Gibraltar     | 0019, 0030, 0017                                                       |
| Goldstar      | 0019, 0030, 0178, 0039                                                 |
| Gradiente     | 0053, 0056                                                             |
| Grunpy        | 0179, 0180                                                             |
| Hallmark      | 0178                                                                   |
| Harvard       | 0180                                                                   |
| Hitachi       | 0145, 0151, 0056                                                       |
| Infinity      | 0054                                                                   |
| JBL           | 0054                                                                   |
| JCB           | 0000                                                                   |
| JVC           | 0053                                                                   |
| KEC           | 0180                                                                   |
| Kenwood       | 0019, 0030                                                             |
| Kloss         | 0024                                                                   |
| KTV           | 0030, 0180, 0185, 0032                                                 |

### Setup Codes For TVs (continued)

|            |                                                |
|------------|------------------------------------------------|
| LG         | 0056                                           |
| Logik      | 0016                                           |
| Luxman     | 0056                                           |
| LXI        | 0047, 0054, 0154, 0156, 0178                   |
| Magnasonic | 0179, 0030, 0092, 0093, 0019, 0003, 0054, 0156 |
| Magnavox   | 0054, 0096, 0187, 0030, 0179, 0171             |
| Majestic   | 0016                                           |
| Marantz    | 0054, 0030                                     |
| Matsushita | 0250                                           |
| Megatron   | 0145, 0178                                     |
| MEI        | 0185                                           |

|             |                                                                  |
|-------------|------------------------------------------------------------------|
| Memorex     | 0056, 0150, 0154, 0016, 0178                                     |
| MGA         | 0150, 0019, 0030, 0178                                           |
| Midland     | 0017, 0047, 0051, 0135, 0039                                     |
| Minutz      | 0021                                                             |
| Mitsubishi  | 0150, 0093, 0019, 0178                                           |
| Motorola    | 0093                                                             |
| MTC         | 0060, 0019, 0030, 0056, 0185                                     |
| Multitech   | 0180                                                             |
| NAD         | 0156, 0166, 0178                                                 |
| NEC         | 0019, 0030, 0056                                                 |
| Nikko       | 0030, 0092, 0178                                                 |
| NTC         | 0092                                                             |
| Onwa        | 0180                                                             |
| Optimus     | 0250, 0154, 0166                                                 |
| Optonica    | 0093, 0165                                                       |
| Orion       | 0236, 0436                                                       |
| Panasonic   | 0250, 0051                                                       |
| Penney      | 0047, 0156, 0051, 0030, 0019, 0021, 0060, 0135, 0178, 0039, 1347 |
| Philco      | 0054, 0145, 0096, 0019, 0030                                     |
| Philips     | 0054                                                             |
| Pilot       | 0019, 0030, 0039                                                 |
| Pioneer     | 0166                                                             |
| Portland    | 0092, 0019, 0039                                                 |
| Prism       | 0051                                                             |
| Proscan     | 0047                                                             |
| Proton      | 0178, 0466                                                       |
| Pulsar      | 0017, 0019                                                       |
| Quasar      | 0250, 0051, 0165                                                 |
| RadioShack  | 0047, 0056, 0154, 0019, 0030, 0165, 0178, 0180, 0039             |
| RCA         | 0047, 0019, 0090, 0135, 1047, 1147, 1247, 1347                   |
| Realistic   | 0056, 0154, 0019, 0030, 0165, 0178, 0180, 0039                   |
| Rhapsody    | 0185                                                             |
| Runco       | 0017, 0030, 0603                                                 |
| Sampo       | 0030, 0039                                                       |
| Samsung     | 0060, 0019, 0030, 0056, 0178, 0039                               |
| Samsux      | 0039                                                             |
| Sansei      | 0451                                                             |
| Sanyo       | 0154, 0159                                                       |
| Scimitsu    | 0019                                                             |
| Scotch      | 0178                                                             |
| Scott       | 0236, 0019, 0178, 0179, 0180                                     |
| Sears       | 0047, 0054, 0056, 0154, 0156, 0171, 0178, 0159, 0179             |
| Semivox     | 0180                                                             |
| Semp        | 0156                                                             |
| Sharp       | 0093, 0165, 0039                                                 |
| Shogun      | 0019                                                             |
| Signature   | 0016                                                             |
| Simpson     | 0187                                                             |
| Sony        | 0000                                                             |
| Soundesign  | 0178, 0179, 0180                                                 |
| Squareview  | 0171                                                             |
| SSS         | 0019, 0180                                                       |
| Starlite    | 0180                                                             |
| Supreme     | 0000                                                             |
| Sylvania    | 0054, 0096, 0030                                                 |
| Symphonic   | 0171                                                             |
| Tandy       | 0093                                                             |
| Technics    | 0250, 0051                                                       |
| Technol Ace | 0179                                                             |
| Techwood    | 0051, 0056                                                       |
| Teknika     | 0054, 0056, 0060, 0092, 0150, 0016, 0019, 0179, 0180, 0039       |
| Telefunken  | 0056                                                             |
| TMK         | 0056, 0177, 0178                                                 |
| Toshiba     | 0156, 0060, 0154                                                 |

## Setup Codes For TVs (continued)

|                 |                                                            |
|-----------------|------------------------------------------------------------|
| Tosonic         | 0185                                                       |
| Totevision      | 0039                                                       |
| Vector Research | 0030                                                       |
| Victor          | 0053                                                       |
| Vidikron        | 0054                                                       |
| Vidtech         | 0019, 0178                                                 |
| Viking          | 0046                                                       |
| Wards           | 0016, 0019, 0030, 0054, 0056, 0096, 0165, 0178, 0179, 0021 |
| White           |                                                            |
| Westinghouse    | 0451, 0463, 0236, 0180, 0624                               |
| Yamaha          | 0019, 0030                                                 |
| Zenith          | 0017, 0092, 0016                                           |

## Programming the *Cinema 6+* to operate your VCR:

Locate the brand name of your VCR in the "Setup Codes For VCRs" section (starting on the next page), and write it in the space below.

VCR Brand: \_\_\_\_\_

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 6+* to operate your VCR as follows:

1. Turn on your VCR and play a tape.
2. On the *Cinema 6+*, press **VCR** and release. Press and hold **SETUP** until the red light blinks twice, then release **SETUP**.
3. Enter the first four-digit VCR code listed for your brand. If you perform this procedure correctly, the red light will blink twice when entering the final digit.
4. Aim the *Cinema 6+* at your VCR and press **POWER**. Your VCR should turn off. If your original VCR remote control did not have a **POWER** key, press **STOP**. Your VCR should stop. If your VCR does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your VCR.  
  
***NOTE:** If you have tried all the codes listed for your brand and your VCR does not respond, try using the search method found on page 21.*
5. Your *Cinema 6+* is now programmed to operate your VCR. Write your VCR code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 6+* to operate your VCR, press the **VCR** key first.

## Setup Codes For VCRs

|           |                                    |
|-----------|------------------------------------|
| Admiral   | 0048, 0121, 0184, 0039, 0060, 0202 |
| Adventura | 0000                               |
| Aiko      | 0278                               |
| Aiwa      | 0037, 0000                         |
| Akai      | 0041                               |

|               |                              |
|---------------|------------------------------|
| American High | 0035                         |
| Asha          | 0240                         |
| Audiovox      | 0037                         |
| Beaumarck     | 0240                         |
| Bell & Howell | 0104                         |
| Broksonic     | 0184, 0209, 0479, 0002, 0121 |
| Calix         | 0037                         |

## Setup Codes For VCRs (continued)

|                 |                                                                                    |
|-----------------|------------------------------------------------------------------------------------|
| Canon           | 0035                                                                               |
| Carver          | 0081                                                                               |
| CCE             | 0072, 0278                                                                         |
| Cineral         | 0278                                                                               |
| Citizen         | 0037, 0278                                                                         |
| Colt            | 0072                                                                               |
| Craig           | 0072, 0240, 0037, 0047, 0271                                                       |
| Curtis Mathes   | 0035, 0041, 0060, 0202                                                             |
| Cybernex        | 0240                                                                               |
| Daewoo          | 0278, 0045                                                                         |
| Denon           | 0042                                                                               |
| Dynatech        | 0000                                                                               |
| Electrohome     | 0037                                                                               |
| Electroponic    | 0037                                                                               |
| Emerex          | 0032                                                                               |
| Emerson         | 0209, 0184, 0479, 0278, 0000, 0002, 0036, 0037, 0043, 0068, 0121, 0184, 0212       |
| Fisher          | 0104, 0047, 0066                                                                   |
| Fuji            | 0033, 0035                                                                         |
| Funai           | 0000                                                                               |
| Garrard         | 0000                                                                               |
| GE              | 0060, 0035, 0048, 0240                                                             |
| Goldstar        | 0037, 0038                                                                         |
| Go-Video        | 0432, 0526                                                                         |
| Gradiente       | 0000                                                                               |
| Harley Davidson | 0000                                                                               |
| Harman/Kardon   | 0038                                                                               |
| Harwood         | 0072, 0068, 0072                                                                   |
| Headquarter     | 0046                                                                               |
| HI-Q            | 0047                                                                               |
| Hitachi         | 0041, 0000, 0042                                                                   |
| Jensen          | 0041                                                                               |
| JVC             | 0041, 0067                                                                         |
| KEC             | 0037, 0278                                                                         |
| Kenwood         | 0038, 0041, 0067                                                                   |
| KLH             | 0072                                                                               |
| Kodak           | 0035, 0037                                                                         |
| Lloyd's         | 0000, 0208                                                                         |
| Logik           | 0072                                                                               |
| LXI             | 0037                                                                               |
| Magnasonic      | 0278, 0179, 0171, 0020, 0037, 0072, 0240                                           |
| Magnavox        | 0035, 0081, 0000, 0039, 0110, 0149                                                 |
| Magnin          | 0240                                                                               |
| Marantz         | 0035, 0081                                                                         |
| Marta           | 0037                                                                               |
| Matsushita      | 0162, 0035, 0454                                                                   |
| MEI             | 0035                                                                               |
| Memorex         | 0162, 0240, 0035, 0037, 0104, 0000, 0039, 0046, 0047, 0048, 1037, 1062, 1162, 1262 |
| MGA             | 0043, 0240                                                                         |
| MGN Technology  | 0240                                                                               |
| Minolta         | 0042                                                                               |
| Mitsubishi      | 0043, 0048, 0067                                                                   |
| Motorola        | 0035, 0048                                                                         |
| MTC             | 0240, 0000                                                                         |
| Multitech       | 0000, 0072                                                                         |
| NEC             | 0038, 0041, 0067, 0104                                                             |
| Nikko           | 0037                                                                               |
| Noblex          | 0240                                                                               |
| Olympus         | 0035                                                                               |
| Optimus         | 0162, 0048, 0037, 0104, 0454, 1037, 1062, 1162, 1262                               |
| Orion           | 0209, 0184, 0479, 0002                                                             |
| Panasonic       | 0162, 0035, 0077, 0225, 0454, 1062, 1162, 1262                                     |
| Penney          | 0035, 0037, 0038, 0042, 0240                                                       |
| Pentax          | 0042                                                                               |
| Philco          | 0035, 0209, 0479                                                                   |
| Philips         | 0035, 0081, 0110                                                                   |

|            |                                          |
|------------|------------------------------------------|
| Pilot      | 0037                                     |
| Pioneer    | 0067, 0162                               |
| Proscan    | 0060, 0202                               |
| Protec     | 0072                                     |
| Pulsar     | 0039                                     |
| Quarter    | 0046                                     |
| Quartz     | 0046                                     |
| Quasar     | 0162, 0035, 0077, 0454, 1062, 1162, 1262 |
| RadioShack | 0000, 0037, 1037, 1062, 1162, 1262       |
| Radix      | 0037                                     |

### Setup Codes For VCRs (continued)

|                 |                                                            |
|-----------------|------------------------------------------------------------|
| Randex          | 0037                                                       |
| RCA             | 0060, 0240, 0042, 0035, 0048, 0077, 0149                   |
| Realistic       | 0000, 0035, 0037, 0046, 0047, 0048, 0066, 0104             |
| Runco           | 0039                                                       |
| Samsung         | 0240, 0045                                                 |
| Sanky           | 0048, 0039                                                 |
| Sansui          | 0000, 0041, 0067, 0271, 0479                               |
| Sanyo           | 0104, 0046, 0047, 0054, 0240                               |
| Scott           | 0043, 0045, 0121, 0184, 0210                               |
| Sears           | 0000, 0035, 0037, 0042, 0046, 0047, 0066, 0104             |
| Semp            | 0045                                                       |
| Sharp           | 0048                                                       |
| Shintom         | 0072                                                       |
| Shogun          | 0240                                                       |
| Singer          | 0072                                                       |
| Sony            | 0032, 0033, 0000, 0035                                     |
| STS             | 0042                                                       |
| Sylvania        | 0035, 0081, 0043, 0000, 0110                               |
| Symphonic       | 0000                                                       |
| Tatung          | 0041                                                       |
| TEAC            | 0000, 0041                                                 |
| Technics        | 0162, 0035                                                 |
| Teknika         | 0000, 0035, 0037                                           |
| Thomas          | 0000                                                       |
| TMK             | 0240, 0036, 0208                                           |
| Toshiba         | 0043, 0045, 0066, 0210                                     |
| Totevision      | 0037, 0240                                                 |
| Unitech         | 0240                                                       |
| Vector Research | 0038                                                       |
| Vector          | 0045                                                       |
| Video Concepts  | 0040, 0045                                                 |
| Videosonic      | 0240                                                       |
| Wards           | 0000, 0035, 0042, 0047, 0048, 0060, 0072, 0081, 0149, 0240 |
| White           |                                                            |
| Westinghouse    | 0278, 0479, 0209, 0184                                     |
| XR-1000         | 0000, 0035, 0072                                           |
| Yamaha          | 0038                                                       |
| Zenith          | 0039, 0000, 0033                                           |

### Programming the Cinema 6+ to operate your TV/VCR Combo:

Locate the brand name of your TV/ VCR Combo in the "Setup Codes For TV/ VCR Combos" section (starting on the next page), and write it in the space below.

TV/VCR Combo Brand: \_\_\_\_\_

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your Cinema 6+ to operate your TV/VCR Combo as follows:

1. Turn on your TV/VCR Combo.
2. Press **VCR** and release. Press and hold **SETUP** until the Cinema 6+'s red light blinks twice, then release **SETUP**.

3. Enter the first four-digit TV/VCR code listed for your brand in the "Setup Codes For TV/VCR Combos" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
4. Aim the Cinema 6+ at your TV/VCR Combo and press **POWER**. The unit should turn off. If it does not respond, Repeat steps 2-4, trying each code listed for your brand until you find the one that operates your TV/VCR Combo.  
  
***NOTE:** If you have tried all the codes listed for your brand and your TV/VCR Combo does not respond, try using the search method found on page 21.*
5. Your Cinema 6+ is now programmed to operate your TV/VCR Combo. Write your TV/VCR Combo code in the boxes to the left for future reference.

Remember, to use your Cinema 6+ to operate your TV/VCR Combo, press the **VCR** key first.

### Setup Codes For TV/VCR Combos

|               |                           |
|---------------|---------------------------|
| American High | 0035*                     |
| Brocksonic    | 0002, 0294, 0479          |
| Colt          | 0072                      |
| Curtis Mathes | 0035*                     |
| Daewoo        | 0278*                     |
| Emerson       | 0002, 0294, 0479          |
| Funai         | 0000                      |
| GE            | 0035*, 0060*, 0048*, 0240 |
| Hitachi       | 0035*, 0000               |
| HQ            | 0000                      |
| Lloyds        | 0000                      |
| Magnavox      | 0000, 0035*, 0081*        |
| Magnin        | 0240                      |
| Memorex       | 0037, 0162*               |
| MGA           | 0240                      |
| Mitsubishi    | 0048*                     |
| Orion         | 0002, 0294, 0479          |
| Panasonic     | 0035*, 0162*              |
| Penney's      | 0035*, 0240, 0162*        |
| Quasar        | 0035*, 0162*              |
| RCA           | 0035*, 0060*, 0048*       |
| Sansui        | 0000, 0479                |
| Sanyo         | 0240                      |
| Sears         | 0000, 0037                |
| Sony          | 0032*                     |
| Symphonic     | 0000                      |
| Zenith        | 0000                      |

***NOTE:** If your TV/VCR works with one of the above codes highlighted with an asterisk (\*), you may need to program a separate TV code to control the volume. Check the list of codes below and follow the instructions in the "Programming the Cinema 6+ to Operate Your TV" section to program the supplied TV code.*

TV/VCRs working on VCR code 0032 may require TV code 0000 for volume control.  
TV/VCRs working on VCR code 0035 may require TV code 0051 for volume control.  
TV/VCRs working on VCR code 0048 may require

TV code 0093 for volume control.  
 TV/VCRs working on VCR code 0060 may require  
 TV code 0047 for volume control.  
 TV/VCRs working on VCR code 0081 may require  
 TV code 0054 for volume control.  
 TV/VCRs working on VCR code 0162 may require  
 TV code 0250 for volume control.  
 TV/VCRs working on VCR code 0278 may require  
 TV code 0451 for volume control.

### Programming the Cinema 6+ to operate your DVD or Laser Disc Player:

Locate the brand name of your DVD or Laser Disc Player in the DVD or Laser Disc Player setup codes (starting on the next page), and write it in the space below.

DVD/LD Player Brand: \_\_\_\_\_

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 6+* to operate your DVD or Laser Disc Player as follows:

1. Turn on your DVD or Laser Disc Player and insert a disc.
2. Press **DVD/LD** and release. Press and hold **SETUP** until the *Cinema 6+*'s red light blinks twice, then release **SETUP**.
3. Enter the first four-digit DVD or Laser Disc Player code listed for your brand. If performed correctly, the red light will blink twice when entering the final digit.
4. Aim the *Cinema 6+* at your DVD or Laser Disc Player and press **POWER**. Your DVD or Laser Disc Player should turn off. If it does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that works.

**NOTE:** If you have tried all the codes listed for your brand and your DVD or Laser Disc Player does not respond, try using the search method found on page 21.

5. Your *Cinema 6+* is now programmed to operate your DVD or Laser Disc Player. Write your DVD or Laser Disc Player code in the boxes to the left for future reference.

Remember, to use *Cinema 6+* to operate your DVD or Laser Disc Player, press the **DVD/LD** key first.

### Setup Codes for DVD Players

|            |            |
|------------|------------|
| JVC        | 0558       |
| Kenwood    | 0534       |
| Magnavox   | 0503       |
| Mitsubishi | 0521       |
| Onkyo      | 0503       |
| Panasonic  | 0490       |
| Philips    | 0539, 0503 |
| Pioneer    | 0525, 0571 |
| Proscan    | 0522       |
| RCA        | 0522       |
| Samsung    | 0573       |
| Sony       | 0533       |
| Technics   | 0490       |
| Toshiba    | 0503       |
| Yamaha     | 0490, 0545 |
| Zenith     | 0503, 0591 |

### Setup Codes for Laser Disc Players

|            |            |
|------------|------------|
| Denon      | 0059       |
| Mitsubishi | 0059       |
| NAD        | 0059       |
| Pioneer    | 0059       |
| Sony       | 0193, 0201 |

### Programming the Cinema 6+ to operate your Receiver/Tuner:

Locate the brand name of your Receiver/Tuner in the "Setup Codes For Receiver/Tuners" section (starting below page), and write it in below.

Receiver/Tuner Brand: \_\_\_\_\_

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 6+* to operate your Receiver/Tuner as follows:

1. Turn on your Receiver/Tuner.
2. Press **RCVR** and release. Press and hold **SETUP** until the *Cinema 6+*'s red light blinks twice, then release **SETUP**.
3. Enter the first four-digit Receiver/Tuner code listed for your brand in the "Setup Codes For Receivers/Tuners" section. If performed correctly, the red light will blink twice when you enter the final digit.
4. Aim the *Cinema 6+* at your Receiver/Tuner and press **POWER**. The unit should turn off. If it does not respond, repeat steps 2-4, trying each code listed for your brand until you find one that works.

**NOTE:** If the unit still does not respond, try using the search method on page 21.

5. Your *Cinema 6+* is now programmed to operate your Receiver/Tuner. Write your Receiver/Tuner code in the boxes to the left for future reference.

Remember, to use your *Cinema 6+* to operate your Receiver/Tuner, press the **RCVR** key first.

### Setup Codes For Receivers/Tuners

|                |                                                |
|----------------|------------------------------------------------|
| ADC            | 0531                                           |
| Akai           | 0076                                           |
| Aiwa           | 0121, 0158, 0189, 0405                         |
| Bang & Olufsen | 0898                                           |
| Capetronic     | 0531                                           |
| Carver         | 0008, 0042, 0189, 0360                         |
| Casio          | 0195                                           |
| Clarinette     | 0195                                           |
| Curtis Mathes  | 0039, 0080                                     |
| Denon          | 0004                                           |
| Fisher         | 0042, 0360                                     |
| Garrard        | 0463                                           |
| Harman/Kardon  | 0110, 0891, 0189                               |
| JBL            | 0110                                           |
| JVC            | 0074                                           |
| Kenwood        | 0027, 0313, 0314, 0186, 0042                   |
| Linn           | 0189                                           |
| Lloyd's        | 0195                                           |
| LXI            | 0181                                           |
| Magnavox       | 0189, 0195, 0531, 0391                         |
| Marantz        | 0039, 0189                                     |
| MCS            | 0039                                           |
| Modulaire      | 0195                                           |
| NAD            | 0320                                           |
| Nakamichi      | 0097                                           |
| Onkyo          | 0135, 0380                                     |
| Optimus        | 0042, 0080, 0181, 0186, 0531, 0670, 0738, 0801 |
| Panasonic      | 0039, 0309, 0518                               |

#### Setup Codes For Receivers/Tuners (continued)

|            |                                    |
|------------|------------------------------------|
| Penney     | 0195                               |
| Philips    | 0189                               |
| Pioneer    | 0014, 0080, 0150, 0531, 0630, 1023 |
| Quasar     | 0039                               |
| RCA        | 0054, 0360, 0531, 0530             |
| Realistic  | 0181, 0195                         |
| Sansui     | 0189                               |
| Scott      | 0322                               |
| Sharp      | 0186                               |
| Sherwood   | 0491, 0502                         |
| Sony       | 0158**, 0474                       |
| Soundesign | 0670                               |
| TEAC       | 0463                               |
| Technics   | 0039, 0309, 0518                   |
| Victor     | 0074                               |
| Wards      | 0014, 0042, 0054, 0080, 0158, 0189 |
| Yamaha     | 0176, 0186                         |
| Yorx       | 0195                               |
| Zenith     | 0857                               |

\*\*May use Misc. Audio code 0159 to operate surround and tuner presets. See page 23 for misc. audio setup and codes.

#### Programming the Cinema 6+ to operate your CD Player:

Locate the brand name of your CD Player in the "Setup Codes For CD Players" section (starting on the next page), and write it in the space below.

CD Player Brand: \_\_\_\_\_

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 6+* to operate your CD Player as follows:

1. Turn on your CD Player and insert a disc.
2. Press **CD** and release. Press and hold **SETUP** until the *Cinema 6+*'s red light blinks twice, then release **SETUP**.
3. Enter the first four-digit CD Player code listed for your brand. If performed correct-

ly, the red light will blink twice when you enter the final digit of your code.

4. Aim the *Cinema 6+* at your CD Player and press **PL** (Play). Your CD Player should play your disc. If it does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your CD Player.

**NOTE:** If you have tried all the codes listed for your brand and your CD Player does not respond, try using the search method found on page 21.

5. Your *Cinema 6+* is now programmed to operate your CD Player. Write your CD Player code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 6+* to operate your CD Player, press the **CD** key first.

#### Setup Codes For CD Players

|                      |                                                      |
|----------------------|------------------------------------------------------|
| Aiwa                 | 0124, 0157                                           |
| Bang & Olufsen       | 0212                                                 |
| Burmester            | 0420                                                 |
| California Audio Lab | 0029                                                 |
| Carver               | 0157, 0179, 0437                                     |
| Denon                | 0003, 0873                                           |
| DKK                  | 0000                                                 |
| Emerson              | 0305                                                 |
| Fisher               | 0174, 0179                                           |
| Garrard              | 0393, 0420                                           |
| Genexxa              | 0032, 0305                                           |
| Harman/Kardon        | 0173                                                 |
| Hitachi              | 0032                                                 |
| H/K                  | 0157                                                 |
| JVC                  | 0072                                                 |
| Kenwood              | 0028, 0037, 0190, 0826, 0681                         |
| Krell                | 0157                                                 |
| Linn                 | 0157                                                 |
| LXI                  | 0305                                                 |
| Magnavox             | 0157, 0305                                           |
| Magnavox CD-R        | 0626                                                 |
| Marantz              | 0029, 0157, 0180                                     |
| MCS                  | 0029                                                 |
| Mission              | 0157                                                 |
| MTC                  | 0420                                                 |
| Nikko                | 0174                                                 |
| NSM                  | 0157                                                 |
| Onkyo                | 0101, 0868                                           |
| Optimus              | 0000, 0032, 0037, 0145, 0179, 0305, 0420, 0437, 0468 |
| Panasonic            | 0029                                                 |
| Philips              | 0157, 0626                                           |
| Pioneer              | 0032, 0468, 0244, 0305                               |
| Proton               | 0157                                                 |
| QED                  | 0157                                                 |
| Quasar               | 0029                                                 |
| RCA                  | 0764, 0053, 0179, 0305                               |
| Realistic            | 0179, 0180, 0420                                     |
| Rotel                | 0157, 0420                                           |
| SAE                  | 0157                                                 |
| Sansui               | 0157, 0305                                           |
| Sanyo                | 0179                                                 |
| Scott                | 0305                                                 |
| Sears                | 0305                                                 |
| Sharp                | 0037, 0180, 0861                                     |

|            |                              |
|------------|------------------------------|
| Sherwood   | 0180                         |
| Sony       | 0000, 0185, 0490, 0604, 0605 |
| Soundesign | 0145                         |
| Tascam     | 0420                         |
| TEAC       | 0174, 0180, 0393, 0420       |
| Technics   | 0029                         |
| Victor     | 0072                         |
| Wards      | 0157, 0053                   |
| Yamaha     | 0036, 0187                   |
| Yorx       | 0461                         |

### Programming the *Cinema 6+* to operate your Cable Converter or Satellite Receiver:

Locate the brand name of your Cable Converter or Satellite Receiver in the "Setup Codes for Cable Converters" or "Setup Codes for Satellite Receivers" section (starting on the next page), and write it in either space below.

Cable Converter Brand: \_\_\_\_\_

or

Satellite Receiver Brand: \_\_\_\_\_

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 6+* to operate your Cable Converter or Satellite Receiver as follows:

1. Turn on your Cable Converter or Satellite Receiver.
2. Press **CBL/SAT** and release. Press and hold **SETUP** until the *Cinema 6+*'s red light blinks twice, then release **SETUP**.
3. Enter the first four-digit Cable Converter or Satellite Receiver code listed. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
4. Aim the *Cinema 6+* at your Cable Converter or Satellite Receiver and press **POWER**. Your Cable Converter or Satellite Receiver should turn off. If it does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Cable Converter or Satellite Receiver.

**NOTE:** If you have tried all the codes listed for your brand and your Cable Converter or Satellite Receiver does not respond, try using the search method found on page 21.

5. Your *Cinema 6+* is now programmed to operate your Cable Converter or Satellite Receiver. Write your Cable Converter or Satellite Receiver code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 6+* to operate your Cable Converter or Satellite Receiver, press the **CBL/SAT** key first.

### Setup Codes for Cable Converters

|                    |                                                |
|--------------------|------------------------------------------------|
| ABC                | 0003, 0008, 0014, 0007, 0001, 0011, 0013, 0017 |
| Allegro            | 0153, 0315                                     |
| Gantronix          | 0022, 0207                                     |
| Archer             | 0797, 0153, 0022, 0207                         |
| Belcor             | 0056                                           |
| Cable Star         | 0056                                           |
| Cabletenna         | 0022                                           |
| Cableview          | 0022                                           |
| Century            | 0153                                           |
| Citizen            | 0153, 0315                                     |
| Colour Voice       | 0031                                           |
| Comtronics         | 0040                                           |
| Contec             | 0019                                           |
| Digi               | 0637                                           |
| Eastern            | 0002                                           |
| Emerson            | 0797                                           |
| Everquest          | 0015, 0040                                     |
| Focus              | 0400                                           |
| Garrard            | 0153                                           |
| GC Electronics     | 0056, 0207                                     |
| Gemini             | 0015                                           |
| General Instrument | 0476, 0003, 0014, 0011, 0276, 0810             |
| Goldstar           | 0144, 0040                                     |
| Goodmind           | 0797                                           |
| Hamlin             | 0259, 0009, 0020, 0034                         |
| Hitachi            | 0011                                           |
| Hytex              | 0007                                           |
| Jasco              | 0153, 0315, 0015                               |
| Jerrold            | 0476, 0003, 0014, 0011, 0012, 0015, 0810       |
| Linsay             | 0440                                           |
| Magnavox           | 0027, 0014                                     |
| Memorex            | 0000                                           |
| Movie Time         | 0063, 0156                                     |
| Novaplex           | 0618                                           |

### Setup Codes for Cable Converters (continued)

|                    |                        |
|--------------------|------------------------|
| NSC                | 0063, 0156             |
| Oak                | 0007, 0019             |
| Optimus            | 0021                   |
| Panasonic          | 0021, 0107, 0000       |
| Panther            | 0637                   |
| Paragon            | 0000                   |
| Philips            | 0153, 0027, 0031       |
| Pioneer            | 0144, 0023, 0533       |
| Popular Mechanics  | 0400                   |
| Prelude            | 0770                   |
| Pulsar             | 0000                   |
| RadioShack         | 0015, 0315, 0797, 0833 |
| RCA                | 0021                   |
| Realistic          | 0207                   |
| Recoton            | 0400                   |
| Regal              | 0259, 0020             |
| Regency            | 0002                   |
| Rembrandt          | 0011                   |
| Runco              | 0000                   |
| Samsung            | 0144, 0040             |
| Scientific Atlanta | 0477, 0008, 0017       |
| Seam               | 0510                   |
| Signal             | 0015, 0040             |
| Signature          | 0011                   |
| SL Marx            | 0040                   |
| Sprucer            | 0021                   |
| Starcom            | 0003, 0015             |
| Stargate           | 0015, 0040, 0797       |
| Starquest          | 0015                   |
| Sylvania           | 0001                   |

|                |                              |
|----------------|------------------------------|
| Tandy          | 0258                         |
| Teleview       | 0040                         |
| Texscan        | 0001                         |
| TFC            | 0310                         |
| Timeless       | 0418                         |
| Tocom          | 0012, 0013                   |
| Toshiba        | 0000                         |
| Tusa           | 0015                         |
| TV86           | 0063                         |
| Unika          | 0153, 0022, 0207             |
| United Artists | 0007                         |
| United Cable   | 0003                         |
| Universal      | 0153, 0022, 0056, 0191, 0207 |
| Videoway       | 0250                         |
| Viewstar       | 0063, 0027, 0258             |
| Zenith         | 0525, 0000, 0015, 0207, 0008 |
| Zentek         | 0400                         |

### **Setup Codes for Satellites**

|                   |                  |
|-------------------|------------------|
| AlphaStar DBS     | 0772             |
| Chaparral         | 0216             |
| Echostar DBS      | 0775             |
| ExpressVu DBS     | 0775             |
| General           |                  |
| Instrument        | 0361, 0627, 0869 |
| Hitachi DBS       | 0819             |
| HTS DBS           | 0775             |
| Hughes Network    |                  |
| Systems DBS       | 0749             |
| Jerrold Primestar | 0627             |
| Jerrold           | 0361             |
| JVC               | 0775             |
| Magnavox DBS      | 0722, 0724       |
| Memorex DBS       | 0724             |
| Panasonic DBS     | 0701             |
| Philips DBS       | 0722, 0724       |
| Primestar         | 0361, 0627       |
| Proscan           | 0566             |
| RCA DSS           | 0566, 0143, 0855 |
| Sony DBS          | 0639             |
| Star Choice DBS   | 0869             |
| STS               | 0210             |
| Toshiba DBS       | 0790             |
| Uniden DBS        | 0724, 0722       |
| Zenith            | 0856             |