

Set-up codes for the URC 7800 / Cinema 7+

Setup Codes For TVs

Admiral	0093, 0179, 0180, 0016, 0047
Aiko	0092
Akai	0030
Alaron	0179
Ambassador	0177
Ampro	0751
Anam	0180
AOC	0019, 0185, 0003
Audiovox	0451, 0092, 0180, 0003
Baysonic	0180
Beaumont	0017, 0030, 0179
Belcor	0019
Bell & Howell	0154, 0016
Bradford	0180
Brockwood	0019
Candle	0056, 0030
Carnivale	0030
Carver	0054
Celebrity	0000
Cineral	0451, 0092
Citizen	0060, 0092, 0030, 0056, 0039
Clairtone	0185
Concerto	0056
Contec	0180, 0185
Craig	0180
Crown	0180, 0039
Curtis Mathes	0030, 0060, 0154, 0039, 0466, 1147, 1347
CXC	0180
Daewoo	0451, 0092, 0019, 0039, 0624
Daytron	0019
Denon	0145
Dumont	0017, 0019
Dwin	0720, 0774
Electroband	0000, 0185
Emerson	0463, 0236, 0180, 0019, 0154, 0177, 0178, 0179, 0185, 0282, 0039, 0624
Envision	0030
Fisher	0154, 0159
Fujitsu	0179
Funai	0171, 0179, 0180
Futuretech	0180
GE	0047, 0051, 0451, 0021, 0178, 0282, 0135, 1147, 1347
Gibraltar	0019, 0030, 0017
Goldstar	0019, 0030, 0178, 0039
Gradiente	0053, 0056
Grunpy	0179, 0180
Hallmark	0178
Harvard	0180
Hitachi	0145, 0151, 0056
Infinity	0054
JBL	0054
JCB	0000
JVC	0053
KEC	0180
Kenwood	0019, 0030
Kloss	0024
KTV	0030, 0180, 0185, 0032

Setup Codes For TVs (continued)

LG	0056
Logik	0016
Luxman	0056
LXI	0047, 0054, 0154, 0156, 0178
Magnasonic	0179, 0030, 0092, 0093, 0019, 0003, 0054, 0156
Magnavox	0054, 0096, 0187, 0030, 0179, 0171
Majestic	0016
Marantz	0054, 0030
Matsushita	0250
Megatron	0145, 0178
MEI	0185
Memorex	0056, 0150, 0154, 0016, 0178
MGA	0150, 0019, 0030, 0178
Midland	0017, 0047, 0051, 0135, 0039
Minutz	0021
Mitsubishi	0150, 0093, 0019, 0178
Motorola	0093
MTC	0060, 0019, 0030, 0056, 0185

Multitech	0180
NAD	0156, 0166, 0178
NEC	0019, 0030, 0056
Nikko	0030, 0092, 0178
NTC	0092
Onwa	0180
Optimus	0250, 0154, 0166
Optonica	0093, 0165
Orion	0236, 0436
Panasonic	0250, 0051
Penney	0047, 0156, 0051, 0030, 0019, 0021, 0060, 0135, 0178, 0039, 1347
Philco	0054, 0145, 0096, 0019, 0030
Philips	0054
Pilot	0019, 0030, 0039
Pioneer	0166
Portland	0092, 0019, 0039
Prism	0051
Proscan	0047
Proton	0178, 0466
Pulsar	0017, 0019
Quasar	0250, 0051, 0165
RadioShack	0047, 0056, 0154, 0019, 0030, 0165, 0178, 0180, 0039
RCA	0047, 0019, 0090, 0135, 1047, 1147, 1247, 1347
Realistic	0056, 0154, 0019, 0030, 0165, 0178, 0180, 0039
Rhapsody	0185
Runco	0017, 0030, 0603
Sampo	0030, 0039
Samsung	0060, 0019, 0030, 0056, 0178, 0039
Samsux	0039
Sansei	0451
Sanyo	0154, 0159
Scimitaru	0019
Scotch	0178
Scott	0236, 0019, 0178, 0179, 0180
Sears	0047, 0054, 0056, 0154, 0156, 0171, 0178, 0159, 0179
Semivox	0180
Semp	0156
Sharp	0093, 0165, 0039
Shogun	0019
Signature	0016
Simpson	0187
Sony	0000
Soundesign	0178, 0179, 0180
Squareview	0171
SSS	0019, 0180
Starlite	0180
Supreme	0000
Sylvania	0054, 0096, 0030
Symphonic	0171
Tandy	0093
Technics	0250, 0051
Technol Ace	0179
Techwood	0051, 0056
Teknika	0054, 0056, 0060, 0092, 0150, 0016, 0019, 0179, 0180, 0039
Telefunken	0056
TMK	0056, 0177, 0178
Toshiba	0156, 0060, 0154

Setup Codes For TVs (continued)

Tosonic	0185
Totevision	0039
Vector Research	0030
Victor	0053
Vidikron	0054
Vidtech	0019, 0178
Viking	0046
Wards	0016, 0019, 0030, 0054, 0056, 0096, 0165, 0178, 0179, 0021
White	
Westinghouse	0451, 0463, 0236, 0180, 0624
Yamaha	0019, 0030
Zenith	0017, 0092, 0016

Programming the *Cinema 7+*™ to operate your VCR:

Locate the brand name of your VCR in the "Setup Codes

For VCRs" section (starting below), and write it in the space below.

VCR Brand: _____

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7+™* to operate your VCR as follows:

1. Turn on your VCR and play a tape.
2. On the *Cinema 7+™*, press **VCR** and release. Press and hold **SETUP** until the red light blinks twice, then release **SETUP**.
3. Enter the first four-digit VCR code listed for your brand. If you perform this procedure correctly, the red light will blink twice when entering the final digit.
4. Aim the *Cinema 7+™* at your VCR and press **POWER**. Your VCR should turn off. If your original VCR remote control did not have a POWER key, press **STOP**. Your VCR should stop. If your VCR does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your VCR.

NOTE: If you have tried all the codes listed for your brand and your VCR does not respond, try using the search method found on page 22.

5. Your *Cinema 7+™* is now programmed to operate your VCR. Write your VCR code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 7+™* to operate your VCR, press the **VCR** key first.

Setup Codes For VCRs

Admiral	0048, 0121, 0184, 0039, 0060, 0202
Adventura	0000
Aiko	0278
Aiwa	0037, 0000
Akai	0041
American High	0035
Asha	0240
Audiovox	0037
Beaumont	0240
Bell & Howell	0104
Broksonic	0184, 0209, 0479, 0002, 0121
Calix	0037

Setup Codes For VCRs (continued)

Canon	0035
Carver	0081
CCE	0072, 0278
Cineral	0278
Citizen	0037, 0278
Colt	0072
Craig	0072, 0240, 0037, 0047, 0271
Curtis Mathes	0035, 0041, 0060, 0202
Cybernex	0240
Daewoo	0278, 0045

Denon	0042
Dynatech	0000
Electrohome	0037
Electrohome	0037
Emerex	0032
Emerson	0209, 0184, 0479, 0278, 0000, 0002, 0036, 0037, 0043, 0068, 0121, 0184, 0212
Fisher	0104, 0047, 0066
Fuji	0033, 0035
Funai	0000
Garrard	0000
GE	0060, 0035, 0048, 0240
Goldstar	0037, 0038
Go-Video	0432, 0526
Gradiente	0000
Harley Davidson	0000
Harman/Kardon	0038
Harwood	0072, 0068, 0072
Headquarter	0046
HI-Q	0047
Hitachi	0041, 0000, 0042
Jensen	0041
JVC	0041, 0067
KEC	0037, 0278
Kenwood	0038, 0041, 0067
KLH	0072
Kodak	0035, 0037
Lloyd's	0000, 0208
Logik	0072
LXI	0037
Magnasonic	0278, 0179, 0171, 0020, 0037, 0072, 0240
Magnavox	0035, 0081, 0000, 0039, 0110, 0149
Magnin	0240
Marantz	0035, 0081
Marta	0037
Matsushita	0162, 0035, 0454
MEI	0035
Memorex	0162, 0240, 0035, 0037, 0104, 0000, 0039, 0046, 0047, 0048, 1037, 1062, 1162, 1262
MGA	0043, 0240
MGN Technology	0240
Minolta	0042
Mitsubishi	0043, 0048, 0067
Motorola	0035, 0048
MTC	0240, 0000
Multitech	0000, 0072
NEC	0038, 0041, 0067, 0104
Nikko	0037
Noblex	0240
Olympus	0035
Optimus	0162, 0048, 0037, 0104, 0454, 1037, 1062, 1162, 1262
Orion	0209, 0184, 0479, 0002
Panasonic	0162, 0035, 0077, 0225, 0454, 1062, 1162, 1262
Penney	0035, 0037, 0038, 0042, 0240
Pentax	0042
Philco	0035, 0209, 0479
Philips	0035, 0081, 0110
Pilot	0037
Pioneer	0067, 0162
Proscan	0060, 0202
Protec	0072
Pulsar	0039
Quarter	0046
Quartz	0046
Quasar	0162, 0035, 0077, 0454, 1062, 1162, 1262
RadioShack	0000, 0037, 1037, 1062, 1162, 1262
Radix	0037

Setup Codes For VCRs (continued)

Randex	0037
RCA	0060, 0240, 0042, 0035, 0048, 0077, 0149
Realistic	0000, 0035, 0037, 0046, 0047, 0048, 0066, 0104

Runco	0039
Samsung	0240, 0045
Sanky	0048, 0039
Sansui	0000, 0041, 0067, 0271, 0479
Sanyo	0104, 0046, 0047, 0054, 0240
Scott	0043, 0045, 0121, 0184, 0210
Sears	0000, 0035, 0037, 0042, 0046, 0047, 0066, 0104
Semp	0045
Sharp	0048
Shintom	0072
Shogun	0240
Singer	0072
Sony	0032, 0033, 0000, 0035
STS	0042
Sylvania	0035, 0081, 0043, 0000, 0110
Symphonic	0000
Tatung	0041
TEAC	0000, 0041
Technics	0162, 0035
Teknika	0000, 0035, 0037
Thomas	0000
TMK	0240, 0036, 0208
Toshiba	0043, 0045, 0066, 0210
Totevision	0037, 0240
Unitech	0240
Vector Research	0038
Vector	0045
Video Concepts	0040, 0045
Videosonic	0240
Wards	0000, 0035, 0042, 0047, 0048, 0060, 0072, 0081, 0149, 0240
White	
Westinghouse	0278, 0479, 0209, 0184
XR-1000	0000, 0035, 0072
Yamaha	0038
Zenith	0039, 0000, 0033

Programming the Cinema 7+™ to operate your TV/VCR Combo:

Locate the brand name of your TV/ VCR Combo in the "Setup Codes For TV/ VCR Combos" section (starting on the next page), and write it in the space below.

TV/VCR Combo Brand: _____

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your Cinema 7+™ to operate your TV/VCR Combo as follows:

1. Turn on your TV/VCR Combo.
2. Press **VCR** and release. Press and hold **SETUP** until the Cinema 7+™'s red light blinks twice, then release **SETUP**.
3. Enter the first four-digit TV/VCR code listed for your brand in the "Setup Codes For TV/VCR Combos" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
4. Aim the Cinema 7+™ at your TV/VCR Combo and press **POWER**. The unit should turn off. If it does not respond, Repeat steps 2-4, trying each code listed for your brand until you find the one that operates your

TV/VCR Combo.

NOTE: If you have tried all the codes listed for your brand and your TV/VCR Combo does not respond, try using the search method found on page 22.

5. Your Cinema 7+™ is now programmed to operate your TV/VCR Combo. Write your TV/VCR Combo code in the boxes to the left for future reference.

Remember, to use your Cinema 7+™ to operate your TV/VCR Combo, press the **VCR** key first.

Setup Codes For TV/VCR Combos

American High	0035*
Brocksonic	0002, 0294, 0479
Colt	0072
Curtis Mathes	0035*
Daewoo	0278*
Emerson	0002, 0294, 0479
Funai	0000
GE	0035*, 0060*, 0048*, 0240
Hitachi	0035*, 0000
HQ	0000
Lloyds	0000
Magnavox	0000, 0035*, 0081*
Magnin	0240
Memorex	0037, 0162*
MGA	0240
Mitsubishi	0048*
Orion	0002, 0294, 0479
Panasonic	0035*, 0162*
Penney's	0035*, 0240, 0162*
Quasar	0035*, 0162*
RCA	0035*, 0060*, 0048*
Sansui	0000, 0479
Sanyo	0240
Sears	0000, 0037
Sony	0032*
Symphonic	0000
Zenith	0000

NOTE: If your TV/VCR works with one of the above codes highlighted with an asterisk (*), you may need to program a separate TV code to control the volume. Check the list of codes below and follow the instructions in the "Programming the Cinema 7+™ to Operate Your TV" section to program the supplied TV code.

TV/VCRs working on VCR code 0032 may require TV code 0000 for volume control.

TV/VCRs working on VCR code 0035 may require TV code 0051 for volume control.

TV/VCRs working on VCR code 0048 may require TV code 0093 for volume control.

TV/VCRs working on VCR code 0060 may require TV code 0047 for volume control.

TV/VCRs working on VCR code 0081 may require TV code 0054 for volume control.

TV/VCRs working on VCR code 0162 may require TV code 0250 for volume control.

TV/VCRs working on VCR code 0278 may require TV code 0451 for volume control.

Programming the Cinema 7+™ to operate your DVD or

Laser Disc Player:

Locate the brand name of your DVD or Laser Disc Player in the DVD or Laser Disc Player setup codes (starting below), and write it in the space below.

DVD/LD Player Brand: _____

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7+™* to operate your DVD or Laser Disc Player as follows:

1. Turn on your DVD or Laser Disc Player and insert a disc.
2. Press **DVD/LD** and release. Press and hold **SETUP** until the *Cinema 7+™*'s red light blinks twice, then release **SETUP**.
3. Enter the first four-digit DVD or Laser Disc Player code listed for your brand. If performed correctly, the red light will blink twice when entering the final digit.
4. Aim the *Cinema 7+™* at your DVD or LaserDisc Player and press **POWER**. Your DVD or Laser Disc Player should turn off. If it does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that works.

NOTE: If you have tried all the codes listed for your brand and your DVD or Laser Disc Player does not respond, try using the search method found on page 22.

5. Your *Cinema 7+™* is now programmed to operate your DVD or Laser Disc Player. Write your DVD or Laser Disc Player code in the boxes to the left for future reference.

Remember, to use *Cinema 7+™* to operate your DVD or Laser Disc Player, press the **DVD/LD** key first.

Setup Codes for DVD Players

JVC	0558
Kenwood	0534
Magnavox	0503
Mitsubishi	0521
Onkyo	0503
Panasonic	0490
Philips	0539, 0503
Pioneer	0525, 0571
Proscan	0522
RCA	0522
Samsung	0573
Sony	0533
Technics	0490
Toshiba	0503
Yamaha	0490, 0545
Zenith	0503

Setup Codes for Laser Disc Players

Denon	0059
Mitsubishi	0059
NAD	0059
Pioneer	0059
Sony	0193, 0201

Programming the *Cinema 7+™* to operate your Receiver/Tuner:

Locate the brand name of your Receiver/Tuner in the "Setup Codes For Receiver/Tuners" section (starting below), and write it in below.

Receiver/Tuner Brand: _____

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7+™* to operate your Receiver/Tuner as follows:

1. Turn on your Receiver/Tuner.
2. Press **RCVR** and release. Press and hold **SETUP** until the *Cinema 7+™*'s red light blinks twice, then release **SETUP**.
3. Enter the first four-digit Receiver/Tuner code listed for your brand in the "Setup Codes For Receivers/Tuners" section. If performed correctly, the red light will blink twice when you enter the final digit.
4. Aim the *Cinema 7+™* at your Receiver/Tuner and press **POWER**. The unit should turn off. If it does not respond, repeat steps 2-4, trying each code listed for your brand until you find one that works.

NOTE: If the unit still does not respond, try using the search method on page 22.

5. Your *Cinema 7+™* is now programmed to operate your Receiver/Tuner. Write your Receiver/Tuner code in the boxes to the left for future reference.

Remember, to use your *Cinema 7+™* to operate your Receiver/Tuner, press the **RCVR** key first.

Setup Codes For Receivers/Tuners

ADC	0531
Akai	0076
Aiwa	0121, 0158, 0189, 0405
Bang & Olufsen	0898
Capetronic	0531
Carver	0008, 0042, 0189, 0360
Casio	0195
Clarinette	0195
Curtis Mathes	0039, 0080
Denon	0004
Fisher	0042, 0360
Garrard	0463
Harman/Kardon	0110, 0891, 0189
JBL	0110
JVC	0074
Kenwood	0027, 0313, 0314, 0186, 0042
Linn	0189

Lloyd's	0195
LXI	0181
Magnavox	0189, 0195, 0531, 0391
Marantz	0039, 0189
MCS	0039
Modulaire	0195
NAD	0320
Nakamichi	0097
Onkyo	0135, 0380
Optimus	0042, 0080, 0181, 0186, 0531, 0670, 0738, 0801
Panasonic	0039, 0309, 0518

Setup Codes For Receivers/Tuners (continued)

Penney	0195
Philips	0189
Pioneer	0014*, 0080*, 0150, 0531, 0630, 1023
Quasar	0039
RCA	0054, 0360, 0531, 0530
Realistic	0181, 0195
Sansui	0189
Scott	0322
Sharp	0186
Sherwood	0491, 0502
Sony	0158**, 0474
Soundesign	0670
TEAC	0463
Technics	0039, 0309, 0518
Victor	0074
Wards	0014, 0042, 0054, 0080, 0158, 0189
Yamaha	0176, 0186
Yorx	0195
Zenith	0857

*May use Amplifier code 0013 for power and volume. See page 21 for amplifier setup and codes.

**May use Misc. Audio code 0159 to operate surround and tuner presets. See page 24 for misc. audio setup and codes.

Programming the Cinema 7+™ to operate your CD Player:

Locate the brand name of your CD Player in the "Setup Codes For CD Players" section (starting on the next page), and write it in the space below.

CD Player Brand: _____

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your Cinema 7+™ to operate your CD Player as follows:

1. Turn on your CD Player and insert a disc.
2. Press **CD** and release. Press and hold **SETUP** until the Cinema 7+™'s red light blinks twice, then release **SETUP**.
3. Enter the first four-digit CD Player code listed for your brand. If performed correctly, the red light will blink twice when you enter the final digit of your code.
4. Aim the Cinema 7+™ at your CD Player and press **PL** (Play). Your CD Player should play your disc. If it does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your CD Player.

NOTE: If you have tried all the codes listed for your brand and your CD Player does not respond, try using the search method found on page 22.

5. Your Cinema 7+™ is now programmed to operate your CD Player. Write your CD Player code in the boxes to the left for future reference.

Remember, if you want to use your Cinema 7+™ to operate your CD Player, press the **CD** key first.

Setup Codes For CD Players

Aiwa	0124, 0157
Bang & Olufsen	0212
Burmester	0420
California Audio Lab	0029
Carver	0157, 0179, 0437
Denon	0003, 0873
DKK	0000
Emerson	0305
Fisher	0174, 0179
Garrard	0393, 0420
Genexxa	0032, 0305
Harman/Kardon	0173
Hitachi	0032
H/K	0157
JVC	0072
Kenwood	0028, 0037, 0190, 0826, 0681
Krell	0157
Linn	0157
LXI	0305
Magnavox	0157, 0305
Magnavox CD-R	0626
Marantz	0029, 0157, 0180
MCS	0029
Mission	0157
MTC	0420
Nikko	0174
NSM	0157
Onkyo	0101, 0868
Optimus	0000, 0032, 0037, 0145, 0179, 0305, 0420, 0437, 0468
Panasonic	0029
Philips	0157, 0626
Pioneer	0032, 0468, 0244, 0305
Proton	0157
QED	0157
Quasar	0029
RCA	0764, 0053, 0179, 0305
Realistic	0179, 0180, 0420
Rotel	0157, 0420
SAE	0157
Sansui	0157, 0305
Sanyo	0179
Scott	0305
Sears	0305
Sharp	0037, 0180, 0861
Sherwood	0180
Sony	0000, 0185, 0490, 0604, 0605
Soundesign	0145
Tascam	0420
TEAC	0174, 0180, 0393, 0420
Technics	0029
Victor	0072
Wards	0157, 0053
Yamaha	0036, 0187
Yorx	0461

Programming the *Cinema 7+™* to operate your Cable Converter or Satellite Receiver:

Locate the brand name of your Cable Converter or Satellite Receiver in the "Setup Codes for Cable Converters" or "Setup Codes for Satellite Receivers" section (starting on the next page), and write it in either space below.

Cable Converter Brand: _____

or

Satellite Receiver Brand: _____

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7+™* to operate your Cable Converter or Satellite Receiver as follows:

1. Turn on your Cable Converter or Satellite Receiver.
2. Press **CBL/SAT** and release. Press and hold **SETUP** until the *Cinema 7+™*'s red light blinks twice, then release **SETUP**.
3. Enter the first four-digit Cable Converter or Satellite Receiver code listed. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
4. Aim the *Cinema 7+™* at your Cable Converter or Satellite Receiver and press **POWER**. Your Cable Converter or Satellite Receiver should turn off. If it does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Cable Converter or Satellite Receiver.

NOTE: If you have tried all the codes listed for your brand and your Cable Converter or Satellite Receiver does not respond, try using the search method found on page 22.

5. Your *Cinema 7+™* is now programmed to operate your Cable Converter or Satellite Receiver. Write your Cable Converter or Satellite Receiver code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 7+™* to operate your Cable Converter or Satellite Receiver, press the **CBL/SAT** key first.

Setup Codes for Cable Converters

ABC	0003, 0008, 0014, 0007, 0001, 0011, 0013, 0017
Allegro	0153, 0315
Gantronix	0022, 0207
Archer	0797, 0153, 0022, 0207
Belcor	0056
Cable Star	0056
Cabletenna	0022
Cableview	0022
Century	0153

Citizen	0153, 0315
Colour Voice	0031
Comtronics	0040
Contec	0019
Digi	0637
Eastern	0002
Emerson	0797
Everquest	0015, 0040
Focus	0400
Garrard	0153
GC Electronics	0056, 0207
Gemini	0015
General	
Instrument	0476, 0003, 0014, 0011, 0276, 0810
Goldstar	0144, 0040
Goodmind	0797
Hamlin	0259, 0009, 0020, 0034
Hitachi	0011
Hytex	0007
Jasco	0153, 0315, 0015
Jerrold	0476, 0003, 0014, 0011, 0012, 0015, 0810
Linsay	0440
Magnavox	0027, 0014
Memorex	0000
Movie Time	0063, 0156
Novaplex	0618

Setup Codes for Cable Converters (continued)

NSC	0063, 0156
Oak	0007, 0019
Optimus	0021
Panasonic	0021, 0107, 0000
Panther	0637
Paragon	0000
Philips	0153, 0027, 0031
Pioneer	0144, 0023, 0533
Popular	
Mechanics	0400
Prelude	0770
Pulsar	0000
RadioShack	0015, 0315, 0797, 0833
RCA	0021
Realistic	0207
Recoton	0400
Regal	0259, 0020
Regency	0002
Rembrandt	0011
Runco	0000
Samsung	0144, 0040
Scientific Atlanta	0477, 0008, 0017
Seam	0510
Signal	0015, 0040
Signature	0011
SL Marx	0040
Sprucer	0021
Starcom	0003, 0015
Stargate	0015, 0040, 0797
Starquest	0015
Sylvania	0001
Tandy	0258
Televue	0040
Texscan	0001
TFC	0310
Timeless	0418
Tocom	0012, 0013
Toshiba	0000
Tusa	0015
TV86	0063
Unika	0153, 0022, 0207
United Artists	0007
United Cable	0003
Universal	0153, 0022, 0056, 0191, 0207

Videoway	0250
Viewstar	0063, 0027, 0258
Zenith	0525, 0000, 0015, 0207, 0008
Zentek	0400

Setup Codes for Satellites

AlphaStar DBS	0772
Chaparral	0216
Echostar DBS	0775
ExpressVu DBS	0775
General	
Instrument	0361, 0627, 0869
Hitachi DBS	0819
HTS DBS	0775
Hughes Network	
Systems DBS	0749
Jerrold Primestar	0627
Jerrold	0361
JVC	0775
Magnavox DBS	0722, 0724
Memorex DBS	0724
Panasonic DBS	0701
Philips DBS	0722, 0724
Primestar	0361, 0627
Proscan	0566
RCA DSS	0566, 0143, 0855
Sony DBS	0639
Star Choice DBS	0869
STS	0210
Toshiba DBS	0790
Uniden DBS	0724, 0722
Zenith	0856