



Set Up Codes for URC 8780

Set Up Codes for TVs

A-Mark	0003
AOC	0030, 0019, 0003, 0052 0185
Abex	0032
Admiral	0093
Adventura	0046
Aiko	0092
Akai	0030
Alaron	0179
Allegro	0720, 0774
Ambassador	0177
Ampo	0751
Anam	0180
Anam National	0055
Archer	0003
Audiovox	0451, 0180, 0003, 0092, 0623
Aumark	0060
Baysonic	0180
Belcor	0019
Bell & Howell	0154, 0016
Beuamark	0017, 0030, 0179
Bradford	0180
Brockwood	0019
Broksonic	0236, 0463, 0003
CCE	0217
CXC	0180
Candle	0030, 0056, 0046, 0186
Capehart	0052
Carnivale	0030
Carver	0054
Celebrity	0000
Cineral	0451, 0092
Citizen	0060, 0030, 0056, 0039, 0046, 0092, 0186, 0280
Clairtone	0185
Concerto	0056
Contec	0180, 0157, 0185
Craig	0180
Crosley	0054
Crown	0180, 0039
Curtis Mathes	0047, 0054, 0154, 0051, 0451, 0093, 0060, 0030, 0145, 0056, 0016, 0039, 0166, 0466, 1147, 1347
Daewoo	0451, 0019, 0039, 0092, 0623, 0624
Daytron	0019, 0039
Denon	0145
Dumont	0017, 0019
Dwin	0720, 0774
Dynatech	0217
Electroband	0000, 0185
Electrohome	0381
Emerson	0154, 0236, 0463, 0180, 0282, 0178, 0019, 0179, 0039, 0038, 0177, 0185, 0280, 0623, 0624
Envision	0030
Fisher	0154, 0159
Fujitsu	0179
Funai	0180, 0179, 0171
Futuretech	0180
GE	0047, 0051, 0451, 0093, 0282, 0178, 0021, 0055, 0027, 0135, 1147, 1347
Gibralter	0017, 0030, 0019
Go Video	0060
GoldStar	0030, 0178, 0019, 0056, 0039, 0001, 0032
Gradiente	0053, 0056
Grunpy	0180, 0179
Hallmark	0178
Harley Davidson	0179
Harman/Kardon	0054
Harvard	0180
Hitachi	0145, 0056, 0032, 0038, 0151
Infinity	0054
Inteq	0017
JBL	0054
JCB	0000
JVC	0053
Janeil	0046
KEC	0180
KTV	0180, 0030, 0039, 0185, 0217, 0280
Kaypani	0052
Kenwood	0030, 0019
Kloss	0024, 0046
LG	0056

LXI	0047, 0054, 0017, 0154, 0156, 0178, 1347
Logik	0016
Luxman	0056
MEI	0185
MGA	0150, 0030, 0178, 0019
MTC	0060, 0030, 0019, 0056, 0185
Magnavox	0054, 0030, 0179, 0020, 0024, 0096, 0186, 0187, 0386, 0171
Majestic	0016
Marantz	0054, 0030
Matsushita	0051, 0250
Megatron	0178, 0145, 0003
Memorex	0154, 0250, 0150, 0060, 0178, 0056, 0016
Midland	0047, 0017, 0051, 0039, 0032, 0135
Minutz	0021
Mitsubishi	0093, 0150, 0178, 0019
Motorola	0093, 0055
Multitech	0180, 0217
NAD	0156, 0178, 0166
NEC	0030, 0019, 0056, 0497
NTC	0092
Nikko	0047, 0017, 0154, 0156, 0030, 0178, 0092, 1347
Noshi	0018
Onwa	0180
Optimus	0154, 0250, 0166
Optonica	0093, 0165
Orion	0236, 0463, 0179
Panasonic	0047, 0054, 0154, 0156, 0051, 0250, 0093, 0165, 0150, 0060, 0053, 0178, 0145, 0055, 0001, 1347
Penney	0047, 0156, 0051, 0060, 0030, 0178, 0021, 0019, 0018, 0056, 0039, 0003, 0027, 0032, 0135, 1347
Philco	0054, 0463, 0030, 0145, 0019, 0020, 0024, 0096, 0186, 0187
Philips	0054, 0017, 0000, 0021, 0019, 0018, 0039, 0020, 0024, 0027, 0052, 0171
Pilot	0030, 0019, 0039
Pioneer	0038, 0166
Portland	0019, 0039, 0092
Prism	0051
Proscan	0047, 0030, 1347
Proton	0178, 0003, 0052, 0466
Pulsar	0017, 0019
Quasar	0051, 0250, 0165, 0055
RCA	0047, 0051, 0093, 0019, 0018, 0038, 0090, 0135, 1047, 1147, 1247, 1347
Radio Shack	0047, 0154, 0165, 0180, 0030, 0178, 0019, 0056, 0039, 0032
Realistic	0154, 0165, 0180, 0030, 0178, 0019, 0056, 0039, 0032
Rhapsody	0185
Runco	0017, 0030, 0497, 0603
SSS	0180, 0019
Sampo	0030, 0039, 0032, 0052
Samsung	0060, 0030, 0178, 0019, 0056, 0039, 0032
Samsux	0039
Sansei	0451
Sansui	0463
Sanyo	0154, 0146, 0159
Scimitsu	0019
Scotch	0178
Scott	0236, 0180, 0178, 0019, 0179
Scott	0047, 0054, 0154, 0156, 0178, 0179, 0056, 0146, 0159, 0171
Sears	0180
Semivox	0180
Semp	0156
Sharp	0093, 0165, 0039, 0157, 0386
Shogun	0019
Signature	0016
Simpson	0186, 0187
Sony	0000, 0080, 0111
Soundesign	0180, 0178, 0179, 0186
Spectricon	0003
Squareview	0171
Starlite	0180
Supre-Macy	0046
Supreme	0000
Sylvania	0054, 0030, 0020, 0024, 0096, 0186, 0187, 0381
Symphonic	0171
TMK	0178, 0056, 0177
Tandy	0093
Tatung	0055, 0003
Technics	0047, 0017, 0051, 0250, 1347
Technol Ace	0179
Techwood	0051, 0056, 0003
Teknika	0054, 0180, 0150, 0060, 0019, 0179, 0056, 0016, 0039, 0092, 0186
Telefunken	0056
Toshiba	0154, 0156, 0060
Tosonic	0185
Totevision	0039
Trical	0157
Universal	0021, 0027
Vector Research	0030
Victor	0053
Vidikron	0054
Vidtech	0178, 0019
Viking	0046
Wards	0054, 0156, 0165, 0030, 0178, 0021, 0019, 0179, 0056, 0016, 0020, 0027, 0080, 0096, 0111, 0135, 0187
White	
Westinghouse	0623, 0624
Yamaha	0030, 0019
Zenith	0017, 0016, 0092, 0146
Zonda	0003

Set Up Codes For VCRs

Admiral	0048
Adventura	0000
Aiko	0278
Aiwa	0037, 0000, 0307
Akai	0041, 0061, 0106
American High	0035
Asha	0240
Audiovox	0037
Beaumont	0240
Bell & Howell	0104
Broksonic	0184, 0121, 0209, 0002, 0295, 0479
CCE	0072, 0278
Calix	0037
Canon	0035
Capehart	0020
Carver	0081
Cineral	0278
Citizen	0037, 0278
Colt	0072
Craig	0037, 0047, 0240, 0072, 0271
Curtis Mathes	0060, 0035, 0041, 0162
Cybernex	0240
Daewoo	0045, 0278, 0020, 0561
Daytron	0020
Denon	0042
Dynatech	0000
Electrohome	0037
Electrosonic	0037
Emerex	0032
Emerson	0037, 0184, 0000, 0121, 0043, 0209, 0002, 0278, 0036, 0061, 0068, 0208, 0212, 0295, 0479, 0561
Fisher	0047, 0104, 0054, 0066
Fuji	0035, 0033
Funai	0000
GE	0060, 0035, 0048, 0240, 0202
Garrard	0000
Go Video	0432, 0526
GoldStar	0037, 0038
Gradiente	0000, 0008
Hi-Q	0047
Harley Davidson	0000
Harman/Kardon	0081, 0038
Harwood	0072, 0068
Headquarter	0046
Hitachi	0000, 0042, 0041, 0105
JVC	0067, 0041, 0008
Jensen	0041
KEC	0037, 0278
KLH	0072
Kenwood	0067, 0041, 0038, 0046
Kodak	0035, 0037
LXI	0037
Lloyd's	0000, 0208
Logik	0072
MEI	0035
MGA	0240, 0043, 0061
MGN Technology	0240
MTC	0240, 0000
Magnasonic	0278, 0593
Magnavox	0035, 0039, 0081, 0000, 0149, 0110
Magnin	0240
Marantz	0035, 0081, 0038
Marta	0037
Matsushita	0035, 0162, 0454
Memorex	0035, 0037, 0048, 0039, 0047, 0240, 0000, 0104, 0046, 0307, 1037, 1162, 1262
Minolta	0042, 0105
Mitsubishi	0048, 0067, 0043, 0061
Motorola	0035, 0048
Multitech	0000, 0072
NAP	0035, 0037, 0039, 0042, 0033, 0034, 0066, 0105
NEC	0104, 0067, 0041, 0038, 0040
Nikko	0037
Nikon	0034, 0253
Noblex	0240
Olympus	0035
Optimus	0037, 0048, 0104, 0162, 0432, 0454, 0593, 1048, 1062, 1162, 1262
Optonica	0062
Orion	0184, 0002, 0295, 0479
Panasonic	0035, 0162, 0077, 0225, 0454, 1162
Penney	0035, 0037, 0240, 0042, 0038, 0040, 0054
Pentax	0042, 0105
Philco	0035, 0209, 0479
Philips	0035, 0081, 0062, 0110
Pilot	0037
Pioneer	0067
Portland	0020
Profitronic	0240
Proscan	0060, 0202
Protec	0072
Pulsar	0039
Quarter	0046
Quartz	0046
Quasar	0035, 0162, 0077, 0454, 1162
RCA	0060, 0035, 0048, 0240, 0042, 0149, 0077, 0105, 0106, 0202
Radio Shack	0000, 1037
Radix	0037
Randex	0037
Realistic	0035, 0037, 0048, 0047, 0000, 0104, 0062, 0046,

Ricoh	0066
Runco	0034, 0253
STS	0039
Samsung	0042
Sanky	0240, 0045
Sansui	0048, 0039
Sanyo	0000, 0067, 0041, 0271, 0479
Scott	0047, 0240, 0104, 0046
Sears	0184, 0045, 0121, 0043, 0210, 0212
	0035, 0037, 0047, 0000, 0042, 0104, 0046, 0054, 0066, 0105
Semp	0045
Sharp	0048, 0062
Shintom	0072
Shogun	0240
Signature	0035
Singer	0072
Sony	0035, 0032, 0000, 0033, 0034, 0253
Sunpak	0253
Sylvania	0035, 0081, 0000, 0043, 0110
Symphonic	0000, 0593
TMK	0240, 0036, 0208
Tatung	0041
Teac	0000, 0041
Technics	0060, 0035, 0039, 0162, 0202
Teknika	0035, 0037, 0000
Thomas	0000
Toshiba	0045, 0043, 0066, 0210, 0212
Totevision	0037, 0240
Unitech	0240
Vector	0045
Vector Research	0038, 0040
Video Concepts	045, 0040, 0061
Videosonic	0240
Wards	0060, 0035, 0048, 0047, 0081, 0240, 0045, 0000, 0042, 0072, 0149, 0062, 0212
W. Westinghouse	0278
XR-1000	0035, 0000, 0072
Yamaha	0041, 0038
Zenith	0039, 0000, 0033, 0034, 0479

Set Up Codes for TV/VCR Combinations:

American High	0035 (TV = 0051)
Brocksonic	0002, 0294, 0479
Colt	0072
Curtis Mathes	0035 (TV = 0051)
Daewoo	0278 (TV = 0451)
Emerson	0002, 0294, 0479
Funai	0000
GE	0035 (TV = 0051), 0060 (TV = 0047), 0048 (TV = 0093), 0240
Hitachi	0035 (TV = 0051), 0000
HQ	0000
Lloyds	0000
Magnavox	0000, 0035 (TV = 0051), 0081 (TV = 0054)
Magnin	0240
Memorex	0037, 0162 (TV = 0250)
MGA	0240
Mitsubishi	0048 (TV = 0093)
Orion	0002, 0294, 0479
Panasonic	0035 (TV = 0051), 0162 (TV = 0250)
Penney's	0035 (TV = 0051), 0240, 0162 (TV = 0250)
Quasar	0035 (TV = 0051), 0162 (TV = 0250)
RCA	0035 (TV = 0051), 0060 (TV = 0047), 0048 (TV = 0093)
Sansui	0000, 0479
Sanyo	0240
Sears	0000, 0037
Sony	0032 (TV = 0000)
Symphonic	0000
Zenith	0000

NOTE: If a separate TV code is listed for your brand, use it to set up your television.

Set Up Codes For Cable Boxes

ABC	0003, 0008, 0014, 0017, 0007, 0011, 0001, 0013
Allegro	0153, 0315
Antronix	0022, 0207
Archer	0153, 0022, 0207, 0797
Belcor	0056
Bell & Howell	0014
Cable Star	0056
Cabletenna	0022
Cableview	0022
Century	0153
Citizen	0153, 0315
Colour Voice	0025, 0031
Comtronics	0040
Contec	0019
Digi	0637
Eastern	0002
Emerson	0797
Everquest	0015, 0040
Focus	0400
GC Electronics	0056, 0207
Garrard	0153
Gemini	0015
General Instrument	0476, 0276, 0011, 0810

GoldStar	0144, 0040
Goodmind	0797
Hamlin	0020, 0259, 0009, 0034
Hitachi	0011
Hytex	0007
Jasco	0015, 0153, 0315
Jerrold	0003, 0012, 0476, 0276, 0014, 0015, 0011, 0810
Linsay	0440
Magnavox	0014, 0027
Memorex	0000
Movie Time	0063, 0156
NAP	0007
NSC	0063, 0156
Novaplex	0618
Oak	0019, 0007
Optimus	0021
Panasonic	0000, 0107, 0021
Panther	0637
Paragon	0000
Philips	0153, 0025, 0027, 0031
Pioneer	0144, 0023, 0533
Popular Mechanics	0400
Proscan	0021
Pulsar	0000
Quasar	0000
RCA	0021
Radio Shack	0015, 0315, 0797, 0883
Realistic	0207
Recoton	0400
Regal	0020, 0259
Regency	0002
Rembrandt	0011
Runco	0000
SL Marx	0040
Samsung	0144, 0040
Scientific Atlanta	0008, 0477, 0017
Seam	0510
Signal	0015, 0040
Signature	0011
Sprucer	0021
Starcom	0003, 0015
Stargate	0015, 0040, 0797
Starquest	0015
Sylvania	0001
TFC	0310
TV86	0063
Tandy	0258
Televue	0040
Texscan	0001
Timeless	0418
Tocom	0012, 0013
Toshiba	0000
Tusa	0015
Unika	0153, 0022, 0207
United Artists	0007
Universal	0153, 0022, 0056, 0191, 0207
Videoway	0250
Viewstar	0063, 0027, 0258
Zenith	0008, 0000, 0015, 0207, 0525
Zentek	0400

Set Up Codes for DSS and Satellite Receivers

AlphaStar	0772
Astro Industries	0095
BSR	0095
Capetronic	0095
Channel Master	0018, 0212
Chaparral	0053, 0209, 0216
DX Antenn	0041
Drake	0018, 0064, 0149, 0245
Echosta	0775, 0148, 0159, 0269, 0280
Expressvu	0775
General Instrument	0627, 0361, 0869
HTS	0775
Hitachi	0819
Homecable	0238
Hughes Network Sys.	0749
Hytek	0095
IQ	0210
IQ Prism	0210
JVC	0775
Janeil	0152
Jerrold	0627, 0361
Legend	0269
Macom	0018
Magnavox	0724, 0722
Memorex	0724, 0269
Next Level	0869
Panasonic	0701, 0152
Philips	0724, 0722, 0200
President	0074
Primestar	0627, 0361
Proscan	0566
RCA	0566, 0143, 0392, 0855
Radio Shack	0566, 0869
Realistic	0052
STS	0041, 0210
Sony	0639
Star Choice	0869
Star Trak	0180

Toshiba	0790, 0082
Uniden	0724, 0722, 0052, 0074, 0076, 0238, 0370
Zenith	0064, 0245, 0856

Set Up Codes for DVD Players

Harman/Kardon	0582
JVC	0558
Kenwood	0534
Magnavox	0503
Magnavox CD-R	0626
Mitsubishi	0521
Onkyo	503
Optimus	0525
Panasonic	0490
Philips	0503, 0539
Pioneer	0525, 0571
Proscan	0522
RCA	0522
Samsung	0573
Sony	0533
Technics	0490
Theta Digital	0571
Toshiba	0503
Yamaha	0490, 0545
Zenith	0503, 0591

Set Up Codes for LD Players

Aiwa	0203
Carver	0064, 0194, 0323
Denon	0059, 0172
Disco Vision	0023
Funai	0203
Harman/Kardon	0194
Hitachi	0023
Magnavox	0194, 0217
Marantz	0064, 0194
Mitsubishi	0059
NAD	0059
Panasonic	0204
Philips	0064, 0194
Pioneer	0059, 0023
Quasar	0204
Realistic	0203
Samsung	0323
Sega	0023
Sony	0193, 0201
Technics	0204
Theta Digital	0194
Yamaha	0217

Set Up Codes for CD or MD Players

ADC	0018
Adcom	0155, 0234
Aiwa	0157, 0012, 0124
Akai	0156
Audio Alchemy	0194
Audio-Technica	0170
BSR	0194, 0245
Bang & Olufsen	0212
Burmester	0420
California Audio Labs	0029
Carrera	0194
Carver	0157, 0179, 0437
Crown	0122
Curtis Mathes	0029
DAK	0245
DBX	0254
DKK	0000
Denon	0003, 0873
Emerson	0305, 0155, 0164, 0469
Fisher	0179, 0088, 0174, 0342
GE	0009
Garrard	0420, 0393, 0245, 0280, 0425
Genexxa	0032, 0305, 0164
GoldStar	0417
Harman/Kardon	0157, 0173, 0426
Hitachi	0032, 0155
JVC	0072, 0655, 0658
Kenwood	0028, 0037, 0190, 0826, 0681
Kodak	0287
Krell	0157
Kyocera	0018
LXI	0305
Linn	0157
Luxman	0093
MCS	0029, 0043
MTC	0420
Magnavox	0157, 0305
Magnavox CD-R	0626
Marantz	0029, 0157, 0180
McIntosh	0287
Mission	0157

NEC	0043, 0234
NSM	0157
Nakamichi	0147
Nikko	0164, 0170, 0174
Onkyo	0101, 0868
Optimus	000, 0032, 0179, 0305, 0037, 0420, 0145, 0468, 0087, 0175, 0194, 0196, 0280, 0342, 0426, 0437
Panasonic	0029, 0303, 0367, 0752
Parasound	0420, 0194
Philips	0157, 0287, 0626
Pioneer	0032, 0305, 0468, 0244
Proscan	0053
Proton	0157
QED	0157
Quasar	0029
RCA	0179, 0305, 0053, 0009, 0155, 0764
Realistic	0179, 0420, 0155, 0164, 0175, 0180
Rotel	0157, 0420
SAE	0157
STS	0018
Sansui	0157, 0305, 0202
Sanyo	0179, 0087
Scott	0305, 0155, 0164
Sears	0305
Sharp	0037, 0180, 0861
Sherwood	0180, 0196, 0426
Shure	0043
Sony	0000, 0185, 0490, 0604, 0605
Soundesign	0145, 0425
Sylvania	0157
Tascam	0420
Teac	0420, 0393, 0174, 0180
Technics	0029, 0207, 0303
Vector Research	0194, 0417
Victor	0072
Wards	0157, 0053
Yamaha	0036, 0170, 0187
Yorx	0461

Set Up Codes For Tuner/Receivers

ADC	0531
Adcom	0616
Aiwa	0158, 0189, 0121, 0405
Akai	0076, 0224
Bang & Olufsen	0898
Capetronic	0531, 0195
Carver	0189, 0008, 0042, 0360
Casio	0195
Clarinet	0195
Curtis Mathes	0039, 0080
Denon	0004, 0273, 0771
Emerson	0424
Fisher	0042, 0219, 0360, 0801
Garrard	0463, 0424
Harman/Kardon	0110, 0189, 0891
Inkel	0062
JBL	0110
JVC	0074
Kenwood	0027, 0186, 0042, 0077, 0313, 0314
Koss	0424
LXI	0181
Linn	0189
Lloyd's	0195
MCS	0039, 0346
Magnavox	0531, 0189, 0195, 0128, 0391
Marantz	0039, 0189, 0128
Modulaire	0195
NAD	0320
NEC	0235
Nakamichi	0097, 0347
Onkyo	0135, 0100, 0380
Optimus	0531, 0670, 0186, 0042, 0177, 0181, 0219, 0738, 0801, 1023, 0042, 0080*, 0181, 0186, 0531, 0670, 0738, 0801
Panasonic	0039, 0309, 0518
Penney	0195
Philips	0189, 0391
Pioneer	0531, 0014, 0150, 0630, 0080, 1023, 0014*, 0080*, 0150, 0531, 0630, 1023
Proscan	0054
Quasar	0039
RCA	0531, 0054, 0346, 0360, 0530
Realistic	0195, 0163, 0181
Sansui	0189, 0193, 0346
Sanyo	0219, 0801
Scott	0163, 0322
Sharp	0186
Sherwood	0491, 0062, 0502
Siemens	0424
Sony	0158, 0168, 0474, 0158**, 0474
Soundesign	0670
Teac	0463, 0163
Technics	0039, 0309, 0208, 0518
Victor	0074
Wards	0158, 0014, 0189, 0080, 0042, 0054
Yamaha	0176, 0186
Yorx	0195
Zenith	0857

NOTES: *May use Amplifier code 0013 for power and volume. See below section for amplifier setup and codes.

**May use Miscellaneous Audio code 0159 to operate surround and tuner presets. See misc. audio setup and codes.

Set Up Codes for Amplifiers

Aiwa	0406
Bose	0674
Carver	0269
Curtis Mathes	0300
Denon	0160
GE	0078
Harman/Kardon	0892
JVC	0331
Kenwood	0356
Linn	0269
Luxman	0165
Magnavox	0269
Marantz	0269, 0321, 0892
NEC	0264
Nakamichi	0321
Optimus	0395
Panasonic	0308
Parasound	0246
Philips	0269, 0892
Pioneer	0013, 0300
Realistic	0395
Sansui	0321
Shure	0264
Sony	0220, 0689
Soundesign	0078, 0211
Technics	0308, 0521
Victor	0331
Wards	0013, 0078, 0211
Yamaha	0354, 0133, 0143, 0504

Set Up Codes for Cassette Decks

Aiwa	0029, 0197, 0200
Akai	0283
Bang & Olufsen	0219
Carver	0029
Denon	0076
Fisher	0074
Garrard	0308, 0439
Harman/Kardon	0182, 0029
JVC	0244, 0273
Kenwood	0070, 0071
Magnavox	0029
Marantz	0029, 0009
Mitsubishi	0283
Onkyo	0135, 0136, 0282
Optimus	0027, 0220, 0337, 0439
Panasonic	0229
Philips	0029
Pioneer	0027, 0220, 0099
Revox	0190
Sansui	0029, 0009
Sherwood	0337
Sony	0243, 0170, 0291
Teac	0308
Technics	0229
Victor	0273
Wards	0027
Yamaha	0097, 0094

Set Up Codes for Home Automation

GE	0240
LiteTouch	0084
Lutron	0318
One For All	0167
Radio Shack	0240
Security System	0167
Universal X10	0167
X10	0167

Set Up Codes for Digital Audio Tape

Carver	0158
Denon	0031
Harman/Kardon	0158
Magnavox	0158
Marantz	0158
Philips	0158
Sony	0093

Set Up Codes for Turntables

Aiwa	0188
Carver	0188
Magnavox	0188
Marantz	0188
Philips	0188
Sony	0348

Set Up Codes for Video Accessories

Archer	0160
GC Electronics	0160
Jebsee	0160
Magnavox Web-TV	0818
Philips Web-TV	0818
RadioShack	0160
Sony Web-TV	0850
TeleCaption	0171

Set Up Codes for Miscellaneous Audio

Aiwa	0010, 0159, 0404
Fisher	0052
Harman/Kardon	0477
JBL	0477
JVC	0073
Jerrold	0459, 0520
Nikko	0376
Paramount Pict.	0317
RCA	0056
SSI	0317
Schneider	0376
Scientific Atlanta	0460
Sony	0010, 0159
Soundesign	0376
Starcom	0459
Yorx	0376