



**UR24A  
8-IN-1  
LEARNING  
SUPERREMOTE**

**OWNER'S MANUAL**

# — READ THIS FIRST! —

## SAFETY CONSIDERATIONS

Remember to exercise good common sense when using your X-10 remote's home automation features - especially when scheduling unattended devices. There can be some unexpected consequences if not used with care. For example, an empty coffee pot can be remotely turned on. If that should happen, your coffee pot could be damaged from overheating. If an electric heater is turned on by remote control while clothing is draped over it, a fire could result. **DO NOT USE** the system for the control of high power heating appliances such as portable heaters.

**Caution:** To reduce the risk of electric shock, do not disassemble any part of the Home Automation System. No user-serviceable parts are inside. If you spill liquid on a unit, disconnect the unit from the AC outlet to prevent possible fire or shock hazard and consult authorized service personnel.

Powerline operated equipment or accessories connected to any of these units should bear the UL listing or CSA certification mark and should not have been modified in any way that might defeat their safety features.

**Warning:** To prevent electric shock hazard, do not expose any part of the Home Automation System to rain or moisture.

## FCC CAUTION

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

This equipment generates and uses radio frequency energy, and if not installed and used properly, that is, in strict accordance with the manufacturers instructions, it may cause interference to radio and television reception. It has been type tested and found to comply with the limits for remote control devices in accordance with the specifications in Sub-Parts B and C of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by unplugging the equipment, try to correct the interference by one or more of the following measures.

- Reorient the antenna of the radio/TV experiencing the interference.
- Relocate the interface with respect to the radio/TV.
- Move the interface away from the radio/TV.
- Plug the interface into an outlet on a different electrical circuit from the radio/TV experiencing the interference.
- If necessary, consult your local Dealer for additional suggestions.

**NOTE:** Modifications to any of the components in this kit will void the user's authority to operate this equipment.

---

# CONTENTS

---

<b>INTRODUCTION</b> .....	<b>5</b>
<b>GETTING STARTED</b> .....	<b>6</b>
CONTROLLERS AND MODULES .....	6
HOUSE CODES AND UNIT CODES .....	7
<b>INSTALLING THE COMPONENTS</b> .....	<b>8</b>
TRANSCEIVER MODULE .....	8
LAMP MODULE .....	8
8-IN-1 SUPERREMOTE .....	9
<b>SETTING UP YOUR SUPERREMOTE</b> .....	<b>10</b>
BUTTON DESCRIPTIONS .....	10
CLEARING THE MEMORY .....	12
SETTING UP FOR TV, VCR, CABLE BOX AND SATELLITE RECEIVER .	14
USING AUX TO CONTROL A SECOND TV, VCR, CABLE BOX OR SATELLITE RECEIVER .....	24
SEARCHING FOR CODES .....	26
IDENTIFYING CODES FOUND USING THE SEARCH PROCEDURE .....	27
SETTING THE SLEEP TIMER .....	28
LEARNING .....	29
<b>CONTROLLING X-10 MODULES</b> .....	<b>32</b>
TO SET THE X-10 SLEEP TIMER .....	32
CHANGING THE X-10 HOUSE CODE: ...	33
CONTROLLING AN IR MINI CONTROLLER .....	34
<b>EXPANDING YOUR SYSTEM</b> .....	<b>36</b>
<b>TROUBLESHOOTING</b> .....	<b>38</b>

---

# INTRODUCTION

---

Congratulations on your purchase of the X-10 SuperRemote.

***Make your lights and appliances go to work for you....***

The X-10 SuperRemote will control most or all of your video and audio equipment. But what really sets it apart from other remotes is that you can also control almost any light or appliance in your home - even in another room! And it's easy to install. Within minutes, you can be using your X-10 SuperRemote to dim the lights, start brewing a fresh pot of coffee and play your favorite movie!\*

***Here are just some of the things you can do with your X-10 SuperRemote...***

- Control your entire audio/video and lighting setup for the ultimate Home Theater experience.
- Turn on lights at night to scare away intruders if you hear a noise.
- Start the coffee from your bedroom when you wake up.
- Turn on your electric blanket before the movie ends, so you it's nice and warm when you go to bed.

***Use this manual to become familiar with your SuperRemote....***

This manual will explain how to set up your SuperRemote to use it with your existing Audio/Video equipment.

Next it will show you how you can use it to set up and use an X-10 Transceiver Module and Lamp Module (sold separately) to operate electrical devices in your home.

Finally, the manual will show you can expand your system with some of the many additional X-10 products you can purchase.

\* Requires X-10 modules, sold separately.

## GETTING STARTED

Because we know that you are eager to get started, we've kept this introduction as short as possible, but it contains very valuable information, so you should read through it very carefully.

### CONTROLLERS AND MODULES

The first thing you need to understand is that there are two different devices you need to control your house; Controllers and Modules. Any light or appliance that you want to control is plugged into a Module and that Module is then plugged into a standard AC outlet.


Modules receive commands from Controllers. Examples include the Lamp Module (sold separately). The Transceiver Module (also sold separately) is another example (although it also doubles as a controller as described later).

Controllers are plugged into standard wall outlets and send commands to Modules over your existing electrical wiring in your house without affecting your electricity in any way.

The Transceiver Module works as a controller when it is used with a remote control such as the 8-in-1 Learning SuperRemote. When the Transceiver Module receives a command from the remote it sends digital signals over your existing house wiring to a Module which receives the signals and executes the command.

The remote uses radio frequency (RF) signals to send commands to the Transceiver Module. RF signals can go right through walls, so you can use the remote to control lights or appliances from anywhere in your home.

## HOUSE CODES AND UNIT CODES

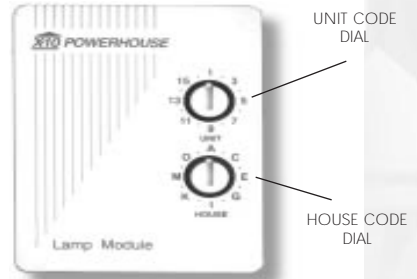

Each Module has a specific address made up of a House Code (red dial on the face of the Module) and a Unit Code (black dial on the face of the Module).

The Controller first sends an address and then a command on the AC power lines. Only the Module with a matching address will execute the command. If more than one Module has the same address, both Modules will execute the command.

Addresses are set on the Module by turning the two dials on the front of the Module to the desired letter and number (using a small screwdriver or a coin). The House Code is selected from the letters A through P, and the Unit Code is selected from the numbers 1 through 16.

# INSTALLING THE COMPONENTS

## TRANSCIVER MODULE

The Transceiver Module receives radio frequency (RF) commands from remotes to operate a lamp or appliance plugged into it. The Transceiver Module also passes on commands over your house wiring to control other X-10 Modules. Note that unlike the Lamp Module you cannot dim and brighten a lamp connected to the Transceiver Module.

You should locate the Transceiver Module centrally in the home for maximum range when controlled by the X-10 Learning SuperRemote.

1. Set the House Code to 'A' .



2. Plug a lamp or appliance into the Transceiver Module.



3. Plug the Transceiver Module into a convenient AC outlet. Fully extend the antenna.



## LAMP MODULE

The Lamp Module may be used to control any incandescent lamp rated up to 300W. It is not suitable for other types of lamp such as fluorescent or energy saving lamps, or lamps which include a dimmer control.

**Caution:** Do not connect an appliance such as a coffee pot or heater to the Lamp Module. It may damage the module and the appliance and could cause a fire hazard.

1. Set the House Code to 'A' and the Unit Code to '2.'



2. Plug a lamp into the Lamp Module.



3. Plug the Lamp Module into a convenient AC outlet.



## 8-IN-1 LEARNING SUPERREMOTE

The 8-in-1 Learning SuperRemote allows you to control practically everything electrical in your home. It combines IR technology that lets you control all your TV, VCR, Cable and Satellite equipment with X-10 RF technology that lets you control lamps and appliances anywhere in your home.

To find out more about configuring the Learning SuperRemote to work with your audio/video equipment, see the section titled "Setting Up your SuperRemote."

1. Push the tab and lift off the battery cover.



2. Fit four AAA batteries, taking care to match the + and - marks in the battery compartment.



# SETTING UP YOUR SUPERREMOTE

## BUTTON DESCRIPTIONS

### INDICATOR LIGHT

The indicator light flashes when the remote is operating.

### POWER

Works in the same way as your original remote.

### SET UP

Used for programming the remote.

### BACKLIGHT

Lights up the keys for a few seconds when pressed.

### LEARN

Lets you learn codes from an existing remote, that might not be in the Learning SuperRemote's library.

### X-10

Lets you control X-10 Modules to operate lamps and appliances around the home.

### TV, VCR, CBL, CD, AUX1, AUX2, SAT

Used to select the device to control. SAT includes DSS receivers.

### SHIFT

Lets you learn another function under the same key

### 0-9

Used as your original remote and to enter device codes.

### LAST

Selects the last channel viewed on your TV, VCR, Cable Box or Satellite Receiver.

### CHANNEL

Works like your original remote. Also used to turn X-10 Modules on and off.

### MUTE

Works the same as your original remote.

### VOLUME

Works like your original remote. Also used to brighten and dim lamps connected to X-10 Modules.

### TIMER

Used to set the Sleep Timer to automatically switch off the TV or X-10 Modules after a preset time.

### L1, L2

Lets you learn additional keys from your original remote.

### DISP

Used to access on-screen information or CD programming.

### PLAY, REW, FF, STOP

Work the same as on your original VCR remote.

### SELECT

Used for menu selections on DSS satellite receivers.

### GUIDE

Displays the main menu on DSS satellite receivers.

### REC

Record button. Works the same as your original VCR remote. You must press the REC button twice to begin recording.

### PAUSE

Works the same as your original VCR remote.

---

## CLEARING THE MEMORY

It is recommended that you clear the memory in the Learning SuperRemote before you start programming it:

1. Press and hold SETUP until the LED indicator lights steadily. Release the SETUP button.



2. Press and release the LEARN key **twice**.



3. Press and release the SETUP key.



You can also clear the memory for just a particular mode (TV, VCR, etc.).

1. Press and hold SETUP until the LED indicator lights steadily. Release the SETUP button.



2. Press and release the desired mode button (TV, VCR, etc.). The LED blinks once.



3. Press the LEARN key. The LED blinks once.



4. Press SETUP. The LED turns off after a few seconds.



## SETTING UP FOR TV, VCR, CABLE, CD, AND SATELLITE RECEIVER

1. Turn on the device you want to control (TV, VCR, cable box, satellite receiver etc.).




2. Press and hold SETUP until the LED indicator lights steadily. Release the SETUP button.



3. Press and release the mode button that matches the device you want to control. The LED blinks once. Use AUX for audio equipment.



4. Enter the 3 digit Code from the Library Code Tables. The LED turns off after the last digit entered.

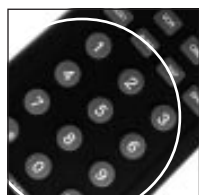

5. Point the remote at the device and press the POWER button. Your device should turn off.



6. Turn your device on and press CH +. If the device responds, setup is complete.



### Notes:

**For CD equipment use the AUX button.**

**If your TV/VCR/Cable Box/Satellite Receiver does not respond, try the other codes for your brand. If it still doesn't**

**respond, try the Code Search method on page 26.**

**If the LED blinks rapidly when you enter the code, you may have entered an invalid code. Recheck the code in the code list and try again.**

**If some buttons do not operate your equipment, try one of the other codes for your brand.**

### TV CODES

ABEX .....	185
ACME .....	003
ADA .....	016
ADC .....	012,096
ADMIRAL .....	014,186
ADVENTURA .....	187
AIKO .....	029
ALLERON .....	059
AMTRON .....	051
AKAI .....	015
AMSTRAD .....	202
ANAM NATIONAL .....	016,051,055,205,206,207
AOC .....	017,018,020,022,188,189,208
AUDIOVOX .....	051
.....	.....
BELCOR .....	017
BELL & HOWELL .....	014,062,096
BRADFORD .....	051
BROKWOOD .....	017
.....	.....
CANDLE .....	017,021,022,187
CAPEHART .....	188
CELEBRITY .....	015
CENTURION .....	022
CETRONIC .....	055
CITIZEN .....	017,021,022,029,051
.....	055,084,118,184,187,190
CLAIRTONE .....	189
CLASSIC .....	055
COLORTYME .....	017,022,023,213
CONCERTO .....	017,022
CONTEC/CONY ....	024,025,026,027,051,055,189
CRAIG .....	051,055
CROWN .....	051,055,184
CURTIS MATHES .....	013,017,022,028
.....	062,084,118,184
CXC .....	051,055
.....	.....
DAEWOO .....	017,018,022,029,030
.....	031,055,098,139,140,184
DAYTRON .....	017,022,184
DIMENSIA .....	013
DUMONT .....	017,164
DYNASTY .....	055
DYNATECH .....	191
.....	.....
ELECTROBAND .....	015,189
ELECTROHOME .....	016,017,022,034,035
EMERSON .....	017,022,025,027,036,037,038,039
.....	040,043,044,045,046,047,048,049,050
.....	051,052,053,054,055,056,057,058,059
.....	060,062,136,137,176,184,189,190,192,210
ENVISION .....	017,022
.....	.....
FISHER .....	062,063,064,193
FUJITSO .....	059



FUNAI ..... 051,055,059  
 FUTURETEC ..... 051,055  
 GE ..... 013,016,017,022,035,065,067,068  
 ..... 100,176,177,178,179,180,181,194  
 GIBRALTER ..... 017,164  
 GOLDSTAR ..... 017,018,022,025,069  
 ..... 070,071,168,169,184,185  
 GRUNDY ..... 051,059,184  
 HALLMARK ..... 017,022  
 HARVARD ..... 051  
 HITACHI ..... 017,022,024,025,026,072,073  
 ..... 074,100,150,151,152,153,154,155  
 ..... 156,157,158,159,160,161,163,192,211,212  
 IMA ..... 051  
 INFINITY ..... 075  
 JANEIL ..... 187  
 JBL ..... 075  
 JCB ..... 015  
 JC PENNY ..... 013,017,018,021,022,035,065  
 ..... 067,071,076,077,084,100,118  
 ..... 141,184,185,194,214  
 JENSEN ..... 017,022  
 JVC ..... 024,025,026,067,073,078  
 ..... 079,080,102,171,172,195  
 KAWASHO ..... 015,017,022  
 KAYPANI ..... 188  
 KEC ..... 055  
 KENWOOD ..... 017,022  
 KLOSS NOVABEAM ..... 081,082,187,196  
 KTV ..... 051,055,083,184,189,190  
 LODGENET ..... 096  
 LOEWE ..... 075  
 LOGIK ..... 096  
 LUXMAN ..... 017,022  
 LXI ..... 013,022,062,075,084,194  
 MEGATRON ..... 022,072  
 MAGNAVOX ..... 017,021,022,075,081,082  
 ..... 087,088,089,090,101,102  
 ..... 143,144,145,146,147,196,197  
 MAJESTIC ..... 096  
 MARANTS ..... 075  
 MARANTZ ..... 017,022,075,091  
 MATSUI ..... 075  
 MEI ..... 189  
 MEMOREX ..... 014,022,062,095,096  
 MGA ..... 017,018,022,034,035  
 ..... 059,064,092,093,095  
 MIDLAND ..... 067,164,184,185,194  
 MINUTZ ..... 065  
 MITSUBISHI ..... 017,018,022,034,035,059  
 ..... 064,092,093,094,095,102,138  
 MONTGOMERY WARD ..... 096  
 MOTOROLA ..... 016,186  
 MTC ..... 017,018,022,084,118,189,191  
 MULTITECH ..... 051,191  
 MULTIVISION ..... 097  
 NAD ..... 022,084,198  
 NEC ..... 016,017,018,022,098,102,108,213  
 NIKEI ..... 055  
 NIKKO ..... 022,029  
 NTC ..... 029  
 ONKING ..... 055  
 ONWA ..... 051,055

OPTIMUS ..... 198  
 OPTONICA ..... 108,186  
 ORION ..... 048  
 PANASONIC ..... 016,067,075,183  
 PHILCO ..... 016,017,018,021,022,025  
 ..... 075,081,082,087,088,090,196,197  
 PHILIPS ..... 016,017,019,021,022,025,075,081  
 ..... 082,087,088,089,099,100,101,102  
 PILOT ..... 017,184  
 PIONEER ..... 017,022,103,104,105,192,198  
 PORTLAND ..... 017,018,022,029,184  
 PRICE CLUB ..... 118  
 PRISM ..... 067  
 PROSCAN ..... 013,194  
 PROTON ..... 017,022,025,106,188,199  
 PULSAR ..... 164  
 PULSER ..... 017  
 QUASAR ..... 016,067,083,107  
 RADIO SHACK/REALISTIC ..... 013,017,022,024,025  
 ..... 051,054,055,062,108,184,185  
 RCA ..... 013,016,017,018,020,022,109,111,112  
 ..... 113,114,115,116,142,192,194,200,201  
 RHAPSODY ..... 189  
 RUNCO ..... 164  
 SAMPO ..... 017,022,184,185,188  
 SAMSUNG ..... 017,018,022,024,025,028  
 ..... 084,117,118,119,184,185,214,217  
 SAMSUX ..... 184  
 SANYO ..... 017,062,063,093,120,121,182,193  
 SCOTCH ..... 022  
 SCOTT ..... 017,022,025,037,048,051,055,059  
 SEARS ..... 013,017,022,026,059,062,063,064  
 ..... 079,084,118,122,123,193,194,202,210  
 SHARP ..... 017,022,025,108,124,125  
 ..... 126,127,135,184,186  
 SHOGUN ..... 017  
 SIGNATURE ..... 014,096,128  
 SIMPSON ..... 021  
 SONIC ..... 189  
 SONY ..... 015,019  
 SOUNDESIGN ..... 017,021,022,051,055,059  
 SQUAREVIEW ..... 202  
 SSS ..... 017,051,055  
 STARLITE ..... 051  
 SUPRE-MACY ..... 187  
 SUPREME ..... 015  
 SYLVANIA ..... 017,021,022,075,081  
 ..... 082,087,088,089,090  
 ..... 101,129,174,196,197  
 SYMPHONIC ..... 046,051,202  
 TANDY ..... 186  
 TATUNG ..... 016,191  
 TECHNICS ..... 067  
 TECHWOOD ..... 017,022,067  
 TEKNIKA ..... 017,018,021,022,025,026  
 ..... 029,051,055,059,084,089  
 ..... 095,096,118,183,184,187  
 TELECAPTION ..... 130  
 TELERENT ..... 096  
 TERA ..... 199  
 TMK ..... 017,022  
 TOSHIBA ..... 062,084,102,118  
 ..... 122,130,131,173,214  
 TOTEVISION ..... 184

UNIVERSAL .....	065,100
VICTOR .....	079,195
VIDTECH .....	017,018,022
VIKING .....	187
WARDS .....	013,014,017,018,022,037,046
.....	059,065,075,081,082,087,088
.....	089,096,100,101,108,132,133,197
YAMAHA .....	017,018,022
YUPITERU .....	055
ZENITH .....	096,134,164,165,166,167

## VCR CODES

ADMIRAL .....	014
ADVENTURA .....	039
AIKO .....	040
AIWA .....	015,039
AKAI .....	016,017,018,019,020
.....	021,124,125,126
AMERICAN HIGH .....	034
ASHA .....	026
AUDIO DYNAMICS .....	022,023
AUDIOVOX .....	027
BELL & HOWELL .....	024
BEAUMARK .....	026
BROKSONIC .....	025,038
CALIX .....	027
CANDLE .....	026,027,028,029,030,031,032
CANON .....	034,035,127
CAPEHART .....	033,123
CARVER .....	075
CCE .....	040,074
CITIZEN .....	026,027,028,029
.....	030,031,032,040
COLORTYME .....	022
COLT .....	074
CRAIG .....	026,027,036,074
CURTIS-MATHES .....	013,015,022,026
.....	029,031,034,035
CYBERNEX .....	026
DAEWOO .....	028,030,032,038,039
.....	040,041,123,143
DAYTRON .....	123
DBX .....	022,023
DIMENSIA .....	013
DYNATECH .....	015,039
ELECTROHOME .....	027,042
ELECTROPHONIC .....	027
EMERSON .....	015,019,025,027,028,034,037
.....	038,039,042,043,044,045,046
.....	047,048,049,050,051,052,053
.....	054,055,056,057,058,059,060
.....	078,118,126,129,130
FISHER .....	024,036,061,062,063,064,065,131
FUJI .....	034,132
FUNAI .....	015,039
GARRARD .....	039
GE .....	013,026,034,035,066,128,133
GOLDSTAR .....	022,027,031,067,134
GRADIENTE .....	039
HARLEY DAVIDSON .....	039
HARMAN KARDON .....	022,081

HARWOOD .....	074
HEADQUARTER .....	024
HITACHI .....	015,068,069,070,120,124,133,135
HI-O .....	036
INSTANT REPLAY .....	034
JCL .....	034
JC PENNEY .....	022,023,024,026,027,034,035
.....	068,069,071,072,073,120,131
JENSEN .....	124
JVC .....	022,023,024,031,071,124,136
KENWOOD .....	022,023,024,029,031,071,124,136
KLH .....	074,144
KODAK .....	027,034
LLOYD .....	015,039
LOGIK .....	074
LXI .....	027
MAGNAVOX .....	034,035,075,076,117,121,137
MAGNIN .....	026
MARANTZ .....	022,023,024,029,031,034,071,075,077
MARTA .....	027
MASUSHITA .....	034
MEI .....	034
MEMOREX .....	014,015,024,026,027
.....	034,036,039,056,117
MGA .....	042,078,126
MGN TECHNOLOGY .....	026
MIDLAND .....	066
MINOLTA .....	068,069,120
MITSUBISHI .....	042,068,069,078,079
.....	080,081,082,083,084
.....	085,086,087,119,126,136
MONTGOMERY WARD .....	014,088
MOTOROLA .....	014,034
MTC .....	015,026,039
MULTITECH .....	015,026,039,066,074
NEC .....	022,023,024,029,031,071,077
.....	089,090,091,092,124,136
NIKKO .....	027
NOBLEX .....	026
OLYMPUS .....	034
OPTIMUS .....	014,027
OPTONICA .....	109,147
PANASONIC .....	034,035,122,138,139,140
PENTAX .....	029,068,069,029,120,133
PENTEX RESEARCH .....	031
PHILCO .....	034,035,075,076
PHILIPS .....	034,075,109,137
PILOT .....	027
PIONEER .....	023,068,093,094,136
PORTLAND .....	029,030,032,123
PROSCAN .....	013
PROTEC .....	074
PULSAR .....	117
QUARTER .....	024
QUARTZ .....	024
QUASAR .....	034,035,138
RCA .....	013,016,026,034,068,069,095
.....	096,097,098,099,100,101,102
.....	103,104,120,128,133,138
RADIOSHACK/REALISTIC .....	014,015,024,026,027
.....	034,035,036,039,042
.....	062,063,109
RADIX .....	027
RANDEX .....	027
RICOH .....	141



.....	.....
FUJITSU .....	044,045
.....	.....
GENERAL INSTRUMENTS .	017,018,019,046,047,048
.....	.....
JANEIL .....	049
JEROLD .....	050
.....	.....
KENWOOD .....	051
.....	.....
LUXOR .....	052
.....	.....
MACOM STATE .....	053
.....	.....
NORSTAT .....	054
.....	.....
REALISTIC .....	020,056,057
.....	.....
SCIENTIFIC ATLANTA .....	060
SIERRA I, II, III .....	014
STAR TRAK .....	061
STS .....	021,022,023,024,058,059
SUPER GUIDE .....	062
.....	.....
TOSHIBA .....	025,063
.....	.....
UNIDEN .....	026,064
.....	.....
VIDEO CIPHER II .....	027

## DSS CODES

ECHOSPHERE .....	071
ECHOSTAR .....	071
.....	.....
DISH NETWORK .....	071
.....	.....
HUGHES SATELLITE .....	075
.....	.....
PANASONIC .....	069,072
PRIMESTAR .....	070
.....	.....
RCA .....	065
.....	.....
SONY .....	066
STAR SIGHT CABLE SERVICES .....	073
.....	.....
TOSHIBA .....	067,068,074

## LASER DISC CODES

PIONEER .....	093
PROSCAN .....	146
.....	.....
RCA .....	146

## CD CODES

ADC .....	013
ADCOM .....	014,067
AIWA .....	015,016
AKAI .....	068,090
AUDIO ALCHEMY .....	017
AUDIO TECHNICA .....	018
.....	.....
BSR .....	017
.....	.....
CALIFORNIA AUDIO LABS .....	069
CAPETRONIC .....	022
CARRERA .....	017

CARVER .....	019,020,021
CASIO .....	070
CURTIS MATHES .....	070
.....	.....
DENON .....	023,024
.....	.....
EMERSON .....	014,025,026
.....	.....
FISHER .....	020,027,028,029,030,071
.....	.....
GE .....	078
GENEXXA .....	025,026,031,072
GOLDSTAR .....	032,073
.....	.....
HARMON KARDON .....	033
HITACHI .....	031
.....	.....
INKEL .....	034
.....	.....
JC PENNEY .....	043,070
JVC .....	035
.....	.....
KENWOOD .....	027,036,037,038,080,081
KRELL .....	019
KYOCERA .....	013
.....	.....
LUXMAN .....	039,040,082,083,091
LXI .....	025,070
.....	.....
MAGNAVOX .....	019,084
MARANTZ .....	019,041,042,085
MCS .....	043,070
MGA .....	044
MISSION .....	019
MITSUBISHI .....	044,045
.....	.....
NAD .....	074,092
NAKAMICHI .....	046,047
NEC .....	043
NIKKO .....	018,026,029
NSM .....	019
.....	.....
ONKYO .....	048,049,075
OPTIMUS .....	017,020,021,025,031
.....	037,050,051,052,053
.....	.....
PANASONIC .....	069,086,093
PHILIPS .....	019,084
PIONEER .....	031,054,055,072
PROTON .....	019
.....	.....
QUASAR .....	069
.....	.....
RCA .....	014,020,025,056,076
RCA Digital Video Disc .....	096
REALISTIC .....	014,020,022,025
.....	026,031,042,050,052
ROTEL .....	019
.....	.....
SAE .....	019
SAMSUNG .....	094
SANSUI .....	019,025,057,076,087
SANYO .....	020,058,071,088,095
SCOTT .....	014,025,026
SEARS .....	025,037,042,070
SHARP .....	037,042
SHERWOOD .....	034,042,051,059
SHURE .....	043
SONY .....	060,061

STS .....	013
SYLVANIA .....	019
SYMPHONIC .....	062
.....	.....
TEAC .....	029,042,052,062,063,064
TECHNICS .....	069,086,089
THETA DIGITAL .....	084
TOSHIBA .....	074
.....	.....
VECTOR RESEARCH .....	017,032
VICTOR .....	035
.....	.....
YAMAHA .....	018,065,066,077

## HOME AUTOMATION CODES

X-10 HOME AUTOMATION (RF) .....	013
X-10 HOME AUTOMATION (IR543) .....	014
GE HOMEMINDER .....	015
.....	.....

## USING AUX TO CONTROL A SECOND TV, VCR, CABLE BOX OR SATELLITE RECEIVER

The AUX button is normally used to control an audio component, but it can also be configured to control a second TV, VCR, cable box or satellite receiver.

1. Turn on the equipment you want to control.



2. Press and hold SETUP until the LED indicator lights steadily. Release Setup button.




3. Press either AUX button, then press the mode button that matches the equipment you want to control (TV, VCR, CBL, SAT).



4. Press and release the mode button that matches the A/V equipment you want to control. The LED blinks once.



5. Enter the 3 digit Code from the Library Code Tables. The LED turns off after the last digit entered.

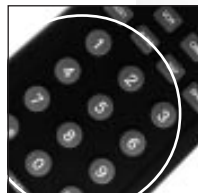

6. Point the remote at your audio component and press the POWER button. Your audio component should turn off.



7. Turn your audio component on and press CH +. If it responds, setup is complete.




### Notes:

**If your audio/video component does not respond**, try the other codes for your brand. If it still doesn't respond, try the Code Search method on page 26.

**If the LED blinks rapidly when you enter the code**, you may have entered an invalid code. Recheck the code in the code list and try again.

## SEARCHING FOR CODES

1. Turn on the device you want to control.

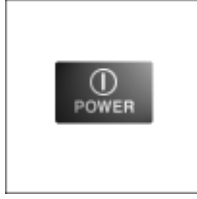


2. Press and hold SETUP until the LED indicator lights steadily. Release Setup button.




3. Press the mode button that matches the equipment you want to control. The LED blinks once.




4. Press CH + repeatedly\* until the device to be controlled changes channel.

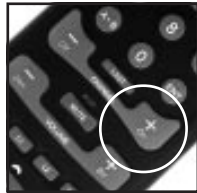

If you go past the code accidentally, just press LAST repeatedly until the channel changes again.

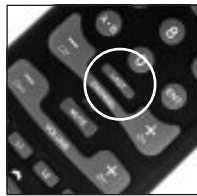

5. Press and release the ENTER button to complete the setup.

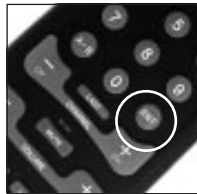

**\*Note:** You may have to press CH + many times (50+). If the device does not have a Channel Up function, use the PLAY button (VCR only) or the POWER button.

## IDENTIFYING CODES FOUND USING THE SEARCH PROCEDURE

1. Press and hold SETUP until the LED indicator lights steadily. Release Setup button.




2. Press the mode button that matches the equipment you want to identify. The LED blinks once.




3. Press and release SETUP. The LED blinks once.




4. To find the first digit, press each number button from 0 to 9 until the LED blinks. The number you pressed is the first digit of the code.

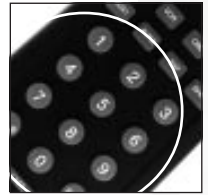

5. Press each number button from 0 to 9 again as above to find the second digit.

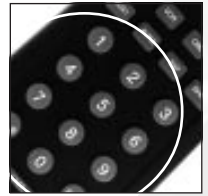

6. Press each number button in turn to find the third digit. When the third digit has been found, the LED will go out.

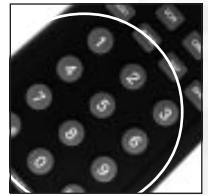


## SETTING THE SLEEP TIMER

The Sleep Timer automatically turns off the TV after the time you set. Press the TV button, then follow the instructions below to set the Sleep Timer:


1. Press and hold **TIMER** until the LED indicator lights steadily. Release **TIMER** button.



2. Use the number buttons to enter the sleep time required (1 to 99 minutes).

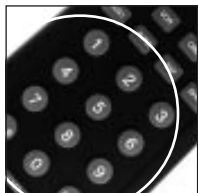

3. Press **ENTER** to confirm the setting.

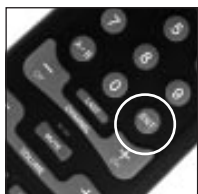

**Note:** Make sure you leave the remote pointing at the TV to ensure it turns off the TV at the time you set.

Your UR24A Learning SuperRemote has the codes for most TVs, VCRs, etc. in its code library. However, if the code for your particular device is not found in the library, you can learn these codes from your existing remote. Or if you find a code from the tables in this manual that “almost” matches your device, but a few buttons are missing, you can learn just those buttons.

1. Point your existing remote at the SuperRemote with a distance of about 2 inches between the remotes.



2. Press and hold **SETUP** until the LED indicator lights steadily. Release the **Setup** button.



3. Press the mode button that matches the equipment you want to learn. The LED blinks once.



4. Press and release the **LEARN** button. The LED blinks once.



5. Press and release the button on the SuperRemote that you want to teach. The LED blinks once. (Press shift first to learn a shifted function).



See notes on pages 30 and 31.




6. Press the button on your existing remote that you want to learn. Hold the button until the LED on the UR24A SuperRemote blinks off.



7. Repeat steps 5 and 6 for each button you want to learn.

8. When you've finished learning all the keys, press ENTER.

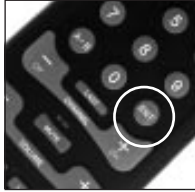

### Notes:

Make sure you have fresh batteries in both remotes before learning.

Take care not to move either remote while pressing the buttons.

Experiment with the distance between the remotes if you have a problem learning.

Some remotes do not have their LED in the center so you might need to experiment with the side-to-side position of the remotes relative to each other.

Do not sit directly under an incandescent lamp while teaching the Learning SuperRemote.

In most cases you will hold the button on the remote you are learning from until the LED goes out on the Learning SuperRemote. In some cases however, you might find that the LED on the Learning SuperRemote doesn't go out until you release the key on the remote you are learning from.

Use buttons L1 and L2 to learn codes for which the Learning SuperRemote does not have a corresponding button.

If you have problems learning keys, try a Master Reset (Page 12) and then try learning them again.

You cannot store any functions under the following keys:

Learn	AUX2	Shift VCR
Setup	X10	Shift Cable
TV	Timer	Shift SAT
VCR	Enter	Shift CD
Cable	Shift	Shift AUX1
SAT	Shift Learn	Shift AUX2
CD	Shift Setup	Shift X10
AUX1	Shift TV	Shift Timer

You cannot **store** two products under the same key using shift, i.e. you can't enter the 3 digit code for a VCR and then press shift and enter another 3 digit code for another VCR. But you can **learn** a second product using SHIFT as follows.

e.g. For two VCRs:

Press SETUP, VCR, then enter the 3 digit code for your first VCR (see page 14 for more details).

For VCR2:

Press SETUP, VCR, LEARN.

Then press SHIFT, then Play (on the UR24A) then Play (on the original VCR remote).

Then SHIFT, then Stop (on the UR24A) then Stop (on the original VCR remote), etc.

Then Enter.

Then to access each VCR:

Press VCR on the UR24A and the appropriate key on the UR24A to access the first VCR.

Press VCR and then Shift, and then the appropriate key to access the second VCR. You can keep pressing keys and you will stay in the "shifted mode" for about 10 seconds. You will time out of the shifted mode about 10 seconds after the last key is pressed.




# -CONTROLLING X-10- MODULES

If you have already installed the Transceiver Module, you can control it and other X-10 modules as follows:


1. Press and release the X-10 button.



2. Use the number buttons to enter the Unit Code number of the chosen module. (You do not need to enter '0' first for a single digit number.)

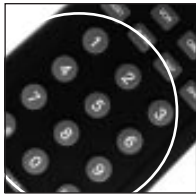

3. Press the appropriate button for the function you require (see below).

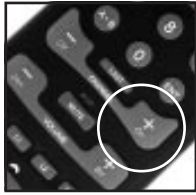

## X-10 FUNCTIONS:

On:	CHANNEL +
Off:	CHANNEL -
Bright:	VOLUME +
Dim:	VOLUME -
All Lights On:	POWER
All Modules Off:	MUTE

**Note:** You cannot dim or brighten an Appliance Module. If the module was off and you press Bright or Dim (VOLUME+ or VOLUME-) this will simply turn the module on.

## TO SET THE X-10 SLEEP TIMER

The X-10 Sleep Timer switches off the chosen modules after the preset time.


1. Press and release the X-10 button.



2. Press and hold TIMER until the LED indicator lights steadily. Release TIMER button.




3. Use the number buttons to enter the module Unit Code for the module to be turned off.

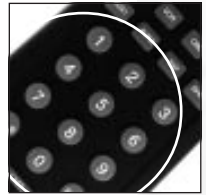


4. Press the desired function button (e.g. CH - to turn the module off after the preset time).



5. Using the number buttons enter the sleep time required (1 to 99 mins).

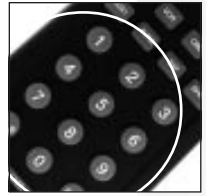

6. Press ENTER to confirm the setting.

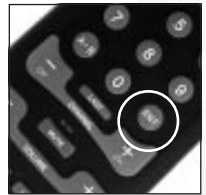

## CHANGING THE X-10 HOUSE CODE:

The Learning SuperRemote defaults to House Code A, and in most cases you will not need to change this unless you are experiencing interference from a neighboring X-10 system.


1. Press and release the X-10 button.




2. Press and hold SETUP until the LED indicator lights steadily. Release the Setup button.



3. Use the number buttons to enter the number equivalent to the chosen House Code (1=A, 2=B ..16=P).

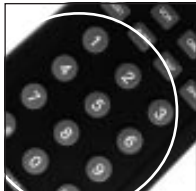

4. Press the ENTER button to confirm the House Code. The LED turns off.

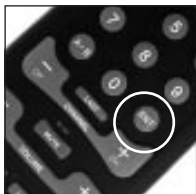

**Note:** The Housecode you choose must match the Housecode on the Transceiver Module you are using it with.

## CONTROLLING AN IR MINI CONTROLLER (IR543)

If you already own an IR Mini Controller, you will need to change the X-10 Home Automation code in the remote to use it. The code for standard X-10 Home Automation is 013. The code to control the IR mini controller is 014. To change the code:


1. Press and hold SETUP until the LED indicator lights steadily. Release the SETUP button.



2. Press and release the X-10 button.



3. Enter 014 to control an IR Mini Controller, 013 for standard X-10 control. The LED turns off after the last digit entered.

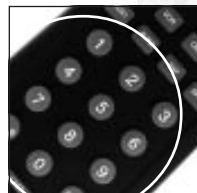

**Note:** In most cases, you will not need to use the IR Mini Controller to receive commands from the UR24A Learning SuperRemote - the Transceiver Module does this for you and has the added advantage of working through walls. You can't control the IR Mini Controller and the Transceiver Module at the same time.

# EXPANDING YOUR SYSTEM

The products illustrated below represent just a few of the wide range of X-10 compatible products you can choose from to expand your Home Automation system. They are available from electrical outlets, department stores and mail order catalogs.

X-10 Home Automation products also integrate with X-10 security systems, so you can use the security remotes that come with them to control macros and flash lights when the security system is tripped.


 
Check out our Web Site at:

[HTTP://WWW.X10.COM](http://www.x10.com)

for more information on these and many other X-10 products.



## The **Dual Floodlight Motion Detector**

**PR511** turns on at dusk and/or when it detects movement, and sends X-10 signals to control other modules, or trigger ActiveHome macros.

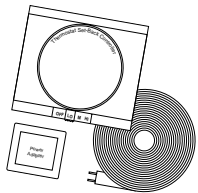


The **Thermostat Setback Controller** **TH2807** mounts below your thermostat to reduce the room temperature at night or at the times you set to save energy. No wiring needed to your existing thermostat.

 Replace your existing wall switches with the **Wall Switch Module WS467**. Installs like a regular dimmer. On/Off and Bright/Dim functions. Other models available for 3-way lighting.

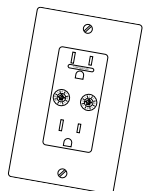



Replace an existing AC wall outlet with the **Receptacle Module SR227**. Has one 15A/1800W controlled outlet and one outlet which is always on.

Use a controller to trigger the **Remote Chime Module SC546** to call Dad up for dinner, or warn people you're about to turn on the sprinkler.

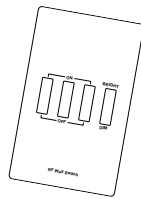

Fit a **Wireless Wall Switch RW724** anywhere you need an extra switch - with no wires. Sends commands to the Transceiver Module just like a remote.

  Use the isolated contacts on the **Universal Module UM506** to control pool pumps, sprinklers, drapes and other low voltage equipment. Includes built in warning beeper.



Switch entrance or garage lights on from your car with the convenient **Keychain Remote KC674**.

The **PowerFlash Module PF284** connects to dry contact or low voltage alarm terminals on your burglar alarm system and flashes X-10 controlled lights when it is triggered.



Plug in a **Heavy Duty Module HD245** to control 220V appliances such as air conditioners and water heaters.

## **The Transceiver Module doesn't respond to the remote:**

- Check the House Code of the Transceiver Module is set to A. If you have changed the Housecode on the remote (see p. 33), check that it matches the Housecode on the module.
- Press the ON/OFF button on the front of the module to confirm it operates the equipment connected to it.

## **The Transceiver Module works, but other modules don't respond:**

- Check that the module has the same Housecode as the Transceiver Module.
- Try plugging the module into a different outlet.

## **The Remote won't control your A/V equipment, or doesn't work at all:**

- Use manual controls or the original remote control to confirm the equipment is working properly.
- Be sure you pressed the device key for the device you want to control.
- Re-enter the code for your A/V product from the code listings on pages 15 through 24.
- Replace the Remote's batteries.