


Your Remote Control

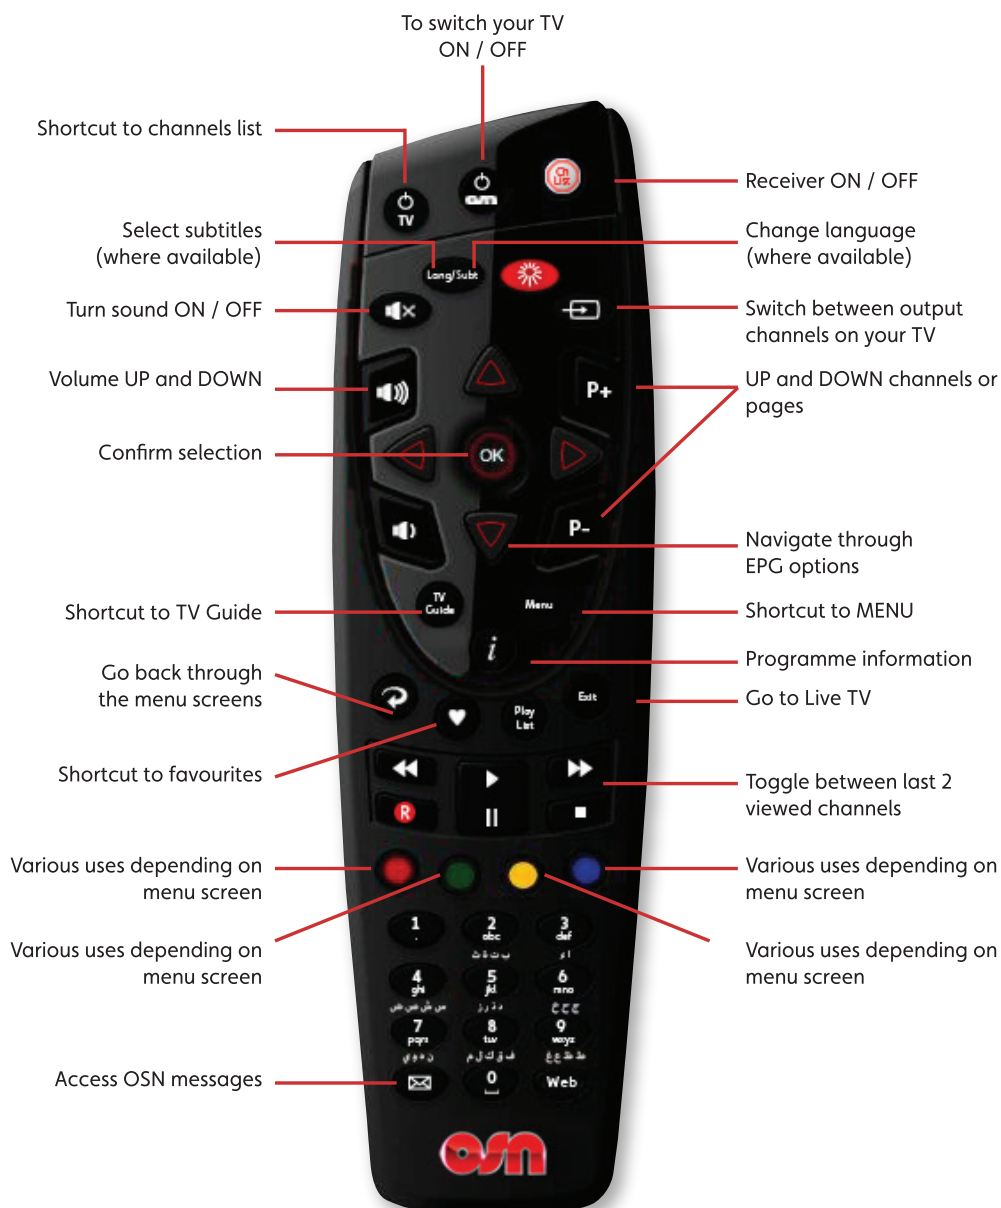

Your Remote Control

CONTROLLING YOUR TV'S FEATURES WITH YOUR REMOTE CONTROL

You can use your remote control to control some of your TV's features. After you press the TV button you can:

- Turn your TV ON/OFF using the **TV**  button
- Adjust the volume using **V+** and **V-**
- Mute the volume using the **Mute** button
- Select AV channels using the **AV** button

First, you must configure your remote control to use the correct TV Code for your brand of TV. You can either set the code yourself (option 1), or let your remote control search for the correct code (option 2).

The volume control and mute is by default set to control your OSN receiver even if the remote has been setup correctly. Holding down **OK** and **V+** until the remote blinks twice will allow you to control your TV's volume. To revert the remote to controlling your receiver's volume, hold down the **OK** and **V-** until the remote control blinks four times.

Option 1

1. Hold down **TV** and **OK** together, until the indicator blinks twice.
2. Use the **number** buttons to enter a 4 digit TV code for your brand of TV (see table on page 8).
3. If the code you entered is valid, the indicator will blink twice.
4. Verify if the other controllable TV functions are functioning.

Note: If the TV code is invalid, or you press an incorrect button, the indicator blinks once for a longer period. The previous settings are then restored and the setup routine ends.

Option 2

1. Hold down **TV** and **OK** together, until the indicator blinks twice.
2. Press **9-9-1**. The indicator will blink twice again.
3. Press **TV** button. Aim the remote at the TV and press **P+**.
4. If the TV does not turn off after 3 seconds, press **P+** again. Keep repeating this until the TV turns off. If the remote blinks 3 times after pressing **P+**, that indicates that the remote has cycled through the entire database and if you still cannot control your TV, your TV is not supported by this remote. Once the TV responds, proceed to step 5
5. Press **OK**. The indicator blinks twice to confirm that the TV code has been set.
6. Verify if the other controllable TV functions are functioning.

If you do not press any remote control buttons within a 20 second period during either setup method, the previous settings are restored and the setup routine ends.

Your Remote Control

TV CODES

If a 4-digit code does not work, try the next 4-digit code for your brand of TV.

LG	0001 0178 1993 1663 0037 0556 0370 0377 0032 0009 0714 0644 1539 0056 0060 0217 0108 0216 0431 0290 0163 1934 0606 0109 1637 0698 0715 0823 0829 1146 1148 1191 1252 0247 0361 1718 1681
Amstrad	0009 0177 0037 0516 0264 0354 0362 0371 0075 0412 0218 0433 0556 1037 0648 0581 1904 1324 1982
Grundig	0195 0535 1223 0037 0070 0191 0487 0554 0556 0587 0672 1037 0706 0443 0205 0237 0215 0009 0036 0077 0370 0740 1935 1908 0260 0630 0757 1916 1308 0178 1376 0343 1981 1667
Hitachi	0145 1576 0481 0009 0578 0719 0225 0349 0032 0036 0744 1585 0737 0039 0043 1037 0044 0056 1484 1481 0109 1667 0157 1225 0163 0634 1045 0178 0179 0473 0186 0563 0217 0343 0196 1163 0576 0508 0548 1194 0499 1149 0797 1170 0194 0777 0480 0276 0516 0075 0072 0037 1156 0469 0556 1137 0105 0492 0359 0361 0512 0629 0877
KTV	0039 0217
JVC	0653 0069 1253 0731 0036 1153 0606 0190 1653 0371 1053 0508 0683 0192 0193 0218 0418 0093 0650
Panasonic	0650 0226 1636 1650 1310 0037 0556 1210 1510 0163 0340 0208 0214 0508 0896 0361 0853 0237 1930 0850 0367 0368 0516 0075 0548 0771 0001
Philips	0037 0556 0056 1506 0639 0605 1495 0012 0690 0772 1246 0186 0013 0178 0323 0108 1304 0554 0032 0043 0087 0193 0374 0721 0423 0343 0009 0200 0361 1521
Pioneer	1260 0109 0679 0163 0166 0037 0556 1398 0423 0428 0370 0343 0361 0486 0512
Samsung	0644 0766 0060 0056 0814 0618 0587 0009 1619 1458 0482 0556 1249 0032 1584 0150 1235 0178 0037 0179 0217 0264 0329 0448 0370 0039 0208 0226 0072 0682 0216 0290 0821 0519 0163
Sharp	0093 0009 1193 1586 0032 0036 1393 0818 0039 0157 0491 0256 1587 0650 0294 0653 0412 0193 0186 0516 0200
Sony	1505 0011 1651 1317 0036 0650 1010 0353 1551 0834 0102 0742 0157
Thomson	0625 0560 0343 0109 0501 0753 0399 0471 0335 0196 0205 0237 0037 0556 0568 0490 0320 0349 0216
Toshiba	1508 0508 0650 0009 1704 1164 0036 0060 1656 0714 0070 0093 0145 1945 0502 0204 0264 1935 0412 0102 0241 0618 0644 0821 1156 0217 0109 0490 0077 0195 0191 1916 1908 0698 0037 0736 0832 1556 1037

If the brand of your TV is not listed here, please refer to www.osn.com/tvcodes for additional information.

To clear the current TV code programmed in the remote, press **TV** and **OK** together until the LED blinks twice. Then press **9-7-7**. The LED will blink twice again. The remote will still be able to control your receiver.