

USER GUIDE



HD TERMINAL
MULTI-ROOM HD PVR



YOUR REMOTE CONTROL



LEGEND:

PVR: Multi-Room HD PVR

IOD: illico On-Demand

For further information, visit videotron.com/terminal-support.

PROGRAM YOUR REMOTE CONTROL

To get the most out of your new terminal, we recommend that you read the next few pages to ensure that you properly program your remote to your TV.

There are three ways to program your remote control:

- 1. Quick programming: for your TV only.
- 2. Programming using automatic search: for your TV or audio system.
- 3. Programming by code: for your TV or audio system.

QUICK PROGRAMMING OF YOUR REMOTE CONTROL

If your TV brand is not among the 10 brands listed below, please use the Automatic Search Programming Method described on the next page.

- 1. Turn on your TV.
- 2. Hold down  and  at the same time until the red light under  blinks twice, then release both buttons.
- 3. Press  once. The red light will stay lit.
- 4. Point the remote control at the TV. Refer to the table below and enter the number corresponding to the brand of your TV (e.g. 2 for LG). The red light will blink twice and the TV will turn off.
- 5. Press  to lock the code.
- 6. Turn your TV back on. If this programming procedure did not work, repeat steps 2 to 5 or use the Automatic Programming procedure described on the next page.
- 7. Once your remote control has been programmed, press  and select Settings.
- 8. Then select Equipment Settings and specify that the remote's volume adjustment keys control the volume on the TV (see Equipment Settings on page 16).

NUMBER	HD TV BRANDS
1	INSIGNIA
2	LG
3	MITSUBISHI
4	PANASONIC
5	PHILIPS/MAGNAVOX

NUMBER	HD TV BRANDS
6	SAMSUNG
7	SHARP
8	SONY
9	TOSHIBA
0	VIZIO

For further information, visit videotron.com/terminal-support.

PROGRAMMING YOUR REMOTE CONTROL USING THE AUTOMATIC SEARCH METHOD

If the Quick Programming procedure did not work, follow the instructions below. This remote control programming method allows you to control your TV and your audio system.

NOTE: When you have programmed the remote control to your audio system, you will no longer be able to adjust the volume on your TV, only on your audio system.

1. Turn on your TV and audio system. Program your TV first.
2. Hold down  and  at the same time until the red light under  blinks twice, then release both buttons.
3. Press **9-9-1** on the remote control. The button will flash twice.
4. Then press **1** if you are looking for a TV code or **3** if you are looking for an audio system code.
5. Point the remote control at your TV or audio system, then press and release the **CH+** button until the device that you are programming turns off. You may need to press **CH+** several times in order to make this happen.
6. When the device turns off, press  to lock the code. The red light will blink twice. If this programming procedure did not work, repeat steps 2 to 5.
7. To program your audio system, repeat steps 2 to 5.
8. Once your remote control has been programmed, press  and select **Settings**.

NOTE: If neither of the two suggested programming methods work, refer to the programming by code method.

For further information, visit videotron.com/terminal-support.

PROGRAMMING YOUR REMOTE CONTROL WITH A CODE

Follow the instructions below if you would like to program the remote control to your TV and audio system.

NOTE: When you have programmed the remote control to your audio system, you will no longer be able to adjust the volume on your TV, only on your audio system. However, this setting can be modified by following the instructions on page 15 (see the **Change How Your Remote Control Is Programmed** section).

1. Turn on your TV or audio system. Program your TV first.
2. Find the code corresponding to the brand of your device in the list at the end of this guide.
The brands are listed in alphabetical order.
3. Hold down  and  at the same time until the red light under  blinks twice, then release both buttons.
4. Enter the first five-digit code on your device. If you have done it correctly, the  backlight will blink twice.
NOTE: If the button blinks once and remains lit for a long time, this means the code you have entered is invalid. Repeat steps 3 and 4 using the same code or another code, if possible.
5. Point the remote control at your device and press . The device should turn off. If nothing happens, repeat steps 2 to 5.
6. To program your audio device, repeat steps 2 to 5.
7. Once your remote control has been programmed, press  and select Settings.
8. Then select Equipment Settings and specify that the remote's volume adjustment keys control the volume on the TV (see Equipment Settings on page 16).

Your TV code: _____

Your audio system code: _____

For further information, visit videotron.com/terminal-support.

CHANGE HOW YOUR REMOTE CONTROL IS PROGRAMMED

Changing the volume button:

When you program your remote control to your TV and audio system, the volume button will work with the device that you programmed last. To control the volume via your TV or audio system, please refer to the following instructions.

To control the volume via your TV:

1. Hold down  and  at the same time until the red light under  blinks twice, then release both buttons.
2. Press **9-9-3**. The red light will blink twice.
3. Press 2.

To control the volume via your audio system:

1. Hold down  and  at the same time until the red light under  blinks twice, then release both buttons.
2. Press **9-9-3**. The red light will blink twice.
3. Press 3.

RESETTING YOUR REMOTE CONTROL

If you would like to reprogram your remote control to other devices or if you are having problems getting it to work, you can reset it by following these steps:

1. Hold down  and  at the same time until the red light under  blinks twice, then release both buttons.
2. Press **9-7-7** on your remote control. The red light will blink four times to confirm that the remote control has been reset.

LIST OF REMOTE CONTROL PROGRAMMING CODES

TV Codes

3M - 10737, 11616, 11655	Brockwood - 10019	Durabrand - 10463, 10180,	Goodmans - 10360
A-Mark - 10003	Broksonic - 10236, 10463,	10178, 10171 11034,	GPX - 10360
Abex - 10032	10003, 10426 11905,	10003, 11665	Gradiente - 10392
Accurian - 11803	11911, 11929, 11935	Dwin - 10747	Grumpy - 10180, 10179
Action - 10873	Byd:sign - 11309	Dynex - 12049, 11463	H & B - 11366
Admiral - 10093, 10463,	C&M - 10700	Eiki - 10735	Haier - 11034, 10768,
10179	Cadia - 11283	Electroband - 10000, 10185	11009, 11570, 11748
Advent - 10761, 10783,	Candle - 10030, 10046,	Electrograph - 11755,	Hallmark - 10178
10815, 10817 10842,	10056, 10186	11623	Hanns.G - 11783
11933	Carnivale - 10030	Electrohome - 10463,	Hannspree - 11348, 11745,
Adventura - 10046	Carver - 10054, 10170	10381, 10409, 11570	11783
Afron - 10891	Casio - 10611, 11205	11670, 11672	Harley Davidson - 10043,
Aiko - 10092	CCE - 10217, 10329	Element - 11687, 12183	10179, 11904
Aiwa - 10032, 10701,	Celebrity - 10000	Emerson - 11864, 11394,	Harman/Kardon - 10054
11362, 11955	Changhong - 10765	10154, 10451, 10236,	Harvard - 10180, 10068
Akai - 10812, 11675, 10702,	Cinego - 11986	10462, 10180, 10178,	Hewlett Packard - 11494,
10030, 10098, 10672,	Citizen - 10060, 10030,	10171, 11661, 11905,	11088, 11089, 11101
11207, 11385, 11676,	10092, 10046 10056,	11909, 11911, 11913,	Hisense - 10748, 11314,
11686, 11688, 11689,	10186, 10280, 10561	11929, 11944, 11963,	11660, 12089
11690, 11692, 11935,	11669, 11671, 11672,	12167, 10282, 10280,	Hitachi - 10279, 10227,
12232	11935	10183, 10182, 10181,	10217, 10173, 10151,
Alaron - 10179, 10183,	Claritone - 10185	10179, 10177, 10158,	10097, 10096, 10095,
10216	Clarion - 10180	10039, 10038, 10019,	10056, 10043, 10038,
Albatron - 10700, 10843	Classic - 11984	10002	10036, 10032, 10016
Ambassador - 10177	Coby - 11538, 12017,	Emprex - 11422, 11765	HP - 11494, 11088, 11089,
America Action - 10180	12306, 12314 12315,	Encross - 10876, 11474	11101
Anam - 10180, 10004,	12326, 12338, 12340,	Envision - 10030, 10813,	Hyundai - 10849, 11219,
10009, 10008	12344, 12345, 12347,	11365, 12014, 12087	11294
Anam National - 10161	12348 12351, 12560	Epson - 11122, 11290	I-Inc - 11746
AOC - 10030, 10003, 10019,	Commercial Solut. - 10047	Erae - 11222	iLo - 11394, 11286, 11603,
10052, 10185, 11089,	Compaq - 10749	ESA - 10171, 11944, 11963	11665, 11684, 11990
11365, 11589, 11590,	Concerto - 10056	Fisher - 10154, 10159	Infinity - 10054
12014, 12087, 12402,	Contec - 10180	Fujitsu - 10179, 10186,	Initial - 11603, 11990
12479	Craig - 10180	12008	Insignia - 12049, 11423,
Aomni - 11623	Crosley - 10000, 10054	Funai - 10000, 10180,	10463, 10171, 11204,
Apex Digital - 10748, 10879,	Crown - 10180, 10039	10171, 10179, 11904,	11326, 11385, 11517,
10765, 10890 11217,	CTX - 10700	11963	11660, 11892, 11963,
11991, 12397	Curtis - 11200, 11326,	Futuretech - 10180	12002, 12417
Archer - 10003	12352, 12466	Gateway - 11755, 11001,	Inteq - 10017
Astar - 11531, 11738	CXC - 10180	11756	IRIS - 12189
Audiovox - 10451, 10180,	Cyberhome - 10794	GE - 10047, 10051,	IX - 10877
10092, 12513, 11952,	Cyttron - 11326	10451, 10178, 10021,	Janeil - 10046
11951, 11937, 11868,	Daewoo - 10145, 10451,	10027, 10029, 10055,	JBL - 10054
11803, 11769, 11766,	10092, 11661 10019,	10135, 10279,	JCB - 10000
11284, 10875, 10846,	10066, 10067, 10091	10282, 10747, 11907,	JCM - 12189, 12256
10802, 10713, 10623,	10672, 11909	11919, 11922, 12359	Jensen - 10761, 10050,
10003, 12413	Daytron - 10019	GFM - 10171, 11665, 11963,	10817, 11299, 11326,
Aurora Systems - 10801	Dell - 11264, 11080, 11178	12167	11933
Aventura - 10171	Delta - 11369	Gibraltar - 10017, 10030,	JVC - 10463, 10053, 10036,
Axion - 10171	Denon - 10145, 10511	10019	10069, 10160, 10169,
Belcor - 10019	Diamond Vision - 11996	Go Video - 10886, 11823,	10182, 10731
Bell & Howell - 10154,	Digistar - 11565	11831	Kamp - 10216
10016	Digital Lifestyles - 11765,	GoldStar - 10178, 10030,	Kawasho - 10158, 10216,
BenQ - 11032, 11315	11822	10002, 10019, 11032,	10308
Bradford - 10180	Disney - 11665, 12152	10039, 10056, 10409,	Kaypani - 10052
Brilliant - 11007	Dumont - 10017, 10019	11926	KDS - 11687

For further information, visit videotron.com/terminal-support.

KEC - 10180	10155, 10331, 10592, 11797	11262, 10865, 11385	Simpson - 10186, 10187
Kenwood - 10030, 10019	Monivision - 10700, 10843	Portland - 10451, 10092, 11661, 10019, 10039	Skyworth - 11799
KLH - 10765, 10767	Motorola - 10093	Prism - 10051	Solarism - 11220
Kloss - 10024, 10046	MTC - 10060, 10030, 10019, 10056, 10091, 10185, 10216	Proscan - 10047, 10030, 10466, 10747, 11922, 12147, 12183, 12256	Sole - 11031, 11366, 11377, 11483, 11530, 11623, 12076
Knoll Systems - 10781	Multitech - 10180, 10217	Proton - 10178, 10003, 10031, 10052, 10466	Sony - 10810, 10000, 10011, 10080, 11400, 11685, 11904, 11925
KMDS - 12278	NAD - 10156, 10178, 10056	Protron - 11320, 11323	Soundesign - 10180, 10178, 10179, 10186
Konka - 10632, 10638, 10707, 11385, 11831, 11939	Nakamichi - 11493	Proview - 11687	Sova - 11320, 11952
Kost - 11262, 11483	Naxa - 11998	Pulsar - 10017, 10019	Soyo - 11746, 11826, 11828, 11830, 11831
Kreisen - 10876, 11474	NEC - 10030, 10019, 10036, 10056, 10170, 10704, 11797, 12026	Pvision - 11222	Spectricon - 10003, 10137
KTV - 10180, 10030, 10039, 10183, 10185, 10217, 10280	NetTV - 11755	Pyle - 11200	Spectroniq - 11687
LG - 11423, 10017, 11265, 10178, 10442, 10700, 10856, 11178, 11530, 11637, 11934	Nexus Electronics - 12183	Quasar - 10250, 10051, 10165, 10219, 11291, 11919, 11924, 11969	Squareview - 10171
LiteOn - 10088	Nikko - 10178, 10030, 10092	RCA - 12434, 10047, 10051, 10093, 11661, 12932, 12746, 12002, 11958, 11953, 11922, 11919, 11907, 10747, 10278, 10254, 10135, 10090, 10038, 10029, 10019, 10018	SSS - 10180, 10019
Lloyd's - 11904	Niko - 11581	Realistic - 10154, 10180, 10178, 10030, 10019, 10032, 10039, 10056, 10165	Starlite - 10180
Loewe - 10136	Noblex - 10430	RevolutionHD - 11623	Studio Experience - 10843
Logik - 10016	Norcent - 10748, 10824, 11089, 11365, 11590, 11591	Rhapsody - 10183, 10185, 10216	SunBrite - 11420, 11435, 12337
Luce - 10837, 11031	Norwood Micro - 11286, 11296	Runco - 10017, 10030, 10612	Superscan - 10093, 10864, 10944
Luxman - 10056	Noshi - 10018	Sampo - 11755, 10030, 10032, 10039, 10052, 10100, 10110, 11597	Supre-Macy - 10046
LXI - 10047, 10054, 10154, 10156, 10178, 10148, 10747	NTC - 10092	Samsung - 12051, 10060, 10702, 10178, 10030, 11959, 11060, 10814, 10766, 10587, 10482, 10427, 10329, 10217, 10056, 10039, 10032, 10019	Supreme - 10000
MAG - 11678	NuVision - 11657	Samsux - 10039	SVA - 10748, 10587, 10768, 10865, 10871, 10872, 11963
Magnasonic - 11713, 11913	Olevia - 11610, 11144, 11240	Sansui - 10463, 10171, 10165, 10173, 11670, 11892, 11904, 11911, 11929, 11935	Sylvania - 11864, 11394, 10054, 10030, 10171, 11963, 11944, 11931, 11913, 11665, 11314, 10587, 10381, 10187, 10096, 10065, 10028, 10024, 10020
Magnavox - 11454, 11866, 11755, 10054, 10051, 10030, 10171, 10706, 11944, 11963, 11931, 11913, 11904, 11990, 12372, 11525, 12597, 11365, 11198, 10802, 10386, 10230, 10187, 10186, 10179, 10096, 10036, 10028, 10024, 10020	Onwa - 10180	Sceptre - 10878, 11217, 11360, 11599, 12337	Symphonic - 10180, 10171, 11904, 11913
Magnin - 11907	Optimus - 10250, 10154, 10166, 11913, 11924	Scimitsu - 10019	Syntax - 11610, 11144, 11240
Majestic - 10016	Optoma - 10887, 11348	Scotch - 10178	Tandy - 10093, 10218
Marantz - 11454, 10054, 10030, 10704, 11714, 12447	Optonica - 10093, 10165	Scott - 10236, 10180, 10178, 10019, 10179, 10309, 11711	Tatung - 10003, 11101, 11286, 11287, 11288, 11361, 11503, 11756
Matsushita - 10250	Orion - 10236, 10463, 11463, 10179, 11905, 11911, 11929	Sharp - 10093, 10039, 10153, 10157, 10165, 10281, 10386, 10491	Technics - 10250, 10051
Maxent - 11755, 11597, 11714, 11757	Panasonic - 11480, 10250, 11457, 10051, 10161, 10162, 10226, 11291, 11919, 11924, 11947, 11969	Shenger Image - 11950	Technol Ace - 10179
MB Quart - 11868	Park - 12104	Sheng Chia - 10093	Techview - 10847, 12004
Megatron - 10178, 10145, 10003	PDI - 11474	Shogun - 10019	Techwood - 10051, 10003, 10056
Memorex - 10154, 10463, 10150, 10178, 10016, 10179, 10877, 11570, 11665, 11670, 11892, 11911, 11920, 11924, 11926	Petters - 11523	Signature - 10054, 10016	Teknika - 10054, 10180, 10150, 10060, 10092, 10016, 10019, 10039, 10056, 10179, 10186, 10032
MGA - 10150, 10178, 10030, 10019, 10155, 11907	Philco - 11394, 10054, 10030, 10171, 10019, 10020, 10024, 10028, 10096, 10179, 10187, 10381, 11665, 11963	Signet - 10800, 10844, 11262	Telefunken - 10702, 10056
Micro - 11436	Philips - 11454, 11394, 11866, 10054, 10690, 11483, 11744, 12372, 12597		Tera - 10031
Midland - 10047, 10017, 10051, 10032, 10039, 10135, 10747	Pilot - 10030, 10019, 10039		Thomas - 11904
Mintek - 11603, 11990	Pioneer - 11457, 10166, 10038, 10172		Thomson - 10209, 10625
Mintutz - 10021	Planar - 11496		TMK - 10178, 10056, 10177
Mitsubishi - 11250, 10093, 10150, 10178, 10014, 10019, 10036, 10098,	Polaroid - 11523, 10765, 12120, 12117, 12063, 12002, 11991, 11962, 11769, 11767, 11766, 11762, 11687, 11565, 11538, 11385, 11341, 11328, 11327, 11326, 11316, 11314, 11286, 11276, 11262, 10865, 11314, 11286, 11276,		TNCi - 10017

For further information, visit videotron.com/terminal-support.

TVS - 10463	11330, 11365, 11578,	White Westinghouse -
Ultra - 10391, 11323	11627, 11742, 12014,	10463, 11661, 11909
Universal - 10027	12087	WinBook - 11381, 11503
US Logic - 11286	Viking - 10046, 10312	Wyse - 11365
Vector Research - 10030	Viore - 11207, 11684,	Yamaha - 10030, 10019,
Venturer - 11865	11811, 12104, 12087	10797
VEOS - 11007	Visart - 11336	Zenith - 11423, 10000,
Victor - 10053	Vizio - 11758, 10864,	10047, 10017, 10463,
Video Concepts - 10098	10885, 11756	11265, 10178, 10030,
Vidikron - 10054	Waycon - 10156	10145, 10092, 11661,
Vidtech - 10178, 10019,	Westinghouse - 10451,	10160, 11365, 10016,
10036	10885, 10889, 10890,	11904, 11909, 11911,
Viewsonic - 11755, 10797,	12117, 11282, 11577,	11929
10857, 10864, 10885,	12293	Zonda - 10003

Audio Amplifier Codes

Accuphase - 30382	32706	Marantz - 30892, 30321,	Polk Audio - 30892, 30269,
Acurus - 30765	Elan - 30647	30269, 31892, 32138	32242, 32243
Adcom - 31100	Emotiva - 31908	Mark Levinson - 31438,	Primare - 31851, 31853,
Aiwa - 30406	Forte - 30606	32405	32008
Altec Lansing - 31742	Gateway - 31621	Macintosh - 30251	RCA - 30300
Anthem - 32220	GE - 30078	Mondial - 30765	Regent - 31568
Aragon - 39765	Goldstar - 30031	NAD - 31767, 31995, 32879	Russound - 31873
Arcam - 31881	Halcro - 31934, 32198	Naim - 30552	Sansui - 30321
Bladelius - 31994	Harman/Kardon - 30892,	Nakamichi - 30321	Sonance - 32433
Bose - 30674	30106	NAT - 32562	Sony - 30689, 30220,
Breath - Audio 31963	JVC - 30331	NEC - 30264	30815, 31769
Bryston - 32359	Kenwood - 30356	Nuvo - 31963	Soundesign - 30078, 30211
Cal. Audio Labs - 31098	Krell - 31837, 31926, 32463	Optimus - 30395, 30300	Technics - 30308, 30521
Cambridge Audio - 31982	Left Coast - 31592	Panasonic - 30308, 30521	Thule Audio - 31851, 32169
Carver - 30269	Lenox - 31561	Parasound - 30246, 31934,	Velodyne - 31941
Cinema Sound - 30160	Lexicon - 31145, 31802	32245	Victor - 30331
Classe - 31461, 31462,	Linn - 30269	Pass Labs - 30269	Yamaha - 30354, 30133,
31915, 32854	Logitech - 31408	Philips - 30892, 30269	30143, 30504, 32592
Curtis Mathes - 30300	Luxman - 30165	Pioneer - 30013, 30300,	ZVOX - 32333
Denon - 30160, 32134,	Magnavox - 30269	31932	

Audio-Video Amplifier Codes

ADA - 31946	Go Video - 31532	Nakamichi - 31313, 30097,	Sharper Image - 31385,
ADC - 30531	GPX - 32604	31555, 31642	31409, 31411, 31416,
Adcom - 30616, 32294	Harman/Kardon - 30110,	NexxTech - 31751	31545, 31546, 31549,
Aiwa - 31405, 31388, 31641	30189, 31306, 32443	Niro - 31634	31723
Akai - 30224, 31512	Hitachi - 31801	Norcent - 31389, 31751	Sherwood - 30062, 30491,
Alco - 31390	Initial - 31426	Nova - 31389	30502, 31077, 31423,
Altec Lansing - 32597	Insignia - 31030, 31077,	Nuvo - 32509	31517, 31567, 31653,
AMC - 31077	31652, 31751, 31893,	Onkyo - 31805, 30135,	31905, 31913, 31953,
Amphion Media - 31563,	32126, 32169, 32175,	31298, 31531, 32451	31966, 31971, 32169,
31615	32472, 32929, 32966	Optimus - 31023, 30042,	32264
AMW - 31563, 31615	Integra - 31805, 30135,	30186, 30531, 30670,	Sherwood Newcastle -
Anam - 31609, 31074	31298	30797, 31074	31567, 31913, 32169
Anthem - 31231	iSymphony - 32018, 32258,	Oritron - 31497	Sonic Blue - 31383, 31532,
Apex Digital - 31257, 31430,	32442	Panasonic - 32967, 31308,	31869
31774	Jamo - 31564	31518, 30039, 30367,	Sonic Frontiers - 31231
Arcam - 31189, 31984,	JBL - 30110, 31306	31316, 31509, 31548,	Sony - 31759, 31622,
32002, 32256	Jensen - 30797	31633, 31676	30158, 31131, 31382,
Audiologic - 31646	JVC - 30074, 30531, 31374,	Parasound - 31839, 31907,	31503, 31558, 31658,
Audiotronic - 31189	31495, 31676	32246	31722, 31758, 32216,
Audiovox - 31390	KEF - 31718	Philips - 31189, 31269,	32475
B & K - 30701, 30820,	Kenwood - 31313, 30042,	32311, 30189, 30391,	Soundesign - 30670
30840, 31992	30077, 30186	30891, 31089, 31266	Spherex - 31927
Bose - 31229, 30639,	KLH - 31390, 31412, 31428	Pioneer - 31023, 30176,	Stereophonics - 31023
31253, 31841, 31933	Klipsch - 31443	30531, 30630, 31384,	Sunfire - 31313, 31931,
Cambridge Sound - 31370,	Koss - 31497	31459, 31831, 31935	32668
31477, 31624, 32297	Lasonic - 31798	Polaroid - 31508, 32150	Teac - 30163, 30463,
Capetronic - 30531	Lenox - 31437	Polk Audio - 31289, 32270	31074, 31226, 31390,
Carver - 31189, 30008,	Lexicon - 31076	Proscan - 31254	31528, 32261, 32363
30042, 30360	LG - 31293, 31524, 32197,	Quasar - 30039	Technics - 31308, 31518,
Casio - 30195	32676	RCA - 31023, 31609, 31254,	30039, 30208, 30309,
Clarinet - 30195	Liquid Video - 31497	30346, 30531, 31074,	31633
Classic - 31352	Lloyd's - 30195	31390, 31459, 31511,	Thomson - 31910
Coby - 31389, 31513, 32127	Magnavox - 31189, 31269,	32041, 32611	Thorens - 31189
Criterion - 31420	30189, 30195, 30391,	Realistic - 30195	Venturer - 31390
Curtis - 31389, 31596	30531, 31089, 31514	Regent - 31437	Victor - 30074
Daewoo - 31250	Marantz - 31189, 31269,	Rio - 31869	Vivid - 31635
Denon - 32857, 31360,	30039, 30189, 31289	Saba - 31519	Vizio - 31517
30176, 30273, 30771,	McIntosh - 31289	Samsung - 31295, 31868	Yamaha - 32061, 30176,
32230, 32247, 32255,	MCS - 30039, 30346	Sansui - 30346	30186, 30376, 31176,
32279, 32414	Micromega - 31189	Sanyo - 30219, 30360,	31276, 31331, 31375,
Emerson - 32026	Mitsubishi - 31393, 31957	30801, 31251, 31469,	31476, 32455, 32467,
Fisher - 30042, 31409,	Modulaire - 30195	31801	2471
31801	Myryad - 31189, 31901	Sharp - 30186, 31952	Yorx - 30195
Garrard - 30424, 30463	NAD - 30320, 31889, 31989,		Zenith - 30857, 31293,
Gateway - 31517, 31567	32309		31524, 31652
GE - 31379			

For further information, visit videotron.com/terminal-support.

SECURITY

Please read these rules for safe operation before connecting your terminal.

POSITIONING AND VENTILATION

The terminal has openings for ventilation that protect it from overheating.

- Avoid obstructing these openings and do not place other equipment, including televisions, lamps, books or any other objects, on the terminal. Do not place it in an enclosure such as a bookcase or equipment rack, unless suitable ventilation is provided.
- Do not place the terminal on a bed, sofa, rug or similar surface, or close to a radiator or heat register.
- Lay the terminal on a stable surface that's able to support its size and weight.

ACCESSORIES AND CLEANING

Only use Videotron-recommended accessories. Do not open the cover of the terminal.

Unplug the terminal and clean it with a damp cloth. Do not use a liquid or aerosol cleaner, or a magnetic/static cleaning device.

OBJECT AND LIQUID ENTRY

Do not expose the terminal to humidity, or spill liquids on or near the device.

Do not place the terminal on a wet surface. Never push objects into the terminal's openings, as they may touch dangerous voltage points or cause short-circuits that could result in a fire or electric shock.

POWER SOURCES

A label on the terminal indicates the correct power source for the terminal. Only plug the terminal into an outlet that has the same voltage and frequency as those indicated on the label.

Do not overload electrical outlets or extension cords, as this can result in a fire or electric shock.

POWER SUPPLY CORD PROTECTION

Arrange all power supply cords so that people cannot step on them. Do not place objects on or against the cords, as this may damage them. Pay particular attention to cords that exit the terminal and those that are plugged in to other equipment or an electrical outlet.