

Extended IR code for RX-V861, 661, 461, 361 (NEC code)							
FUNCTION		ID1	ID2	RX-V861	RX-V661	RX-V461	RX-V361
MAIN POWER	ON	7E-7E	7D-B2	YES	YES	YES	YES
	OFF	7E-7F	7D-B1	YES	YES	YES	YES
ZONE2 POWER	ON	7E-BA	7D-64	YES	YES	NO	NO
	OFF	7E-BB	7D-63	YES	YES	NO	NO
ZONE2 MUTE	ON	7E-A0		YES	YES	NO	NO
	OFF	7E-A1		YES	YES	NO	NO
AUDIO MUTE	ON	7E-A2		YES	YES	YES	YES
	OFF	7E-A3		YES	YES	YES	YES
	SET LEVEL -20dB	7E-DF		YES	YES	YES	YES
MultiCH Input	ON	7E-A4		YES	YES	YES	YES
	OFF	7E-A5		NO	NO	NO	NO
Decode Mode	AUTO	7E-A6		YES	YES	YES	YES
	DTS	7E-A8		YES	YES	YES	YES
Audio Select	AUTO	7E-A6		YES	YES	YES	YES
	HDMI	7E-DA		YES	YES	NO	NO
	COAX/OPT	7E-A9		YES	YES	YES	YES
	ANALOG	7E-AA		YES	YES	YES	YES
MAIN	Volume Memory	A	7E-6B	YES	YES	NO	NO
		B	7E-6C	YES	YES	NO	NO
		C	7E-6D	YES	YES	NO	NO
		D	7E-6E	YES	YES	NO	NO
		E	7E-6F	YES	YES	NO	NO
		F	7E-70	YES	YES	NO	NO
	Volume Recall	A	7E-75	YES	YES	NO	NO
		B	7E-76	YES	YES	NO	NO
		C	7E-77	YES	YES	NO	NO
		D	7E-78	YES	YES	NO	NO
		E	7E-79	YES	YES	NO	NO
		F	7E-7A	YES	YES	NO	NO
ZONE2	Volume Memory	A	7E-87	YES	YES	NO	NO
		B	7E-88	YES	YES	NO	NO
		C	7E-89	YES	YES	NO	NO
		D	7E-8A	YES	YES	NO	NO
		E	7E-8B	YES	YES	NO	NO
		F	7E-8C	YES	YES	NO	NO
	Volume Recall	A	7E-8D	YES	YES	NO	NO
		B	7E-8E	YES	YES	NO	NO
		C	7E-8F	YES	YES	NO	NO
		D	7E-90	YES	YES	NO	NO
		E	7E-91	YES	YES	NO	NO
		F	7E-92	YES	YES	NO	NO
SP RELAY A	ON	7E-AB		YES	YES	NO	NO
	OFF	7E-AC		YES	YES	NO	NO
SP RELAY B	ON	7E-AD		YES	YES	NO	NO
	OFF	7E-AE		YES	YES	NO	NO
SP B SET	MAIN	7E-28		YES	YES	NO	NO
	ZONE B	7E-29		YES	YES	NO	NO
ZONE2 SP OUT	ON (Internal)	7E-99		YES	YES	NO	NO
	OFF (External)	7E-9A		YES	YES	NO	NO

Extended IR code for RX-V861, 661, 461, 361 (NEC code)							
FUNCTION		ID1	ID2	RX-V861	RX-V661	RX-V461	RX-V361
DC1 TRG CTRL	ZONE1	7E-32		YES	YES	NO	NO
	ZONE2	7E-33		YES	YES	NO	NO
	ALL OR	7E-34		YES	YES	NO	NO
DC1 TRG ZONE2	ON	7E-71		YES	YES	NO	NO
	OFF	7E-72		YES	YES	NO	NO
DC1 TRG ZONE1	ON	7E-73		YES	YES	NO	NO
	OFF	7E-74		YES	YES	NO	NO
ONSCREEN	OFF	7E-B0		YES	YES	YES	NO
	SHORT	7E-B1		NO	NO	NO	NO
	FULL	7E-B2		YES	YES	YES	NO
Display (XM/NET/iPod/Tuner)	ON	7E-D0		YES	YES	YES	YES
	OFF	7E-D1		YES	YES	YES	YES
SLEEP	OFF	7E-B3		YES	YES	YES	YES
	120	7E-B4		YES	YES	YES	YES
	90	7E-B5		YES	YES	YES	YES
	60	7E-B6		YES	YES	YES	YES
	30	7E-B7		YES	YES	YES	YES
PURE DIRECT	ON	7E-80		YES	YES	NO	NO
	OFF	7E-82		YES	YES	NO	NO
NIGHT MODE	ON	7E-9B		YES	YES	YES	YES
	OFF	7E-9C		YES	YES	YES	YES
EX(6.1)/ES	AUTO	7E-7C		YES	YES	NO	NO
	EX ON	7E-DC		YES	YES	NO	NO
	PLIIx Movie	7E-DD		YES	YES	NO	NO
	PLIIx Music	7E-DE		YES	YES	NO	NO
	EX/ES MTRX ON	7E-B8		YES	YES	NO	NO
	OFF	7E-B9		YES	YES	NO	NO
2ch Decoder	PLIIx Movie	7E-67		YES	YES	YES	YES
	PLIIx Music	7E-68		YES	YES	YES	YES
	Neo6 Cinema	7E-69		YES	YES	NO	NO
	Neo6 Music	7E-6A		YES	YES	NO	NO
	PLIIx Game	7E-C7		YES	YES	YES	YES
	Prologic	7E-C9		YES	YES	YES	YES
	Neural Sur.	7E-CC		YES	YES	YES	YES

Extended IR code for RX-V861, 661, 461, 361 (NEC code)							
FUNCTION		ID1	ID2	RX-V861	RX-V661	RX-V461	RX-V361
PROGRAM	STRAIGHT	7E-E0		YES	YES	YES	YES
	Chamber	7E-AF		YES	YES	NO	NO
	Cellar Club	7E-CD		YES	YES	NO	NO
	Roleplaying Game	7E-CE		YES	YES	NO	NO
	Hall in Munich / Hall	7E-E1		YES	YES	YES	YES
	Hall in Vienna	7E-E5		YES	YES	NO	NO
	The Bottom Line	7E-EC		YES	YES	NO	NO
	The Roxy Theatre	7E-ED		YES	YES	NO	NO
	Disco	7E-F0		NO	NO	NO	NO
	Action Game / Game	7E-F2		YES	YES	YES	YES
	Music Video / Pop Rock	7E-F3		YES	YES	YES	YES
	Mono Movie	7E-F7		YES	YES	NO	NO
	Sports / TV Sports	7E-F8		YES	YES	YES	YES
	Spectacle / Spacious	7E-F9		YES	YES	YES	YES
	Sci-Fi	7E-FA		YES	YES	NO	NO
	Adventure	7E-FB		YES	YES	NO	NO
	Drama / Dramatic	7E-FC		YES	YES	YES	YES
	Standard	7E-FD		NO	NO	NO	NO
	Standard	7E-FE		YES	YES	NO	NO
	Xch Stereo	7E-FF		YES	YES	YES	YES
	2ch Stereo	7E-C0		YES	YES	YES	YES
	DIRECT STEREO	7E-C1		NO	NO	NO	NO
	EFFECT ON	7E-27		YES	YES	YES	YES
	Night Music	7E-CF		YES	YES	YES	YES
	Enhancer 2ch	7E-D8		YES	YES	YES	YES
	Enhancer OFF	7E-D9		NO	NO	NO	NO
Tuner	FM	7E-BC	7D-27	YES	YES	YES	YES
	AM	7E-BD	7D-28	YES	YES	YES	YES
	AUTO TUNING UP	7E-BE	7D-2A	YES	YES	YES	YES
	AUTO TUNING DOWN	7E-BF	7D-2B	YES	YES	YES	YES
	Preset	A	7A-E0	7D-AC	YES	YES	YES
		B	7A-E1	7D-AD	YES	YES	YES
		C	7A-E2	7D-AE	YES	YES	YES
		D	7A-E3	7D-AF	YES	YES	YES
		E	7A-E4	7D-B0	YES	YES	YES
XM	All CH Srch	7A-B5	7D-2C	YES	YES	YES	YES
	Category Srch	7A-B6	7D-2D	YES	YES	YES	YES
	Preset Srch	7A-B7	7D-2E	YES	YES	YES	YES
	Preset	A	7A-BA	7D-3A	YES	YES	YES
		B	7A-BB	7D-3B	YES	YES	YES
		C	7A-BC	7D-3C	YES	YES	YES
		D	7A-BD	7D-3D	YES	YES	YES
		E	7A-BE	7D-3E	YES	YES	YES

## \*NOTE

Item in red means there is a change from Vx59 series.