

RX-Z9					
Function		Extended I/R			
		Custom Code		Data Code	
INPUT					
ZONE2 POWER	ON	7	E	B	A
	OFF	7	E	B	B
MAIN POWER	ON	7	E	7	E
	OFF	7	E	7	F
AUDIO MUTE	ON	7	E	A	0
	OFF	7	E	A	1
	-20dB	7	E	D	F
ZONE2 MUTE	ON	7	E	A	2
	OFF	7	E	A	4
MULTI CH INPUT	ON	7	E	A	4
	OFF	7	E	A	5
INPUT MODE	AUTO	7	E	A	6
	D.D.RF	7	E	A	7
	DTS	7	E	A	8
	DIGITAL	7	E	A	9
	ANALOG	7	E	A	A
	iLINK	7	E	7	B
SP RELAY A	ON	7	E	A	B
	OFF	7	E	A	C
SP RELAY B	ON	7	E	A	D
	OFF	7	E	A	E
SLEEP	OFF	7	E	B	3
	120	7	E	B	4
	90	7	E	B	5
	60	7	E	B	6
	30	7	E	B	7
EX/ES	AUTO	7	E	7	C
	OFF	7	E	B	9
	EX ON	7	E	D	C
	PL2 Movie	7	E	D	D
	PL2 Music	7	E	D	E
DC1 TRG CONTROL	ZONE1	7	E	3	2
	ZONE2	7	E	3	3
	ALL OR	7	E	3	4
DC2 TRG CONTROL	ZONE1	7	E	9	6
	ZONE2	7	E	9	7
	ALL OR	7	E	9	8
DC1 TRIGGER ZONE1	ON	7	E	7	3
	OFF	7	E	7	4
DC1 TRIGGER ZONE2	ON	7	E	7	1
	OFF	7	E	7	2
DC2 TRIGGER ZONE1	ON	7	E	3	E
	OFF	7	E	3	F
DC2 TRIGGER ZONE2	ON	7	E	3	C
	OFF	7	E	3	D

DSP					
STRAIGHT		7	E	E	0
EFFECT	ON	7	E	2	7
NIGHT MODE	ON	7	E	9	B
	OFF	7	E	9	C
PROGRAM	2CH STEREO	7	E	C	0
	2CH DIRECT	7	E	C	1
	HALL A	7	E	E	1
	HALL B	7	E	E	2
	HALL C	7	E	E	3
	HALL D	7	E	E	4
	HALL E	7	E	E	5
	HALL F	7	E	C	4
	HALL G	7	E	C	5
	HALL H	7	E	C	6
	LiveConcert	7	E	E	6
	TOKYO	7	E	E	7
	FREIBURG	7	E	E	8
	ROYAUMONT	7	E	E	9
	VILLAGE GATE	7	E	E	A
	VILLAGE VANGUARD	7	E	E	B
	THE BOTTOM LINE	7	E	E	C
	THE ROXY THEATRE	7	E	E	D
	LOFT	7	E	E	E
	ARENA	7	E	E	F
	DISCO	7	E	F	0
	PARTY	7	E	F	1
	GAME	7	E	F	2
	8CH STEREO	7	E	F	F
	POP/ROCK	7	E	F	3
	DJ	7	E	F	4
	CLASSICAL/OPERA	7	E	F	5
	Pavilion	7	E	F	6
	MONO MOVIE	7	E	F	7
	VARIETY SPORTS	7	E	F	8
	SPECTACRE	7	E	F	9
	SCI-FI	7	E	F	A
	ADVENTURE	7	E	F	B
	GENERAL	7	E	F	C
	NORMAL	7	E	F	D
	ENHANCED	7	E	F	E
	THX CINEMA	7	E	C	2
	THX MUSIC	7	E	C	3
HOME					
PRESET MEMORY	A	7	E	2	B
	B	7	E	2	C
	C	7	E	2	D
	D	7	E	2	E
	E	7	E	2	F
	F	7	E	3	0

PRESET RECALL	A	7	E	3	5
	B	7	E	3	6
	C	7	E	3	7
	D	7	E	3	8
	E	7	E	3	9
	F	7	E	3	A
<b>VOLUME</b>					
PRESET MEMORY	A	7	E	6	B
	B	7	E	6	C
	C	7	E	6	D
	D	7	E	6	E
	E	7	E	6	F
	F	7	E	7	0
PRESET RECALL	A	7	E	7	5
	B	7	E	7	6
	C	7	E	7	7
	D	7	E	7	8
	E	7	E	7	9
	F	7	E	7	A
<b>ZONE2 VOLUME</b>					
PRESET MEMORY	A	7	E	8	7
	B	7	E	8	8
	C	7	E	8	9
	D	7	E	8	A
	E	7	E	8	B
	F	7	E	8	C
PRESET RECALL	A	7	E	8	D
	B	7	E	8	E
	C	7	E	8	F
	D	7	E	9	0
	E	7	E	9	1
	F	7	E	9	2
<b>TUNER</b>					
FM/AM	FM	7	E	B	C
	AM	7	E	B	D
	AUTO TUNING UP	7	E	B	E
	AUTO TUNING DOWN	7	E	B	F