

RX-V2500 / RX-V1500						
FUNCTION		Extended I/R (NEC format)				Comment
		ID1 setting(default)		ID2 setting*		
		Custom Code	Data Code	Custom Code	Data Code	
SYSTEM		*ID2 setting is only for the RX-V2500. See the instructions at the bottom.				
Main Power	ON	7E	7E	7D	B2	
	OFF	7E	7F	7D	B1	
Zone2 Power	ON	7E	BA	<<-- same as ID1		
	OFF	7E	BB	<<-- same as ID1		
Zpne3 Power	ON	7A	ED	<<-- same as ID1		
	OFF	7A	EE	<<-- same as ID1		
Main Zone Mute	ON	7E	A2	<<-- same as ID1		
	OFF	7E	A3	<<-- same as ID1		
Zone2 Mute	ON	7E	A0	<<-- same as ID1		
	OFF	7E	A1	<<-- same as ID1		
Zone3 Mute	ON	7E	26	<<-- same as ID1		
	OFF	7E	66	<<-- same as ID1		
MULTI CH INPUT	ON	7E	A4	<<-- same as ID1		
NORMAL INPUT	ON	7E	A5	<<-- same as ID1		(= EXT INPUT: OFF)
INPUT MODE	AUTO	7E	A6	<<-- same as ID1		
	DTS	7E	A8	<<-- same as ID1		
	ANALOG	7E	AA	<<-- same as ID1		
SP RELAY A	ON	7E	AB	<<-- same as ID1		
	OFF	7E	AC	<<-- same as ID1		
SP RELAY B	ON	7E	AD	<<-- same as ID1		
	OFF	7E	AE	<<-- same as ID1		
SP B SET	MAIN	7E	28	<<-- same as ID1		
	ZONE B	7E	29	<<-- same as ID1		
Zone2 SP OUT	ON	7E	99	<<-- same as ID1		
	OFF	7E	9A	<<-- same as ID1		
ON SCREEN	OFF	7E	B0	<<-- same as ID1		
	SHORT	7E	B1	<<-- same as ID1		
	FULL	7E	B2	N/A		for RX-V1500 only
SLEEP	OFF	7E	B3	<<-- same as ID1		
	120	7E	B4	<<-- same as ID1		
	90	7E	B5	<<-- same as ID1		
	60	7E	B6	<<-- same as ID1		
	30	7E	B7	<<-- same as ID1		
EX(6.1)/ES	AUTO	7E	7C	<<-- same as ID1		
	ON	7E	7D	<<-- same as ID1		
	EX/ES ON	7E	B8	<<-- same as ID1		
	DOLBY EX	7E	DC	<<-- same as ID1		for RX-V2500 only
	PLIIX MOVIE	7E	DD	<<-- same as ID1		for RX-V2500 only
	PLIIX MUSIC	7E	DE	<<-- same as ID1		for RX-V2500 only
	OFF	7E	B9	<<-- same as ID1		
DC1 TRG CTRL	ZONE1	7E	32	<<-- same as ID1		
	ZONE2	7E	33	<<-- same as ID1		
	ZONE3	7E	31	<<-- same as ID1		
	ALL OR	7E	34	<<-- same as ID1		
DC2 TRG CTRL	ZONE1	7E	96	<<-- same as ID1		for RX-V2500 only
	ZONE2	7E	97	<<-- same as ID1		for RX-V2500 only
	ZONE3	7E	9F	<<-- same as ID1		for RX-V2500 only
	ALL OR	7E	98	<<-- same as ID1		for RX-V2500 only
DC1 TRIGGER ZONE1	ON	7E	73	<<-- same as ID1		
	OFF	7E	74	<<-- same as ID1		
DC1 TRIGGER ZONE2	ON	7E	71	<<-- same as ID1		
	OFF	7E	72	<<-- same as ID1		
DC1 TRIGGER ZONE3	ON	7E	83	<<-- same as ID1		
	OFF	7E	84	<<-- same as ID1		

DC2 TRIGGER ZONE1	ON	7E	3E	<<-- same as ID1	for RX-V2500 only
	OFF	7E	3F	<<-- same as ID1	for RX-V2500 only
DC2 TRIGGER ZONE2	ON	7E	3C	<<-- same as ID1	for RX-V2500 only
	OFF	7E	3D	<<-- same as ID1	for RX-V2500 only
DC2 TRIGGER ZONE3	ON	7E	85	<<-- same as ID1	for RX-V2500 only
	OFF	7E	86	<<-- same as ID1	for RX-V2500 only
DSP					
PROGRAM	EFFECT ON	7E	27	<<-- same as ID1	
	STRAIGHT	7E	E0	<<-- same as ID1	(= EFFECT OFF)
	2ch Stereo	7E	C0	<<-- same as ID1	
	7ch Stereo	7E	FF	<<-- same as ID1	
	Pure Direct ON	7E	80	<<-- same as ID1	
	Pure Direct OFF	7E	82	<<-- same as ID1	
	Hall in Munch	7E	E1	<<-- same as ID1	for RX-V2500 only
	Hall in Vienna	7E	E5	<<-- same as ID1	"Concert Hall" for RX-V1500
	Freiburg	7E	E8	<<-- same as ID1	for RX-V2500 only
	The Bottom Line	7E	EC	<<-- same as ID1	"Juzz Club" for RX-V1500
	The Roxy Theater	7E	ED	<<-- same as ID1	"Rock Concert" for RX-V1500
	Disco	7E	F0	<<-- same as ID1	
	Game	7E	F2	<<-- same as ID1	
	Pop/Rock	7E	F3	<<-- same as ID1	"Music Video" for RX-V1500
	Classical/Opera	7E	F5	<<-- same as ID1	for RX-V2500 only
	Mono Movie	7E	F7	<<-- same as ID1	
	TV Sports	7E	F8	<<-- same as ID1	"Variety/Sports" for RX-V1500
	Spectacle	7E	F9	<<-- same as ID1	
	Sci-Fi	7E	FA	<<-- same as ID1	
	Adventure	7E	FB	<<-- same as ID1	
	General	7E	FC	<<-- same as ID1	
	Normal	7E	FD	<<-- same as ID1	
	Enhanced	7E	FE	<<-- same as ID1	
	PLII MOVIE	7E	67	N/A	for RX-V1500 only
	PLII MUSIC	7E	68	N/A	for RX-V1500 only
	Neo:6 MOVIE	7E	69	N/A	for RX-V1500 only
	Neo:6 MUSIC	7E	6A	N/A	for RX-V1500 only
	THX CINEMA	7E	C2	<<-- same as ID1	
NIGHT MODE	CINEMA	7E	9B	<<-- same as ID1	
	MUSIC	7E	CF	<<-- same as ID1	
	OFF	7E	9C	<<-- same as ID1	
SYSTEM MEMORY					
SAVE	1	7E	2B	<<-- same as ID1	
	2	7E	2C	<<-- same as ID1	
	3	7E	2D	<<-- same as ID1	
	4	7E	2E	<<-- same as ID1	
	5	7E	2F	<<-- same as ID1	
	6	7E	30	<<-- same as ID1	
LOAD	1	7E	35	<<-- same as ID1	
	2	7E	36	<<-- same as ID1	
	3	7E	37	<<-- same as ID1	
	4	7E	38	<<-- same as ID1	
	5	7E	39	<<-- same as ID1	
	6	7E	3A	<<-- same as ID1	
VOLUME MEMORY					
SAVE	1	7E	6B	<<-- same as ID1	
	2	7E	6C	<<-- same as ID1	
	3	7E	6D	<<-- same as ID1	
	4	7E	6E	<<-- same as ID1	
	5	7E	6F	<<-- same as ID1	
	6	7E	70	<<-- same as ID1	

LOAD	1	7E	75	<<-- same as ID1	
	2	7E	76	<<-- same as ID1	
	3	7E	77	<<-- same as ID1	
	4	7E	78	<<-- same as ID1	
	5	7E	79	<<-- same as ID1	
	6	7E	7A	<<-- same as ID1	
ZONE2 VOLUME MEMORY					
SAVE	1	7E	87	<<-- same as ID1	
	2	7E	88	<<-- same as ID1	
	3	7E	89	<<-- same as ID1	
	4	7E	8A	<<-- same as ID1	
	5	7E	8B	<<-- same as ID1	
	6	7E	8C	<<-- same as ID1	
LOAD	1	7E	8D	<<-- same as ID1	
	2	7E	8E	<<-- same as ID1	
	3	7E	8F	<<-- same as ID1	
	4	7E	90	<<-- same as ID1	
	5	7E	91	<<-- same as ID1	
	6	7E	92	<<-- same as ID1	
ZONE3 VOLUME MEMORY					
SAVE	1	7E	20	<<-- same as ID1	
	2	7E	21	<<-- same as ID1	
	3	7E	22	<<-- same as ID1	
	4	7E	23	<<-- same as ID1	
	5	7E	24	<<-- same as ID1	
	6	7E	25	<<-- same as ID1	
LOAD	1	7E	60	<<-- same as ID1	
	2	7E	61	<<-- same as ID1	
	3	7E	62	<<-- same as ID1	
	4	7E	63	<<-- same as ID1	
	5	7E	64	<<-- same as ID1	
	6	7E	65	<<-- same as ID1	
TUNER					
FM/AM	FM	7E	BC	<<-- same as ID1	
	AM	7E	BD	<<-- same as ID1	
	AUTO TUNING UP	7E	BE	<<-- same as ID1	
	AUTO TUNING DOWN	7E	BF	<<-- same as ID1	

*** Instructions: How to change the remote ID setting**

1. While pushing the "STRAIGHT/EFFECT" button, push the "POWER" button to turn on the power.
2. Turn the "PROGRAM" knob, then find the "REMOTE - ID1".
3. Push the "STRAIGHT/EFFECT" button to change to ID2, and turn off the power.