

# RX-Z11 Standard IR code (NEC format)

Rev. 0.2

FUNCTION		ZONE	ID1 setting (default)		ID2 setting		Comment	
SYSTEM			Custom Code	Data Code	Custom Code	Data Code		
MULTI CH IN MENU	ON	MAIN	7A	87	7A	8779		
	MENU	MAIN	7A	84	7A	847A		
	ENTER	MAIN	7A	DE	7A	DE20		
	RETURN	MAIN	7A	AA	7A	AA54		
	Up	MAIN	7A	9D	7A	9D63		
	Down	ZONE 2	7A	9C	7A	9C62		
	Left	ZONE 3	7A	9F	7A	9F61		
	Right	ZONE 4	7A	9E	7A	9E60		
DISPLAY	Toggle	MAIN	7A	C2	7A	C23C	Not Available	
	Toggle	ZONE 2	7A	36	7A	36C8		
	Toggle	ZONE 3	7A	37	7A	37C9		
	Toggle	ZONE 4	7A	38	7A	38C6		
LEVEL	Toggle	MAIN	7A	86	7A	8678		
PARTY	Toggle	ALL	7A	34	7A	34CA		
SLEEP	Toggle	MAIN	7A	30	7A	30CE		
	Toggle	ZONE 2	7A	31	7A	31CF		
	Toggle	ZONE 3	7A	32	7A	32CC		
HDMI OUT	Toggle	ZONE 4	7A	33	7A	33CD		
	Toggle	MAIN	7A	35	7A	35CB		
	AUDIO SELECT	Toggle	MAIN	7A	C3	7A	C33D	
SYSTEM MEMORY	1	MAIN	7A	007F	7A	007E		
	2	MAIN	7A	037C	7A	037D		
	3	MAIN	7A	0679	7A	0678		
	4	MAIN	7A	0976	7A	0977		
	1	ZONE 2	7A	017E	7A	017F		
	2	ZONE 2	7A	047B	7A	047A		
	3	ZONE 2	7A	0778	7A	0779		
	4	ZONE 2	7A	0A75	7A	0A74		
	1	ZONE 3	7A	027D	7A	027C		
	2	ZONE 3	7A	057A	7A	057B		
	3	ZONE 3	7A	0877	7A	0876		
	4	ZONE 3	7A	0B74	7A	0B75		
	1	ZONE 4	7A	1867	7A	1866		
	2	ZONE 4	7A	1966	7A	1967		
	3	ZONE 4	7A	1A65	7A	1A64		
	4	ZONE 4	7A	1B64	7A	1B65		
MAIN ZONE								
POWER	ON	MAIN	7E	7E	7E	7E80		
	STANDBY	MAIN	7E	7F	7E	7F81		
VOLUME	UP	MAIN	7A	1A	7A	1AE4		
	DOWN	MAIN	7A	1B	7A	1BE5		
MUTE	ON / OFF	MAIN	7A	1C	7A	1CE2		
INPUT	V-AUX	MAIN	7A	55	7A	55AB		
	PHONO	MAIN	7A	14	7A	14EA		
	MD / TAPE	MAIN	7A	18	7A	18E6		
	BD / HD DVD	MAIN	7A	C8	7A	C836		
	DVD	MAIN	7A	C1	7A	C13F		
	CD	MAIN	7A	15	7A	15EB		
	CD-R	MAIN	7A	19	7A	19E7		
	CBL / SAT	MAIN	7A	C0	7A	C03E		
	DTV	MAIN	7A	54	7A	54AA		
	DVR	MAIN	7A	13	7A	13ED		
	VCR	MAIN	7A	0F	7A	0FF1		
	TUNER	MAIN	7A	16	7A	16E8		
	DOCK	MAIN	7F01	4A	7F01	4AB4		
	NET / USB	MAIN	7F01	3F	7F01	3FC1		
	XM	MAIN	7A	B4	7A	B44A		
	INPUT (UP)	MAIN	7A	1F60	7A	1F61	Simplified remote (RAV33)	
	INPUT (DOWN)	MAIN	7A	235C	7A	235D	Simplified remote (RAV33)	
ZONE 2								
Zone 2 POWER	ON	ZONE 2	7E	BA	7E	BA44		
	STANDBY	ZONE 2	7E	BB	7E	BB45		
Zone 2 VOLUME	UP	ZONE 2	7A	DA	7A	DA24		
	DOWN	ZONE 2	7A	DB	7A	DB25		
Zone 2 MUTE	ON / OFF	ZONE 2	7A	DC	7A	DC22		
Zone 2 INPUT	V-AUX	ZONE 2	7A	D8	7A	D826		
	PHONO	ZONE 2	7A	D0	7A	D02E		
	MD / TAPE	ZONE 2	7A	D3	7A	D32D		
	BD / HD DVD	ZONE 2	7A	CE	7A	CE30		
	DVD	ZONE 2	7A	CD	7A	CD33		
	CD	ZONE 2	7A	D1	7A	D12F		
	CD-R	ZONE 2	7A	D4	7A	D42A		
	CBL / SAT	ZONE 2	7A	CC	7A	CC32		
	DTV	ZONE 2	7A	D9	7A	D927		
	DVR	ZONE 2	7A	D7	7A	D729		
	VCR	ZONE 2	7A	D6	7A	D628		
	TUNER	ZONE 2	7A	D2	7A	D22C		
	DOCK	ZONE 2	7F01	4B	7F01	4BB5		
	NET / USB	ZONE 2	7F01	40	7F01	40BE		
	XM	ZONE 2	7A	B8	7A	B846		
		INPUT (UP)	ZONE 2	7A	205F	7A	205E	Simplified remote (RAV33)
		INPUT (DOWN)	ZONE 2	7A	245B	7A	245A	Simplified remote (RAV33)

# RX-Z11 Standard IR code (NEC format)

Rev. 0.2

FUNCTION		ZONE	ID1 setting (default) Custom Code   Data Code		ID2 setting Custom Code   Data Code		Comment
ZONE 3							
Zone 3 POWER	ON	ZONE 3	7A	ED	7A	ED13	
	STANDBY	ZONE 3	7A	EE	7A	EE10	
Zone 3 VOLUME	UP	ZONE 3	7A	FD	7A	FD03	
	DOWN	ZONE 3	7A	FE	7A	FE00	
Zone 3 MUTE	ON / OFF	ZONE 3	7A	FF	7A	FF01	
Zone 3 INPUT	V-AUX	ZONE 3	7A	F0	7A	F00E	
	PHONO	ZONE 3	7A	F1	7A	F10F	
	MD / TAPE	ZONE 3	7A	F4	7A	F40A	
	BD / HD DVD	ZONE 3	7A	FB	7A	FB05	
	DVD	ZONE 3	7A	FC	7A	FC02	
	CD	ZONE 3	7A	F2	7A	F20C	
	CD-R	ZONE 3	7A	F5	7A	F50B	
	CBL / SAT	ZONE 3	7A	F7	7A	F709	
	DTV	ZONE 3	7A	F6	7A	F608	
	DVR	ZONE 3	7A	FA	7A	FA04	
	VCR	ZONE 3	7A	F9	7A	F907	
	TUNER	ZONE 3	7A	F3	7A	F30D	
	DOCK	ZONE 3	7F01	4C	7F01	4CB2	
	NET / USB	ZONE 3	7F01	41	7F01	41BF	
	XM	ZONE 3	7A	B9	7A	B947	
	INPUT (UP)	ZONE 3	7A	215E	7A	215F	Simplified remote (RAV33)
	INPUT (DOWN)	ZONE 3	7A	255A	7A	255B	Simplified remote (RAV33)
ZONE 4							
Zone 4 POWER	ON	ZONE 4	7A	7B	7A	7B85	
	STANDBY	ZONE 4	7A	7C	7A	7C82	
Zone 4 VOLUME	UP	ZONE 4	7A	2B	7A	2BD5	
	DOWN	ZONE 4	7A	2C	7A	2CD2	
Zone 4 MUTE	ON / OFF	ZONE 4	7A	2D	7A	2DD3	
Zone 4 INPUT	V-AUX	ZONE 4	7A	7D	7A	7D83	
	PHONO	ZONE 4	7A	7E	7A	7E80	
	MD / TAPE	ZONE 4	7A	21	7A	21DF	
	BD / HD DVD	ZONE 4	7A	28	7A	28D6	
	DVD	ZONE 4	7A	29	7A	29D7	
	CD	ZONE 4	7A	7F	7A	7F81	
	CD-R	ZONE 4	7A	22	7A	22DC	
	CBL / SAT	ZONE 4	7A	24	7A	24DA	
	DTV	ZONE 4	7A	23	7A	23DD	
	DVR	ZONE 4	7A	27	7A	27D9	
	VCR	ZONE 4	7A	26	7A	26D8	
	TUNER	ZONE 4	7A	20	7A	20DE	
	DOCK	ZONE 4	7F01	4D	7F01	4DB3	
	NET / USB	ZONE 4	7F01	49	7F01	49B7	
	XM	ZONE 4	7A	2A	7A	2AD4	
	INPUT (UP)	ZONE 4	7A	225D	7A	225C	Simplified remote (RAV33)
	INPUT (DOWN)	ZONE 4	7A	2659	7A	2658	Simplified remote (RAV33)
DSP							
PROGRAM	CLASSICAL 1	MAIN	7A	88	7A	8876	Toggle
	CLASSICAL 2	MAIN	7A	89	7A	8977	Toggle
	LIVE/CLUB	MAIN	7A	8A	7A	8A74	Toggle
	ENTERTAIN	MAIN	7A	8B	7A	8B75	Toggle
	MOVIE	MAIN	7A	8C	7A	8C72	Toggle
	STEREO	MAIN	7A	8E	7A	8E70	Toggle
	ENHANCER	MAIN	7A	94	7A	946A	Toggle
	THX	MAIN	7A	8F	7A	8F71	Toggle
	STRAIGHT	MAIN	7A	56	7A	56A8	Toggle
	PURE DIRECT	MAIN	7A	DD	7A	DD23	Toggle
	3D DSP	MAIN	7A	96	7A	9668	Toggle
DECODER							
DECODER	SUR. DECODE	MAIN	7A	8D	7A	8D73	Toggle
	EXTD SUR.	MAIN	7A	97	7A	9769	Toggle
Main Zone (If TUNER is selected)							
OPERATION	BAND (FM / AM)	MAIN	7F01	5D	7F01	5DA3	
	SEARCH MODE	MAIN	7F01	5E	7F01	5EA0	
	MEMORY	MAIN	7F01	5F	7F01	5FA1	
	DISPLAY	MAIN	7F01	60	7F01	609E	
	PRESET / CH (UP)	MAIN	7F01	61	7F01	619F	Increase preset number
	PRESET / CH (DOWN)	MAIN	7F01	65	7F01	659B	Decrease preset number
	PRESET PAGE A-E (-)	MAIN	7F01	62	7F01	629C	Preset page E to A
	PRESET PAGE A-E (+)	MAIN	7F01	64	7F01	649A	Preset page A to E
	ENTER	MAIN	7F01	63	7F01	639D	
	PROGRAM	PROGRAM (-)	MAIN	7F01	6C	7F01	6C92
	PROGRAM (+)	MAIN	7F01	6D	7F01	6D93	Only HD Radio
PRESET NUMBER	1	MAIN	7F01	51	7F01	51AF	
	2	MAIN	7F01	52	7F01	52AC	
	3	MAIN	7F01	53	7F01	53AD	
	4	MAIN	7F01	54	7F01	54AA	
	5	MAIN	7F01	55	7F01	55AB	
	6	MAIN	7F01	56	7F01	56A8	
	7	MAIN	7F01	57	7F01	57A9	
	8	MAIN	7F01	58	7F01	58A6	
	9	MAIN	7F01	59	7F01	59A7	
	0	MAIN	7F01	5A	7F01	5AA4	
	ENT	MAIN	7F01	5C	7F01	5CA2	
	PRESET (UP)	MAIN	7F01	0679	7F01	0678	Simplified remote (RAV33)
	PRESET (DOWN)	MAIN	7F01	027D	7F01	027C	Simplified remote (RAV33)

# RX-Z11 Standard IR code (NEC format)

Rev. 0.2

FUNCTION		ZONE	ID1 setting (default)		ID2 setting		Comment
Zone 2 (If TUNER is selected)		Custom Code	Data Code	Custom Code	Data Code		
OPERATION	BAND (FM / AM)	ZONE 2	7F01	7D	7F01	7D83	
	SEARCH MODE	ZONE 2	7F01	7E	7F01	7E80	
	MEMORY	ZONE 2	7F01	7F	7F01	7F81	
	DISPLAY	ZONE 2	7F01	80	7F01	807E	
	PRESET / CH (UP)	ZONE 2	7F01	81	7F01	817F	Increase preset number
	PRESET / CH (DOWN)	ZONE 2	7F01	85	7F01	857B	Decrease preset number
	PRESET PAGE A-E (-)	ZONE 2	7F01	82	7F01	827C	Preset page E to A
	PRESET PAGE A-E (+)	ZONE 2	7F01	84	7F01	847A	Preset page A to E
PROGRAM	ENTER	ZONE 2	7F01	83	7F01	837D	
	PROGRAM (-)	ZONE 2	7F01	8C	7F01	8C72	Only HD Radio
PRESET NUMBER	PROGRAM (+)	ZONE 2	7F01	8D	7F01	8D73	Only HD Radio
	1	ZONE 2	7F01	71	7F01	718F	
	2	ZONE 2	7F01	72	7F01	728C	
	3	ZONE 2	7F01	73	7F01	738D	
	4	ZONE 2	7F01	74	7F01	748A	
	5	ZONE 2	7F01	75	7F01	758B	
	6	ZONE 2	7F01	76	7F01	7688	
	7	ZONE 2	7F01	77	7F01	7789	
	8	ZONE 2	7F01	78	7F01	7886	
	9	ZONE 2	7F01	79	7F01	7987	
	0	ZONE 2	7F01	7A	7F01	7A84	
	ENT	ZONE 2	7F01	7C	7F01	7C82	
	PRESET (UP)	ZONE 2	7F01	0778	7F01	0779	Simplified remote (RAV33)
	PRESET (DOWN)	ZONE 2	7F01	037C	7F01	037D	Simplified remote (RAV33)
Zone 3 (If TUNER is selected)							
OPERATION	BAND (FM / AM)	ZONE 3	7F01	9D	7F01	9D63	
	SEARCH MODE	ZONE 3	7F01	9E	7F01	9E60	
	MEMORY	ZONE 3	7F01	9F	7F01	9F61	
	DISPLAY	ZONE 3	7F01	A0	7F01	A05E	
	PRESET / CH (UP)	ZONE 3	7F01	A1	7F01	A15F	Increase preset number
	PRESET / CH (DOWN)	ZONE 3	7F01	A5	7F01	A55B	Decrease preset number
	PRESET PAGE A-E (-)	ZONE 3	7F01	A2	7F01	A25C	Preset page E to A
	PRESET PAGE A-E (+)	ZONE 3	7F01	A4	7F01	A45A	Preset page A to E
PROGRAM	ENTER	ZONE 3	7F01	A3	7F01	A35D	
	PROGRAM (-)	ZONE 3	7F01	AC	7F01	AC52	Only HD Radio
PRESET NUMBER	PROGRAM (+)	ZONE 3	7F01	AD	7F01	AD53	Only HD Radio
	1	ZONE 3	7F01	91	7F01	916F	
	2	ZONE 3	7F01	92	7F01	926C	
	3	ZONE 3	7F01	93	7F01	936D	
	4	ZONE 3	7F01	94	7F01	946A	
	5	ZONE 3	7F01	95	7F01	956B	
	6	ZONE 3	7F01	96	7F01	9668	
	7	ZONE 3	7F01	97	7F01	9769	
	8	ZONE 3	7F01	98	7F01	9866	
	9	ZONE 3	7F01	99	7F01	9967	
	0	ZONE 3	7F01	9A	7F01	9A64	
	ENT	ZONE 3	7F01	9C	7F01	9C62	
	PRESET (UP)	ZONE 3	7F01	0877	7F01	0876	Simplified remote (RAV33)
	PRESET (DOWN)	ZONE 3	7F01	047B	7F01	047A	Simplified remote (RAV33)
Zone 4 (If TUNER is selected)							
OPERATION	BAND (FM / AM)	ZONE 4	7F01	BD	7F01	BD43	
	SEARCH MODE	ZONE 4	7F01	BE	7F01	BE40	
	MEMORY	ZONE 4	7F01	BF	7F01	BF41	
	DISPLAY	ZONE 4	7F01	C0	7F01	C03E	
	PRESET / CH (UP)	ZONE 4	7F01	C1	7F01	C13F	Increase preset number
	PRESET / CH (DOWN)	ZONE 4	7F01	C5	7F01	C53B	Decrease preset number
	PRESET PAGE A-E (-)	ZONE 4	7F01	C2	7F01	C23C	Preset page E to A
	PRESET PAGE A-E (+)	ZONE 4	7F01	C4	7F01	C43A	Preset page A to E
PROGRAM	ENTER	ZONE 4	7F01	C3	7F01	C33D	
	PROGRAM (-)	ZONE 4	7F01	CC	7F01	CC32	Only HD Radio
PRESET NUMBER	PROGRAM (+)	ZONE 4	7F01	CD	7F01	CD33	Only HD Radio
	1	ZONE 4	7F01	B1	7F01	B14F	
	2	ZONE 4	7F01	B2	7F01	B24C	
	3	ZONE 4	7F01	B3	7F01	B34D	
	4	ZONE 4	7F01	B4	7F01	B44A	
	5	ZONE 4	7F01	B5	7F01	B54B	
	6	ZONE 4	7F01	B6	7F01	B648	
	7	ZONE 4	7F01	B7	7F01	B749	
	8	ZONE 4	7F01	B8	7F01	B846	
	9	ZONE 4	7F01	B9	7F01	B947	
	0	ZONE 4	7F01	BA	7F01	BA44	
	ENT	ZONE 4	7F01	BC	7F01	BC42	
	PRESET (UP)	ZONE 4	7F01	0976	7F01	0977	Simplified remote (RAV33)
	PRESET (DOWN)	ZONE 4	7F01	057A	7F01	057B	Simplified remote (RAV33)

# RX-Z11 Standard IR code (NEC format)

Rev. 0.2

FUNCTION		ZONE	ID1 setting (default)		ID2 setting		Comment
			Custom Code	Data Code	Custom Code	Data Code	
Main Zone (If XM is selected) <b>Only USA &amp; Canada model</b>							
OPERATION	TITLE	MAIN	7F01	5D	7F01	5DA3	Next History
	SEARCH MODE	MAIN	7F01	5E	7F01	5EA0	All CH -> Category -> Preset..
	MEMORY	MAIN	7F01	5F	7F01	5FA1	
	DISPLAY	MAIN	7F01	60	7F01	609E	Select Display Mode
	PRESET / CH (UP)	MAIN	7F01	61	7F01	619F	Preset or Channel Number
	PRESET / CH (DOWN)	MAIN	7F01	65	7F01	659B	Preset or Channel Number
	A-E / CAT. (-)	MAIN	7F01	62	7F01	629C	Preset Page or Category
	A-E / CAT. (+)	MAIN	7F01	64	7F01	649A	Preset Page or Category
NUMERIC KEY	ENTER	MAIN	7F01	63	7F01	639D	Hold / Release Display
	1	MAIN	7F01	51	7F01	51AF	
	2	MAIN	7F01	52	7F01	52AC	
	3	MAIN	7F01	53	7F01	53AD	
	4	MAIN	7F01	54	7F01	54AA	
	5	MAIN	7F01	55	7F01	55AB	
	6	MAIN	7F01	56	7F01	56A8	
	7	MAIN	7F01	57	7F01	57A9	
	8	MAIN	7F01	58	7F01	58A6	
	9	MAIN	7F01	59	7F01	59A7	
	0	MAIN	7F01	5A	7F01	5AA4	
	ENT	MAIN	7F01	5C	7F01	5CA2	Enter Numeric Key
	PRESET (UP)	MAIN	7F01	0679	7F01	0678	Simplified remote (RAV33)
	PRESET (DOWN)	MAIN	7F01	027D	7F01	027C	Simplified remote (RAV33)
Zone 2 (If XM is selected) <b>Only USA &amp; Canada model</b>							
OPERATION	TITLE	ZONE 2	7F01	7D	7F01	7D83	Next History
	SEARCH MODE	ZONE 2	7F01	7E	7F01	7E80	All CH -> Category -> Preset..
	MEMORY	ZONE 2	7F01	7F	7F01	7F81	
	DISPLAY	ZONE 2	7F01	80	7F01	807E	Select Display Mode
	PRESET / CH (UP)	ZONE 2	7F01	81	7F01	817F	Preset or Channel Number
	PRESET / CH (DOWN)	ZONE 2	7F01	85	7F01	857B	Preset or Channel Number
	A-E / CAT. (-)	ZONE 2	7F01	82	7F01	827C	Preset Page or Category
	A-E / CAT. (+)	ZONE 2	7F01	84	7F01	847A	Preset Page or Category
NUMERIC KEY	ENTER	ZONE 2	7F01	83	7F01	837D	Hold / Release Display
	1	ZONE 2	7F01	71	7F01	718F	
	2	ZONE 2	7F01	72	7F01	728C	
	3	ZONE 2	7F01	73	7F01	738D	
	4	ZONE 2	7F01	74	7F01	748A	
	5	ZONE 2	7F01	75	7F01	758B	
	6	ZONE 2	7F01	76	7F01	7688	
	7	ZONE 2	7F01	77	7F01	7789	
	8	ZONE 2	7F01	78	7F01	7886	
	9	ZONE 2	7F01	79	7F01	7987	
	0	ZONE 2	7F01	7A	7F01	7A84	
	ENT	ZONE 2	7F01	7C	7F01	7C82	Enter Numeric Key
	PRESET (UP)	ZONE 2	7F01	0778	7F01	0779	Simplified remote (RAV33)
	PRESET (DOWN)	ZONE 2	7F01	037C	7F01	037D	Simplified remote (RAV33)
Zone 3 (If XM is selected) <b>Only USA &amp; Canada model</b>							
OPERATION	TITLE	ZONE 3	7F01	9D	7F01	9D63	Next History
	SEARCH MODE	ZONE 3	7F01	9E	7F01	9E60	All CH -> Category -> Preset..
	MEMORY	ZONE 3	7F01	9F	7F01	9F61	
	DISPLAY	ZONE 3	7F01	A0	7F01	A05E	Select Display Mode
	PRESET / CH (UP)	ZONE 3	7F01	A1	7F01	A15F	Preset or Channel Number
	PRESET / CH (DOWN)	ZONE 3	7F01	A5	7F01	A55B	Preset or Channel Number
	A-E / CAT. (-)	ZONE 3	7F01	A2	7F01	A25C	Preset Page or Category
	A-E / CAT. (+)	ZONE 3	7F01	A4	7F01	A45A	Preset Page or Category
NUMERIC KEY	ENTER	ZONE 3	7F01	A3	7F01	A35D	Hold / Release Display
	1	ZONE 3	7F01	91	7F01	916F	
	2	ZONE 3	7F01	92	7F01	926C	
	3	ZONE 3	7F01	93	7F01	936D	
	4	ZONE 3	7F01	94	7F01	946A	
	5	ZONE 3	7F01	95	7F01	956B	
	6	ZONE 3	7F01	96	7F01	9668	
	7	ZONE 3	7F01	97	7F01	9769	
	8	ZONE 3	7F01	98	7F01	9866	
	9	ZONE 3	7F01	99	7F01	9967	
	0	ZONE 3	7F01	9A	7F01	9A64	
	ENT	ZONE 3	7F01	9C	7F01	9C62	Enter Numeric Key
	PRESET (UP)	ZONE 3	7F01	0877	7F01	0876	Simplified remote (RAV33)
	PRESET (DOWN)	ZONE 3	7F01	047B	7F01	047A	Simplified remote (RAV33)

# RX-Z11 Standard IR code (NEC format)

Rev. 0.2

FUNCTION		ZONE	ID1 setting (default)		ID2 setting		Comment
			Custom Code	Data Code	Custom Code	Data Code	
Zone 4. (If XM is selected) <b>Only USA &amp; Canada model</b>							
OPERATION	TITLE	ZONE 4	7F01	BD	7F01	BD43	Next History
	SEARCH MODE	ZONE 4	7F01	BE	7F01	BE40	All CH -> Category -> Preset..
	PRESET MEMORY	ZONE 4	7F01	BF	7F01	BF41	
	DISPLAY	ZONE 4	7F01	C0	7F01	C03E	Select Display Mode
	PREST / CH (UP)	ZONE 4	7F01	C1	7F01	C13F	Preset or Channel Number
	PRESET / CH (DOWN)	ZONE 4	7F01	C5	7F01	C53B	Preset or Channel Number
	A-E / CAT. (-)	ZONE 4	7F01	C2	7F01	C23C	Preset Page or Category
	A-E / CAT. (+)	ZONE 4	7F01	C4	7F01	C43A	Preset Page or Category
NUMERIC KEY	ENTER	ZONE 4	7F01	C3	7F01	C33D	Hold / Release Display
	1	ZONE 4	7F01	B1	7F01	B14F	
	2	ZONE 4	7F01	B2	7F01	B24C	
	3	ZONE 4	7F01	B3	7F01	B34D	
	4	ZONE 4	7F01	B4	7F01	B44A	
	5	ZONE 4	7F01	B5	7F01	B54B	
	6	ZONE 4	7F01	B6	7F01	B648	
	7	ZONE 4	7F01	B7	7F01	B749	
	8	ZONE 4	7F01	B8	7F01	B846	
	9	ZONE 4	7F01	B9	7F01	B947	
	0	ZONE 4	7F01	BA	7F01	BA44	
	ENT	ZONE 4	7F01	BC	7F01	BC42	Enter Numeric Key
	PRESET (UP)	ZONE 4	7F01	0976	7F01	0977	Simplified remote (RAV33)
	PRESET (DOWN)	ZONE 4	7F01	057A	7F01	057B	Simplified remote (RAV33)
Main Zone. (If iPod is selected)							
MENU	MENU	MAIN	7F01	5E	7F01	5EA0	
	DISPLAY	MAIN	7F01	60	7F01	609E	
	UP	MAIN	7F01	61	7F01	619F	
	DOWN	MAIN	7F01	65	7F01	659B	
	LEFT	MAIN	7F01	62	7F01	629C	
	RIGHT	MAIN	7F01	64	7F01	649A	
	ENTER	MAIN	7F01	63	7F01	639D	
OPERATION	PAUSE	MAIN	7F01	67	7F01	6799	
	PLAY	MAIN	7F01	68	7F01	6896	
	STOP	MAIN	7F01	69	7F01	6997	
	REW	MAIN	7F01	6A	7F01	6A94	
	FF	MAIN	7F01	6B	7F01	6B95	
	SKIP (-)	MAIN	7F01	6C	7F01	6C92	
	SKIP (+)	MAIN	7F01	6D	7F01	6D93	
Zone 2. (If iPod is selected)							
MENU	MENU	ZONE 2	7F01	7E	7F01	7E80	
	DISPLAY	ZONE 2	7F01	80	7F01	807E	
	UP	ZONE 2	7F01	81	7F01	817F	
	DOWN	ZONE 2	7F01	85	7F01	857B	
	LEFT	ZONE 2	7F01	82	7F01	827C	
	RIGHT	ZONE 2	7F01	84	7F01	847A	
	ENTER	ZONE 2	7F01	83	7F01	837D	
OPERATION	PAUSE	ZONE 2	7F01	87	7F01	8779	
	PLAY	ZONE 2	7F01	88	7F01	8876	
	STOP	ZONE 2	7F01	89	7F01	8977	
	REW	ZONE 2	7F01	8A	7F01	8A74	
	FF	ZONE 2	7F01	8B	7F01	8B75	
	SKIP (-)	ZONE 2	7F01	8C	7F01	8C72	
	SKIP (+)	ZONE 2	7F01	8D	7F01	8D73	
Zone 3. (If iPod is selected)							
MENU	MENU	ZONE 3	7F01	9E	7F01	9E60	
	DISPLAY	ZONE 3	7F01	A0	7F01	A05E	
	UP	ZONE 3	7F01	A1	7F01	A15F	
	DOWN	ZONE 3	7F01	A5	7F01	A55B	
	LEFT	ZONE 3	7F01	A2	7F01	A25C	
	RIGHT	ZONE 3	7F01	A4	7F01	A45A	
OPERATION	ENTER	ZONE 3	7F01	A3	7F01	A35D	
	PAUSE	ZONE 3	7F01	A7	7F01	A759	
	PLAY	ZONE 3	7F01	A8	7F01	A856	
	STOP	ZONE 3	7F01	A9	7F01	A957	
	REW	ZONE 3	7F01	AA	7F01	AA54	
	FF	ZONE 3	7F01	AB	7F01	AB55	
	SKIP (-)	ZONE 3	7F01	AC	7F01	AC52	
	SKIP (+)	ZONE 3	7F01	AD	7F01	AD53	

# RX-Z11 Standard IR code (NEC format)

Rev. 0.2

FUNCTION		ZONE	ID1 setting (default)		ID2 setting		Comment
			Custom Code	Data Code	Custom Code	Data Code	
Zone 4 (If iPod is selected)							
MENU	MENU	ZONE 4	7F01	BE	7F01	BE40	
	DISPLAY	ZONE 4	7F01	C0	7F01	C03E	
	UP	ZONE 4	7F01	C1	7F01	C13F	
	DOWN	ZONE 4	7F01	C5	7F01	C53B	
	LEFT	ZONE 4	7F01	C2	7F01	C23C	
	RIGHT	ZONE 4	7F01	C4	7F01	C43A	
	ENTER	ZONE 4	7F01	C3	7F01	C33D	
OPERATION	PAUSE	ZONE 4	7F01	C7	7F01	C739	
	PLAY	ZONE 4	7F01	C8	7F01	C836	
	STOP	ZONE 4	7F01	C9	7F01	C937	
	REW	ZONE 4	7F01	CA	7F01	CA34	
	FF	ZONE 4	7F01	CB	7F01	CB35	
	SKIP (-)	ZONE 4	7F01	CC	7F01	CC32	
	SKIP (+)	ZONE 4	7F01	CD	7F01	CD33	
Main Zone (If NET/USB is selected)							
MENU	TITLE	MAIN	7F01	5D	7F01	5DA3	Bookmark (only NET RADIO)
	MENU	MAIN	7F01	5E	7F01	5EA0	
	MEMORY	MAIN	7F01	5F	7F01	5FA1	
	DISPLAY	MAIN	7F01	60	7F01	609E	
	UP	MAIN	7F01	61	7F01	619F	
	DOWN	MAIN	7F01	65	7F01	659B	
	LEFT	MAIN	7F01	62	7F01	629C	
	RIGHT	MAIN	7F01	64	7F01	649A	
	ENTER	MAIN	7F01	63	7F01	639D	
OPERATION	REC (PC / MCX)	MAIN	7F01	66	7F01	6698	Select PC / MCX
	PLAY	MAIN	7F01	68	7F01	6896	
	STOP	MAIN	7F01	69	7F01	6997	
	REW (NET RADIO)	MAIN	7F01	6A	7F01	6A94	Select NET RADIO
	FF (USB)	MAIN	7F01	6B	7F01	6B95	Select USB
	SKIP (-)	MAIN	7F01	6C	7F01	6C92	
	SKIP (+)	MAIN	7F01	6D	7F01	6D93	
NUMERIC KEY	1	MAIN	7F01	51	7F01	51AF	
	2	MAIN	7F01	52	7F01	52AC	
	3	MAIN	7F01	53	7F01	53AD	
	4	MAIN	7F01	54	7F01	54AA	
	5	MAIN	7F01	55	7F01	55AB	
	6	MAIN	7F01	56	7F01	56A8	
	7	MAIN	7F01	57	7F01	57A9	
	8	MAIN	7F01	58	7F01	58A6	
	ENT	MAIN	7F01	5C	7F01	5CA2	
	PRESET (UP)	MAIN	7F01	0679	7F01	0678	Simplified remote (RAV33)
PRESET (DOWN)	MAIN	7F01	027D	7F01	027C	Simplified remote (RAV33)	
Zone 2 (If NET/USB is selected)							
MENU	TITLE	ZONE 2	7F01	7D	7F01	7D83	Bookmark (only NET RADIO)
	MENU	ZONE 2	7F01	7E	7F01	7E80	
	MEMORY	ZONE 2	7F01	7F	7F01	7F81	
	DISPLAY	ZONE 2	7F01	80	7F01	807E	
	UP	ZONE 2	7F01	81	7F01	817F	
	DOWN	ZONE 2	7F01	85	7F01	857B	
	LEFT	ZONE 2	7F01	82	7F01	827C	
	RIGHT	ZONE 2	7F01	84	7F01	847A	
	ENTER	ZONE 2	7F01	83	7F01	837D	
OPERATION	REC (PC / MCX)	ZONE 2	7F01	86	7F01	8678	Select PC / MCX
	PLAY	ZONE 2	7F01	88	7F01	8876	
	STOP	ZONE 2	7F01	89	7F01	8977	
	REW (NET RADIO)	ZONE 2	7F01	8A	7F01	8A74	Select NET RADIO
	FF (USB)	ZONE 2	7F01	8B	7F01	8B75	Select USB
	SKIP (-)	ZONE 2	7F01	8C	7F01	8C72	
	SKIP (+)	ZONE 2	7F01	8D	7F01	8D73	
NUMERIC KEY	1	ZONE 2	7F01	71	7F01	718F	
	2	ZONE 2	7F01	72	7F01	728C	
	3	ZONE 2	7F01	73	7F01	738D	
	4	ZONE 2	7F01	74	7F01	748A	
	5	ZONE 2	7F01	75	7F01	758B	
	6	ZONE 2	7F01	76	7F01	7688	
	7	ZONE 2	7F01	77	7F01	7789	
	8	ZONE 2	7F01	78	7F01	7886	
	ENT	ZONE 2	7F01	7C	7F01	7C82	
	PRESET (UP)	ZONE 2	7F01	0778	7F01	0779	Simplified remote (RAV33)
PRESET (DOWN)	ZONE 2	7E01	037C	7E01	037D	Simplified remote (RAV33)	

# RX-Z11 Standard IR code (NEC format)

Rev. 0.2

FUNCTION		ZONE	ID1 setting (default)		ID2 setting		Comment
			Custom Code	Data Code	Custom Code	Data Code	
Zone 3 (If NET/USB is selected)							
MENU	TITLE	ZONE 3	7F01	9D	7F01	9D63	Bookmark (only NET RADIO)
	MENU	ZONE 3	7F01	9E	7F01	9E60	
	MEMORY	ZONE 3	7F01	9F	7F01	9F61	
	DISPLAY	ZONE 3	7F01	A0	7F01	A05E	
	UP	ZONE 3	7F01	A1	7F01	A15F	
	DOWN	ZONE 3	7F01	A5	7F01	A55B	
	LEFT	ZONE 3	7F01	A2	7F01	A25C	
	RIGHT	ZONE 3	7F01	A4	7F01	A45A	
ENTER	ZONE 3	7F01	A3	7F01	A35D		
OPERATION	REC (PC / MCX)	ZONE 3	7F01	A6	7F01	A658	Select PC / MCX
	PLAY	ZONE 3	7F01	A8	7F01	A856	
	STOP	ZONE 3	7F01	A9	7F01	A957	
	REW (NET RADIO)	ZONE 3	7F01	AA	7F01	AA54	Select NET RADIO
	FF (USB)	ZONE 3	7F01	AB	7F01	AB55	Select USB
	SKIP (-)	ZONE 3	7F01	AC	7F01	AC52	
	SKIP (+)	ZONE 3	7F01	AD	7F01	AD53	
NUMERIC KEY	1	ZONE 3	7F01	91	7F01	916F	
	2	ZONE 3	7F01	92	7F01	926C	
	3	ZONE 3	7F01	93	7F01	936D	
	4	ZONE 3	7F01	94	7F01	946A	
	5	ZONE 3	7F01	95	7F01	956B	
	6	ZONE 3	7F01	96	7F01	9668	
	7	ZONE 3	7F01	97	7F01	9769	
	8	ZONE 3	7F01	98	7F01	9866	
	ENT	ZONE 3	7F01	9C	7F01	9C62	
	PRESET (UP)	ZONE 3	7F01	0877	7F01	0876	Simplified remote (RAV33)
PRESET (DOWN)	ZONE 3	7F01	047B	7F01	047A	Simplified remote (RAV33)	
Zone 4 (If NET/USB is selected)							
MENU	TITLE	ZONE 4	7F01	BD	7F01	BD43	Bookmark (only NET RADIO)
	MENU	ZONE 4	7F01	BE	7F01	BE40	
	MEMORY	ZONE 4	7F01	BF	7F01	BF41	
	DISPLAY	ZONE 4	7F01	C0	7F01	C03E	
	UP	ZONE 4	7F01	C1	7F01	C13F	
	DOWN	ZONE 4	7F01	C5	7F01	C53B	
	LEFT	ZONE 4	7F01	C2	7F01	C23C	
	RIGHT	ZONE 4	7F01	C4	7F01	C43A	
ENTER	ZONE 4	7F01	C3	7F01	C33D		
OPERATION	REC (PC / MCX)	ZONE 4	7F01	C6	7F01	C638	Select PC / MCX
	PLAY	ZONE 4	7F01	C8	7F01	C836	
	STOP	ZONE 4	7F01	C9	7F01	C937	
	REW (NET RADIO)	ZONE 4	7F01	CA	7F01	CA34	Select NET RADIO
	FF (USB)	ZONE 4	7F01	CB	7F01	CB35	Select USB
	SKIP (-)	ZONE 4	7F01	CC	7F01	CC32	
	SKIP (+)	ZONE 4	7F01	CD	7F01	CD33	
NUMERIC KEY	1	ZONE 4	7F01	B1	7F01	B14F	
	2	ZONE 4	7F01	B2	7F01	B24C	
	3	ZONE 4	7F01	B3	7F01	B34D	
	4	ZONE 4	7F01	B4	7F01	B44A	
	5	ZONE 4	7F01	B5	7F01	B54B	
	6	ZONE 4	7F01	B6	7F01	B648	
	7	ZONE 4	7F01	B7	7F01	B749	
	8	ZONE 4	7F01	B8	7F01	B846	
	ENT	ZONE 4	7F01	BC	7F01	BC42	
	PRESET (UP)	ZONE 4	7F01	0976	7F01	0977	Simplified remote (RAV33)
PRESET (DOWN)	ZONE 4	7F01	057A	7F01	057B	Simplified remote (RAV33)	