

RX-V450,550,650,750									
Function		Standard I/R				RX-V750	RX-V650	RX-V550	RX-V450
		Custom Code		Data Code					
INPUT									
PHONO		7	A	1	4	YES	YES	NO	NO
CD		7	A	1	5	YES	YES	YES	YES
TUNER		7	A	1	6	YES	YES	YES	YES
MD/CD-R		7	A	1	8	YES	YES	YES	YES
DVD		7	A	C	1	YES	YES	YES	YES
D-TV/CBL		7	A	5	4	YES	YES	YES	YES
VCR1		7	A	0	F	YES	YES	YES	YES
DVR/VCR2		7	A	1	3	YES	YES	NO	NO
VIDEO AUX		7	A	5	5	YES	YES	YES	YES
INPUT TOGGLE		7	A	C	3	YES	YES	YES	YES
SYSTEM									
VOLUME	UP	7	A	1	A	YES	YES	YES	YES
	DOWN	7	A	1	B	YES	YES	YES	YES
SYSTEM POWER	ON	7	A	1	D	YES	YES	YES	YES
	OFF	7	A	1	E	YES	YES	YES	YES
MUTE		7	A	1	C	YES	YES	YES	YES
EXT INPUT		7	A	8	7	YES	YES	YES	YES
OSD		7	A	C	2	YES	YES	NO	NO
SLEEP		7	A	5	7	YES	YES	YES	YES
SET MENU		7	A	9	C	YES	YES	YES	YES
ENTER		7	A	D	E	YES	YES	YES	YES
UP		7	A	9	8	YES	YES	YES	YES
DOWN		7	A	9	9	YES	YES	YES	YES
+		7	A	5	2	YES	YES	YES	YES
-		7	A	5	3	YES	YES	YES	YES
DSP									
STEREO		7	A	8	8	YES	YES	YES	YES
HALL		7	A	8	9	YES	YES	YES	YES
JAZZ		7	A	8	A	YES	YES	YES	YES
ROCK CNCT		7	A	8	B	YES	YES	YES	YES
MUSIC VIDEO		7	A	8	C	YES	YES	YES	YES
ENTERTAINMENT		7	A	8	D	YES	YES	YES	YES
TV THEATER		7	A	8	E	YES	YES	YES	YES
MOVIE THEATER		7	A	8	F	YES	YES	YES	YES
DOLBY/DTS/AAC		7	A	9	0	YES	YES	YES	YES
NIGHT ON/OFF		7	A	9	5	YES	YES	YES	YES
EX/ES		7	A	9	7	YES	YES	YES	YES
EFFECT		7	A	5	6	YES	YES	YES	YES
SP LEVEL SELECT		7	A	8	6	YES	YES	YES	YES
TEST MODE		7	A	8	5	YES	YES	YES	YES
Pure Direct		7	A	D	D	YES	YES	NO	NO
TUNER									
PRESET PAGE		7	A	1	2	YES	YES	YES	YES
PRESET NUMBER	+	7	A	1	0	YES	YES	YES	YES
	-	7	A	1	1	YES	YES	YES	YES
PRESET PAGE	A	7	A	E	0	YES	YES	YES	YES
	B	7	A	E	1	YES	YES	YES	YES
	C	7	A	E	2	YES	YES	YES	YES
	D	7	A	E	3	YES	YES	YES	YES
	E	7	A	E	4	YES	YES	YES	YES
PRESET NUMBER	1	7	A	E	5	YES	YES	YES	YES
	2	7	A	E	6	YES	YES	YES	YES
	3	7	A	E	7	YES	YES	YES	YES
	4	7	A	E	8	YES	YES	YES	YES
	5	7	A	E	9	YES	YES	YES	YES
	6	7	A	E	A	YES	YES	YES	YES
	7	7	A	E	B	YES	YES	YES	YES
	8	7	A	E	C	YES	YES	YES	YES
ZONE2									
VOLUME	UP	7	A	D	A	YES	YES	NO	NO
	DOWN	7	A	D	B	YES	YES	NO	NO
ZONE2 MUTE		7	A	D	C	YES	YES	YES	NO
PHONO		7	A	D	0	YES	YES	NO	NO
CD		7	A	D	1	YES	YES	YES	NO
TUNER		7	A	D	2	YES	YES	YES	NO
MD/CD-R		7	A	D	3	YES	YES	YES	NO
DVD		7	A	C	D	YES	YES	YES	NO
D-TV/CBL		7	A	D	9	YES	YES	YES	NO
VCR1		7	A	D	6	YES	YES	YES	NO
DVR/VCR2		7	A	D	7	YES	YES	NO	NO
V-AUX		7	A	D	8	YES	YES	YES	NO