

Standard IR code for RX-V861, 661, 461, 361 (NEC code)						
FUNCTION	ID1 CODE	ID2 CODE	RX-V861	RX-V661	RX-V461	RX-V361
INPUT						
CD	7A-15	7D-87	YES	YES	YES	YES
DTV/CBL	7A-54	7D-84	YES	YES	YES	YES
DVD	7A-C1	7D-97	YES	YES	YES	YES
DVR	7A-13	7D-82	YES	YES	YES	YES
MD/CD-R	7A-C9	7D-86	YES	YES	YES	YES
PHONO	7A-14	7D-88	YES	YES	NO	NO
TUNER	7A-16	7D-89	YES	YES	YES	YES
V-AUX	7A-55	7D-8A	YES	YES	YES	YES
VCR	7A-0F	7D-81	YES	YES	NO	NO
XM	7A-B4	7D-29	YES	YES	YES	YES
MULTI CH INPUT	7A-87	7D-8C	YES	YES	YES	YES
SYSTEM						
POWER	7A-1D	7D-90	YES	YES	NO	NO
STANDBY	7A-1E	7D-91	YES	YES	NO	NO
VOLUME(VOL) +	7A-1A	7D-8D	YES	YES	YES	YES
VOLUME(VOL) -	7A-1B	7D-8E	YES	YES	YES	YES
MUTE	7A-1C	7D-94	YES	YES	YES	YES
SPEAKERS	7A-9A	7D-E7	YES	YES	YES	YES
SPEAKERS B	7A-9B	7D-E8	YES	YES	NO	NO
SLEEP	7A-57	7D-93	YES	YES	YES	YES
SET MENU	7A-84	7D-C3	YES	YES	YES	YES
UP	7A-9D	7D-9D	YES	YES	YES	YES
DOWN	7A-9C	7D-9C	YES	YES	YES	YES
LEFT	7A-9F	7D-9F	YES	YES	YES	YES
RIGHT	7A-9E	7D-9E	YES	YES	YES	YES
SET MENU	7A-9C	7D-9C	NO	NO	NO	NO
UP	7A-98	7D-B6	NO	NO	NO	NO
DOWN	7A-99	7D-B7	NO	NO	NO	NO
LEFT	7A-53	7D-B9	NO	NO	NO	NO
RIGHT	7A-52	7D-B8	NO	NO	NO	NO
ENTER	7A-DE	7D-56	YES	YES	YES	YES
RETURN	7A-AA	7D-B5	YES	YES	YES	YES
ON SCREEN (DISPLAY)	7A-C2	7D-C2	YES	YES	YES	YES
ADUIO SEL	7A-C3	7D-80	YES	YES	YES	YES
SCENE1*	7A-007F	7A-0C73	YES	YES	YES	YES
SCENE2*	7A-037C	7A-0F70	YES	YES	YES	YES
SCENE3*	7A-0679	7A-126D	YES	YES	YES	YES
SCENE4*	7A-0976	7A-156A	YES	YES	YES	YES

Standard IR code for RX-V861, 661, 461, 361 (NEC code)						
FUNCTION	ID1 CODE	ID2 CODE	RX-V861	RX-V661	RX-V461	RX-V361
DSP						
PROGRAM+	7A-58	7D-02	YES	YES	YES	YES
PROGRAM-	7A-59	7D-03	YES	YES	YES	YES
LEVEL	7A-86	7D-95	YES	YES	YES	YES
PURE DIRECT	7A-DD	7D-C0	YES	YES	NO	NO
DIRECT STEREO	7A-DD	7D-C0	YES	YES	NO	NO
ENHANCER	7A-94	7D-DC	YES	YES	YES	YES
SELECT	7A-96	7D-DE	NO	NO	NO	NO
CALSSICAL	7A-88	7D-D0	YES	YES	NO	NO
ENTERTAIN *2	7A-8A	7D-D2	YES	YES	NO	NO
ENTERTAIN *2	7A-89	7D-D1	NO	NO	YES	YES
MOVIE *2	7A-8B	7D-D3	YES	YES	NO	NO
MOVIE *2	7A-8A	7D-D2	NO	NO	YES	YES
LIVE / CLUB	7A-89	7D-D1	YES	YES	NO	NO
MUSIC	7A-88	7D-D0	NO	NO	YES	YES
STEREO *2	7A-8C	7D-D4	YES	YES	NO	NO
STEREO *2	7A-8B	7D-D3	NO	NO	YES	YES
SUR. DECODE	7A-8D	7D-D5	YES	YES	YES	YES
EXTD SUR.	7A-97	7D-DF	YES	YES	NO	NO
STRAIGHT	7A-56	7D-C1	YES	YES	YES	YES
NIGHT	7A-95	7D-DD	YES	YES	YES	YES
TUNER						
PRESET/CH UP	7A-10	7D-F5	YES	YES	YES	YES
PRESET/CH DOWN	7A-11	7D-F6	YES	YES	YES	YES
A-E/CAT. +	7A-12	7D-F7	YES	YES	YES	YES
A-E/CAT. -	7A-AC	7D-BB	YES	YES	YES	YES
BAND	7A-AE	7D-BD	YES	YES	YES	YES
PRESET NUMBER / NUMERIC BUTTON	1	7A-E5	7D-F8	YES	YES	YES
	2	7A-E6	7D-F9	YES	YES	YES
	3	7A-E7	7D-FA	YES	YES	YES
	4	7A-E8	7D-FB	YES	YES	YES
	5	7A-E9	7D-FC	YES	YES	YES
	6	7A-EA	7D-FD	YES	YES	YES
	7	7A-EB	7D-FE	YES	YES	YES
	8	7A-EC	7D-FF	YES	YES	YES
XM						
PRESET/CH UP	7A-6A	7D-31	YES	YES	YES	YES
PRESET/CH DOWN	7A-6B	7D-32	YES	YES	YES	YES
A-E/CAT. +	7A-6C	7D-33	YES	YES	YES	YES
A-E/CAT. -	7A-6E	7D-35	YES	YES	YES	YES
SRCH MODE	7A-6D	7D-34	YES	YES	YES	YES
ENTER(Hold/Release disp.)	7A-6F	7D-36	YES	YES	YES	YES
TITLE	7A-70	7D-37	YES	YES	YES	YES
MEMORY	7A-71	7D-38	YES	YES	YES	YES
DISPLAY	7A-72	7D-39	YES	YES	YES	YES
PRESET NUMBER / NUMERIC BUTTON	1	7A-61	7D-A1	YES	YES	YES
	2	7A-62	7D-A2	YES	YES	YES
	3	7A-63	7D-A3	YES	YES	YES
	4	7A-64	7D-A4	YES	YES	YES
	5	7A-65	7D-A5	YES	YES	YES
	6	7A-66	7D-A6	YES	YES	YES
	7	7A-67	7D-A7	YES	YES	YES
	8	7A-68	7D-A8	YES	YES	YES
	9	7A-69	7D-A9	YES	YES	YES
	0	7A-60	7D-A0	YES	YES	YES
ENT.	7A-BF	7D-3F	YES	YES	YES	YES

Standard IR code for RX-V861, 661, 461, 361 (NEC code)						
FUNCTION	ID1 CODE	ID2 CODE	RX-V861	RX-V661	RX-V461	RX-V361
MAIN						
POWER	7E-7E	7D-B2	YES	YES	YES	YES
STANDBY	7E-7F	7D-B1	YES	YES	YES	YES
ZONE2						
POWER	7E-BA	7D-64	YES	YES	NO	NO
STANDBY	7E-BB	7D-63	YES	YES	NO	NO
VOLUME(VOL) +	7A-DA	7D-70	YES	YES	NO	NO
VOLUME(VOL) -	7A-DB	7D-71	YES	YES	NO	NO
MUTE	7A-DC	7D-72	YES	YES	NO	NO
CD	7A-D1	7D-67	YES	YES	NO	NO
DTV/CBL	7A-D9	7D-6C	YES	YES	NO	NO
DVD	7A-CD	7D-6F	YES	YES	NO	NO
DVR	7A-D7	7D-6E	YES	YES	NO	NO
MD/CD-R	7A-CF	7D-92	YES	YES	NO	NO
PHONO	7A-D0	7D-65	YES	YES	NO	NO
TUNER	7A-D2	7D-66	YES	YES	NO	NO
XM	7A-B8	7D-2F	YES	YES	NO	NO
V-AUX	7A-D8	7D-68	YES	YES	NO	NO
VCR	7A-D6	7D-6D	YES	YES	NO	NO
iPod*						
UP	7F01-0E		YES	YES	YES	NO
MENU	7F01-0F		YES	YES	YES	NO
Menu Left	7F01-10		YES	YES	YES	NO
ENTER	7F01-11		YES	YES	YES	NO
Menu Right	7F01-12		YES	YES	YES	NO
DOWN	7F01-14		YES	YES	YES	NO
DISPLAY	7F01-15		YES	YES	YES	NO
REW(SEARCH)	7F01-17		YES	YES	YES	NO
FF(SEARCH)	7F01-18		YES	YES	YES	NO
PAUSE	7F01-1A		YES	YES	YES	NO
CHP/SKIP-	7F01-1B		YES	YES	YES	NO
CHP/SKIP+	7F01-1C		YES	YES	YES	NO
STOP	7F01-1D		YES	YES	YES	NO
PLAY	7F01-1E		YES	YES	YES	NO

* NOTE

The IR format is 16bit typed custom code NEC format instead of 8bit typed custom code(well-known as YAMAHA NEC format).

Item in red means there is a change from Vx59 series.

*2 IR code differs between 861/661 and 461/361.