

Standard IR code for RX-V757, 657, 557, 457						
FUNCTION	ID1 CODE	ID2 CODE	RX-V757	RX-V657	RX-V557	RX-V457
<b>INPUT</b>						
CD	7A-15	7D-87	YES	YES	YES	YES
DTV/CBL	7A-54	7D-84	YES	YES	YES	YES
DVD	7A-C1	7D-97	YES	YES	YES	YES
DVR/VCR2	7A-13	7D-82	YES	YES	NO	NO
MD/CD-R	7A-C9	7D-86	YES	YES	YES	YES
PHONO	7A-14	7D-88	YES	NO	NO	NO
TUNER	7A-16	7D-89	YES	YES	YES	YES
V-AUX	7A-55	7D-8A	YES	YES	YES	YES
VCR1(VCR)	7A-0F	7D-81	YES	YES	YES	YES
MULTI CH IN	7A-87	7D-8C	YES	YES	YES	YES
INPUT MODE	7A-C3	7D-80	YES	NO	NO	NO
<b>SYSTEM</b>						
SYSTEM POWER	7A-1D	7D-90	YES	YES	YES	YES
STANDBY	7A-1E	7D-91	YES	YES	YES	YES
VOLUME(VOL) +	7A-1A	7D-8D	YES	YES	YES	YES
VOLUME(VOL) -	7A-1B	7D-8E	YES	YES	YES	YES
MUTE	7A-1C	7D-94	YES	YES	YES	YES
SPEAKERS A	7A-9A	7D-E7	YES	YES	YES	YES
SPEAKERS B	7A-9B	7D-E8	YES	YES	YES	YES
SLEEP	7A-57	7D-93	YES	YES	YES	YES
SET MENU	7A-9C	7D-9C	YES	YES	YES	YES
UP	7A-98	7D-B6	YES	YES	YES	YES
DOWN	7A-99	7D-B7	YES	YES	YES	YES
LEFT	7A-53	7D-B9	YES	YES	YES	YES
RIGHT	7A-52	7D-B8	YES	YES	YES	YES
ENTER	7A-DE	7D-56	YES	YES	YES	YES
RETURN	7A-AA	7D-CA	YES	YES	YES	YES
RETURN/TEST	7A-85	7D-B5	YES	YES	YES	YES
ON SCREEN	7A-C2	7D-C2	YES	YES	NO	NO
<b>DSP</b>						
LEVEL	7A-86	7D-95	YES	YES	YES	YES
PURE DIRECT(DIRECT ST.)	7A-DD	7D-C0	YES	YES	YES	YES
SELECT	7A-96	7D-DE	YES	YES	YES	YES
ENTERTAIN	7A-8A	7D-D2	YES	YES	YES	YES
MOVIE	7A-8B	7D-D3	YES	YES	YES	YES
MUSIC	7A-89	7D-D1	YES	YES	YES	YES
STANDARD	7A-8D	7D-D5	YES	YES	YES	YES
STEREO	7A-88	7D-D0	YES	YES	YES	YES
EXTD SUR.	7A-97	7D-DF	YES	YES	YES	YES
STRAIGHT(EFFECT)	7A-56	7D-C1	YES	YES	YES	YES
NIGHT	7A-95	7D-DD	YES	YES	YES	YES
<b>MAIN</b>						
SYSTEM POWER	7E-7E	7D-B2	YES	YES	YES	YES
STANDBY	7E-7F	7D-B1	YES	YES	YES	YES
<b>TUNER</b> <i>*Valid only in XM mode</i>						
PRESET/CH UP	7A-10	-	YES	YES	YES	YES
PRESET/CH DOWN	7A-11	-	YES	YES	YES	YES
A-B/CAT. +	7A-12	-	YES	YES	YES	YES
A-B/CAT. -	7A-AC	-	YES	YES	YES	YES
BAND *	7A-AE	-	YES	YES	YES	YES
SRCH MODE *	7A-AB	-	YES	YES	YES	YES
ENTER *	7A-AD	-	YES	YES	YES	YES
MEMORY *	7A-AF	-	YES	YES	YES	YES
DISPLAY *	7A-B0	-	YES	YES	YES	YES
PRESET NUMBER / NUMERIC BUTTON	1	7A-E5	-	YES	YES	YES
	2	7A-E6	-	YES	YES	YES
	3	7A-E7	-	YES	YES	YES
	4	7A-E8	-	YES	YES	YES
	5	7A-E9	-	YES	YES	YES
	6	7A-EA	-	YES	YES	YES
	7	7A-EB	-	YES	YES	YES
	8	7A-EC	-	YES	YES	YES
	9 *	7A-B1	-	YES	YES	YES
	0 *	7A-B2	-	YES	YES	YES
ENT. *	7A-B3	-	YES	YES	YES	YES
<b>ZONE2</b>						
SYSTEM POWER	7E-BA	-	YES	YES	YES	NO
STANDBY	7E-BB	-	YES	YES	YES	NO
VOLUME(VOL) +	7A-DA	-	YES	YES	NO	NO
VOLUME(VOL) -	7A-DB	-	YES	YES	NO	NO
MUTE	7A-DC	-	YES	YES	YES	NO
CD	7A-D1	-	YES	YES	YES	NO
DTV/CBL	7A-D9	-	YES	YES	YES	NO
DVD	7A-CD	-	YES	YES	YES	NO
DVR/VCR2	7A-D7	-	YES	YES	NO	NO
MD/CD-R	7A-CF	-	YES	YES	YES	NO
PHONO	7A-D0	-	YES	NO	NO	NO
TUNER	7A-D2	-	YES	YES	YES	NO
V-AUX	7A-D8	-	YES	YES	YES	NO
VCR1(VCR)	7A-D6	-	YES	YES	YES	NO