

RX-V2600 / RX-V1600						
FUNCTION		Standard I/R (NEC format)				Comment
		ID1 setting (default)		ID2 setting		
		Custom Code	Data Code	Custom Code	Data Code	
SYSTEM						
MULTI CH IN	ON/OFF	7A	87	7D	8C	
AUDIO SELECT	TOGGLE	7A	C3	7D	80	
ALL POWER	ON	7A	1D	7D	90	All Zone ON
	STANDBY	7A	1E	7D	91	ALL Zone OFF
SLEEP	TOGGLE	7A	57	7D	93	
LEVEL	TOGGLE	7A	86	7D	95	For RX-V1600 only
ON SCREEN	TOGGLE	7A	C2	7D	C2	For RX-V1600 only
SPEAKER	A ON/OFF	7A	9A	7D	E7	
	B ON/OFF	7A	9B	7D	E8	
SYSTEM MEMORY	MEMORY1	7A	A8	7D	B3	For RX-V2600 only
	MEMORY2	7A	A9	7D	B4	For RX-V2600 only
MAIN ZONE						
MUTE	ON/OFF	7A	1C	7D	94	
INPUT	PHONO	7A	14	7D	88	
	CD	7A	15	7D	87	
	TUNER	7A	16	7D	89	
	MD/TAPE	7A	18	7D	8B	
	CD-R	7A	19	7D	99	
	DVD	7A	C1	7D	97	
	D-TV	7A	54	7D	84	
	CBL/SAT	7A	C0	7D	96	
	VCR1	7A	0F	7D	81	
	DVR/VCR2	7A	13	7D	82	
	VIDEO AUX	7A	55	7D	8A	
	XM	7A	B4	7D	29	Only USA & Canada
VOLUME	UP	7A	1A	7D	8D	
	DOWN	7A	1B	7D	8E	
POWER	ON	7E	7E	7D	B2	
	STANDBY	7E	7F	7D	B1	
ZONE2						
ZONE2 VOLUME	UP	7A	DA	7D	70	
	DOWN	7A	DB	7D	71	
ZONE2 POWER	ON	7E	BA	7D	64	
	STANDBY	7E	BB	7D	63	
ZONE2 MUTE	ON/OFF	7A	DC	7D	72	
ZONE2 TONE	BASS +	7A	73	<--- same as ID1		"TV VOL+" key
	BASS -	7A	74	<--- same as ID1		"TV VOL -" key
	TREBLE +	7A	75	<--- same as ID1		"TV CH+" key
	TREBLE -	7A	76	<--- same as ID1		"TV CH -" key
ZONE2 INPUT	PHONO	7A	D0	7D	65	
	CD	7A	D1	7D	67	
	TUNER	7A	D2	7D	66	
	MD/TAPE	7A	D3	7D	6A	
	CD-R	7A	D4	7D	6B	
	DVD	7A	CD	7D	6F	
	DTV	7A	D9	7D	6C	
	CBL/SAT	7A	CC	7D	69	
	VCR1	7A	D6	7D	6D	
	DVR/VCR2	7A	D7	7D	6E	
	VIDEO AUX	7A	D8	7D	68	
	XM	7A	B8	7D	2F	Only USA & Canada
ZONE3						
ZONE3 VOLUME	UP	7A	FD	7D	20	
	DOWN	7A	FE	7D	21	
ZONE3 POWER	ON	7A	ED	7D	74	
	STANDBY	7A	EE	7D	73	
ZONE3 MUTE	ON/OFF	7A	FF	7D	22	
ZONE3 TONE	BASS +	7A	77	<--- same as ID1		"TV VOL+" key
	BASS -	7A	78	<--- same as ID1		"TV VOL -" key
	TREBLE +	7A	79	<--- same as ID1		"TV CH+" key
	TREBLE -	7A	7A	<--- same as ID1		"TV CH -" key
ZONE3 INPUT	PHONO	7A	F1	7D	75	
	CD	7A	F2	7D	77	
	TUNER	7A	F3	7D	76	
	MD/TAPE	7A	F4	7D	7A	
	CD-R	7A	F5	7D	7B	
	DVD	7A	FC	7D	7F	
	DTV	7A	F6	7D	7C	
	CBL/SAT	7A	F7	7D	79	

	VCR1	7A	F9	7D	7D	
	DVR/VCR2	7A	FA	7D	7E	
	VIDEO AUX	7A	F0	7D	78	
	XM	7A	B9	7D	30	Only USA & Canada
DSP						
PROGRAM	STEREO	7A	88	7D	D0	Toggle
	MUSIC	7A	89	7D	D1	Toggle
	ENTERTAINMENT	7A	8A	7D	D2	Toggle
	MOVIE	7A	8B	7D	D3	Toggle
	THX	7A	8C	7D	D4	Toggle
	STANDARD	7A	8D	7D	D5	Toggle
	SELECT	7A	96	7D	DE	Toggle
PURE DIRECT	ON/OFF	7A	DD	7D	C0	
NIGHT	TOGGLE	7A	95	7D	DD	
EXTD SUR.	TOGGLE	7A	97	7D	DF	6.1 or 7.1 Surround Decoder
STRAIGHT/EFFECT	TOGGLE	7A	56	7D	C1	
TEST MODE	TOGGLE	7A	85	N/A		Not Available
TUNER						
BAND	FM/AM	7A	AE	7D	BD	
PRESET PAGE	A-E +	7A	12	7D	F7	Preset page A to E
	A-E -	7A	AC	7D	BB	Preset page E to A
PRESET NUMBER	up	7A	10	7D	F5	Increase preset number
	down	7A	11	7D	F6	Decrease preset number
PRESET NUMBER	1	7A	E5	7D	F8	
	2	7A	E6	7D	F9	
	3	7A	E7	7D	FA	
	4	7A	E8	7D	FB	
	5	7A	E9	7D	FC	
	6	7A	EA	7D	FD	
	7	7A	EB	7D	FE	
	8	7A	EC	7D	FF	
RDS Only European Model	FREQ/TEXT	7A	A4	7D	23	
	EON	7A	A5	7D	24	
	PTY MODE	7A	A6	7D	25	
	PTY START	7A	A7	7D	26	
XM (Only USA & Canada)						
SEARCH MODE	TOGGLE	7A	6D	7D	34	All CH -> Category -> Preset..
PRESET/CH	up	7A	6A	7D	31	Preset or Channel Number
	down	7A	6B	7D	32	Preset or Channel Number
A-E/CAT.	+	7A	6C	7D	33	Preset Page or Category
	-	7A	6E	7D	35	Preset Page or Category
ENTER	TOGGLE	7A	6F	7D	36	Hold /Release Display
TITLE	TOGGLE	7A	70	7D	37	Next History
MEMORY	PRESET MEMORY	7A	71	7D	38	
DISPLAY	TOGGLE	7A	72	7D	39	Select Display Mode
NUMERIC KEY	0	7A	60	7D	A0	
	1	7A	61	7D	A1	
	2	7A	62	7D	A2	
	3	7A	63	7D	A3	
	4	7A	64	7D	A4	
	5	7A	65	7D	A5	
	6	7A	66	7D	A6	
	7	7A	67	7D	A7	
	8	7A	68	7D	A8	
	9	7A	69	7D	A9	
	ENT.	7A	BF	7D	3F	Enter Numeric Key
MENU						
SET MENU For RX-V1600	ON/OFF	7A	9C	7D	9C	
	Cursor Up	7A	98	7D	B6	
	Cursor Down	7A	99	7D	B7	
	Cursor Right	7A	52	7D	B8	
	Cursor Left	7A	53	7D	B9	
	ENTER	7A	DE	7D	56	same as RX-V2600
	RETURN	7A	AA	7D	B5	
GUI MENU For RX-V2600	TOP MENU	7A	A0	7D	52	Jump to Top Menu
	Cursor Up	7A	9D	7D	9D	
	Cursor Down	7A	9C	7D	9C	same as "SET MENU" code of RX-V1600
	Cursor Right	7A	9E	7D	9E	
	Cursor Left	7A	9F	7D	9F	
	ENTER	7A	DE	7D	56	same as RX-V1600
	EXIT	7A	A1	7D	53	

*** Instructions: How to change the remote ID setting**

<Remote control setting>

Setting remote control AMP codes

The AMP library (L;AMP) code is preset to 2001 in order to operate this unit.

However, you can switch the AMP library code by entering one of the following codes if necessary.

Set AMP/SOURCE/TV to AMP or SOURCE and then change the remote control code settings.

AMP library code (remote control setting)	Function	Remote control AMP ID (this unit's setting)
2001 (initial setting)	To operate this unit using the default code. To operate Zone2 or Zone3 features	ID1 (initial setting)
2002	To operate this unit using an alternative code. To operate Zone2 or Zone3 features	ID2

Setting remote control tuner codes (or XM codes)

The tuner library (L;TUN) code is preset in the TUNER and XM buttons in order to operate this unit.

The initial settings for the TUNER and XM buttons are 2602 and 2604 respectively.

However, you can switch the tuner library code by entering one of the following codes if necessary.

Set AMP/SOURCE/TV to SOURCE and press TUNER (or XM) on the remote control to select TUNER (or XM) as the input source and then change the remote control code settings.

Tuner library code (remote control setting)	Function	Remote control tuner ID (this unit's setting)
2602 (initial setting)	To operate this unit using the default code.	ID1 (initial setting)
2603	To operate this unit using an alternative code.	ID2

XM library code (remote control setting)	Function	Remote control XM ID (this unit's setting)
2604 (initial setting)	To operate this unit using the default code.	ID1 (initial setting)
2605	To operate this unit using an alternative code.	ID2

<Unit setting>

Unit setting need to change simultaneously in advanced setup.

1. Press MASTER ON/OFF on the front panels to release it outward to the OFF position to set this unit, Zone2 and Zone3 to the standby mode.
2. Press and hold STRAIGHT (EFFECT) on the front panel and then press MASTER ON/OFF inward to the ON position to turn on the power of this unit.
3. Rotate the PROGRAM selector on the front panel to select "REMOTE AMP", "REMOTE TUN", or "REMOTE XM".
4. Press STRAIGHT (EFFECT) on the front panel repeatedly to change ID.
5. Press MASTER ON/OFF on the front panel to release it outward to the OFF position to save the new setting and set this unit, Zone2 and Zone3 to the standby mode.