

RX-V2300				
Function	Standard I/R			
	Custom Code		Data Code	
Audio Mute	7	A	1	C
6 ch Input	7	A	8	7
SYSTEM				
PHONO	7	A	1	4
CD	7	A	1	5
TUNER	7	A	1	6
CD-R	7	A	1	9
MD/Tape	7	A	C	9
DVD	7	A	C	1
D-TV / LD	7	A	5	4
SAT	7	A	C	A
CBL / SAT	7	A	C	0
VCR1	7	A	0	F
VCR2 / DVR	7	A	1	3
V-AUX	7	A	5	5
Volume UP	7	A	1	A
Volume DOWN	7	A	1	B
POWER ON	7	A	1	D
POWER OFF	7	A	1	E
SLEEP	7	A	5	7
OSD	7	A	C	2
DSP PROGRAM				
CONCERT HALL 1	7	A	8	8
CONCERT HALL 2	7	A	8	9
CHURCH	7	A	8	A
JAZZ CLUB	7	A	8	B
ROCK CONCERT	7	A	8	C
ENTERTAINMENT	7	A	8	D
MUSIC VIDEO	7	A	8	E
TV THEATER	7	A	8	F
MOVIE THEATER 1	7	A	9	0
MOVIE THEATER 2	7	A	9	1
DOLBY / DTS / AAC SUR	7	A	9	2
SURROUND SELECT	7	A	9	6
EFFECT	7	A	5	6
PARAMETER UP	7	A	C	5
PARAMETER DOWN	7	A	C	4
PARAMETER +	7	A	C	6
PARAMETER -	7	A	C	7
LEVEL	7	A	8	6
TEST MODE	7	A	8	5

TUNER				
PRESET PAGE	7	A	1	2
PRESET NO. +	7	A	1	0
PRESET NO. -	7	A	1	1
A	7	A	E	0
B	7	A	E	1
C	7	A	E	2
D	7	A	E	3
E	7	A	E	4
1	7	A	E	5
2	7	A	E	6
3	7	A	E	7
4	7	A	E	8
5	7	A	E	9
6	7	A	E	A
7	7	A	E	B
8	7	A	E	C
SET MENU				
SET MENU UP	7	A	9	D
SET MENU DOWN	7	A	9	C
SET MENU +	7	A	9	E
SET MENU -	7	A	9	F
Zone 2				
ZONE 2 VOLUME UP	7	A	D	A
ZONE 2 VOLUME DOWN	7	A	D	B
ZONE 2 MUTE	7	A	D	C
PHONO	7	A	D	0
CD	7	A	D	1
TUNER	7	A	D	2
CD-R	7	A	D	4
MD/TAPE	7	A	C	F
DVD	7	A	C	D
D-TV / LD	7	A	C	9
CBL/SAT	7	A	C	C
VCR 1	7	A	C	6
VCR 2 / DVR	7	A	C	7
V-AUX	7	A	C	8