

DVD-CX1				
Function	Extended I/R			
	Custom Code		Data Code	
Play Mode - Normal	7	C	F	0
Play Mode - Random	7	C	F	1
Play Mode - Program	7	C	F	2
Repeat OFF	7	C	F	3
Repeat ALL	7	C	F	5
Power OFF	7	C	F	6
Power ON	7	C	F	7