

DVD-S1700/2700 IR codes (NEC format)						rev.2
Function	Custom Code		Data Code			
POWER OFF	7	C	F	7		
POWER ON	7	C	F	6		
POWER ON/OFF	7	C	8	0	*not on the remote	
OPEN/CLOSE	7	C	8	1	*not on the remote	
PLAY	7	C	8	2		
PAUSE (STEP +)	7	C	8	3		
STOP	7	C	8	5		
SEARCH - (<<) <Slow ->	7	C	8	6		
SEARCH + (>>) <Slow +>	7	C	8	7		
0	7	C	9	3		
1	7	C	9	4		
2	7	C	9	5		
3	7	C	9	6		
4	7	C	9	7		
5	7	C	9	8		
6	7	C	9	9		
7	7	C	9	A		
8	7	C	9	B		
9	7	C	9	C		
CLEAR	7	C	9	F		
PROGRAM	7	C	A	0		
RANDOM	7	C	A	1		
REPEAT MODE	7	C	A	3		
REPEAT A-B	7	C	A	4		
ON SCREEN(DISPLAY ON/OFF)	7	C	A	6		
DIMMER	7	C	A	9		
SUB TITLE	7	C	A	A		
SETUP	7	C	A	C		
AUDIO	7	C	A	D		
ANGLE	7	C	A	E		
TOP MENU	7	C	B	1		
MENU	7	C	B	2		
CURSOL DOWN	7	C	B	3		
CURSOL UP	7	C	B	4		
CURSOL LEFT	7	C	B	5		
CURSOL RIGHT	7	C	B	6		
RETURN	7	C	B	7		
ENTER	7	C	B	8		
SKIP-	7	C	B	9		
SKIP+	7	C	B	A		
ZOOM	7	C	D	7		
AUDIO DIRECT(VIDEO ON/OFF)	7	C	D	9		
GROUP+	7	C	D	D		
PAGE -	7	C	D	E		
PAGE +	7	C	D	F		
MULTI / 2ch	7	C	E	1		
HDMI	7	C	E	5		