

リモコンコードと応答 remote control code and report

Function	State	CDMT0,1	CMDT2,3	RCMD 0	RCMD1	RCMD2	
----------	-------	---------	---------	--------	-------	-------	--

: Not supported remote control code by DVD-S1800

S : Supported, N : Not Supported

		Remote Code		Report			DVD-S 1800
Function	State	CDMT0,1	CMDT2,3	RCMD 0	RCMD1	RCMD2	
Power ON/OFF	OFF	7C	80	8	0	0	S
	ON	7C	80	8	0	1	S
OPEN/CLOSE	CLOSE	7C	81	8	1	0	S
	OPEN	7C	81	8	1	1	S
PLAY	-	7C	82	8	2	0	S
PAUSE	-	7C	83	8	3	0	S
STOP	-	7C	85	8	5	0	S
SEARCH -	-	7C	86	8	6	0	S
SEARCH +	-	7C	87	8	7	0	S
SKIP-		7C	88	8	8	0	⚡ N
SKIP+		7C	89	8	9	0	⚡ N
DISCSKIP -	-	7C	8A	8	A	0	N
DISCSKIP +	-	7C	8B	8	B	0	N
Numeric 0	-	7C	93	9	3	0	S
Numeric 1	-	7C	94	9	4	0	S
Numeric 2	-	7C	95	9	5	0	S
Numeric 3	-	7C	96	9	6	0	S
Numeric 4	-	7C	97	9	7	0	S
Numeric 5	-	7C	98	9	8	0	S
Numeric 6	-	7C	99	9	9	0	S
Numeric 7	-	7C	9A	9	A	0	S
Numeric 8	-	7C	9B	9	B	0	S
Numeric 9	-	7C	9C	9	C	0	S
Numeric +10/ >10	-	7C	9D	9	D	0	⚡ N

CANCEL(CLEAR)	-	7C	9F	9	F	0	S
PROGRAM	-	7C	A0	A	0	0	S
RANDOM	-	7C	A1	A	1	0	S
REPEAT MODE	-	7C	A3	A	3	0	S
REPEAT A-B	-	7C	A4	A	4	0	S
DISPLAY ON/OFF (ON SCREEN)	-	7C	A6	A	6	0	S
TIME		7C	A8	A	8	0	SN
DIMMER		7C	A9	A	9	0	S
SUBTITLE(ON/OFF)	-	7C	AA	A	A	0	S
SUBTITLE(=0xAA)		7C	AB	A	B	0	S
SETUP	-	7C	AC	A	C	0	S
AUDIO	-	7C	AD	A	D	0	S
ANGLE	-	7C	AE	A	E	0	S
TOP MENU	-	7C	B1	B	1	0	S
MENU	-	7C	B2	B	2	0	S
CURSOL DOWN	-	7C	B3	B	3	0	S
CORSOL UP	-	7C	B4	B	4	0	S
CORSOL LEFT	-	7C	B5	B	5	0	S
CORSOL RIGHT	-	7C	B6	B	6	0	S
RETURN	-	7C	B7	B	7	0	S
SELECT(ENTER)	-	7C	B8	B	8	0	S
SKIP -	-	7C	B9	B	9	0	NS
SKIP +	-	7C	BA	B	A	0	NS
PLAY MODE	-	7C	BD	B	D	0	N
DISC 1	-	7C	D1	D	1	0	N
DISC 2	-	7C	D2	D	2	0	N
DISC 3	-	7C	D3	D	3	0	N
DISC 4	-	7C	D4	D	4	0	N

DISC 5	-	7C	D5	D	5	0	N
ZOOM		7C	D7	D	5	0	S
MARKER		7C	D8	D	8	0	SN
VIDEO ON/OFF (AUDIO DIRECT)	-	7C	D9	D	9	0	S
PROGRESSIVE	-	7C	DA	D	A	0	SN
GROUP +	-	7C	DD	D	D	0	S
PAGE -		7C	DE	D	F	0	S
PAGE +	-	7C	DF	D	F	0	S
PLAYER MODE	PLAYER MODE 1	7C	E0	E	0	0	N
	PLAYER MODE 2	7C	E0	E	0	1	N
MULTI/2ch		7C	E1	E	1	0	S
HDMI ON/OFF		7C	E5	E	5	0	S
PLAYMODE = NORMAL	-	7C	F0	F	0	0	S
PLAYMODE = RANDOM	-	7C	F1	F	1	0	S
PLAY MODE = PROGRAM	-	7C	F2	F	2	0	SN
REPEAT OFF		7C	F3	F	3	0	S
							S
REPEAT ALL	-	7C	F5	F	5	0	S
POWER ON	-	7C	F6	F	6	0	S
POWER OFF	-	7C	F7	F	7	0	S

