

YAMAHA DVD-S661 RC code table

1. RC code list

	1 STANDBY (POWER) 7C-80	
2 TOP MENU / RETURN 7C-B1	3 UP 7C-B4	4 ON SCREEN 7C-A6
5 LEFT 7C-B5	6 ENTER / OK 7C-B8	7 RIGHT 7C-B6
8 MENU 7C-B2	9 DOWN 7C-B3	10 SETUP 7C-AC
11 SKIP / SEARCH- 7C-B9	12 PLAY / PAUSE 7C-92	13 SKIP / SEARCH+ 7C-BA
14 STOP 7C-85		15 USB 7C-E6
16 Digit 1 7C-94	17 Digit 2 7C-95	18 Digit 3 7C-96
19 Digit 4 7C-97	20 Digit 5 7C-98	21 Digit 6 7C-99
22 Digit 7 7C-9A	23 Digit 8 7C-9B	24 Digit 9 7C-9C
25 SUBTITLE 7C-AA	26 Digit 0 7C-93	27 AUDIO 7C-AD
28 ZOOM 7C-D7	29 REPEAT 7C-A3	30 REPEAT A-B 7C-A4

2. Extended IR code list

code	Function	Remarks
7C-F0	PLAY MODE = NORMAL	same as DVD-S659
7C-F1	PLAY MODE = RANDOM	same as DVD-S659
7C-F2	PLAY MODE = PROGRAM	same as DVD-S659
7C-F3	REPEAT OFF	same as DVD-S659
7C-F5	REPEAT ALL	same as DVD-S659
7C-F6	POWER ON	same as DVD-S659
7C-F7	POWER OFF	same as DVD-S659
7C-86	SEARCH-	same as DVD-S659
7C-87	SEARCH+	same as DVD-S659
7C-82	PLAY	same as DVD-S659
7C-83	PAUSE	same as DVD-S659
7C-AE	ANGLE	same as DVD-S659
7C-E4	MUTE	same as DVD-S659

