

DVD-CX1				
Function	Standard I/R			
	Custom Code		Data Code	
POWER	7	C	8	0
OPEN/CLOSE	7	C	8	1
PLAY	7	C	8	2
PAUSE	7	C	8	3
STOP	7	C	8	5
SEARCH -	7	C	8	6
SEARCH +	7	C	8	7
DISCSKIP +	7	C	8	B
NUMERIC KEY 0	7	C	9	3
NUMERIC KEY 1	7	C	9	4
NUMERIC KEY 2	7	C	9	5
NUMERIC KEY 3	7	C	9	6
NUMERIC KEY 4	7	C	9	7
NUMERIC KEY 5	7	C	9	8
NUMERIC KEY 6	7	C	9	9
NUMERIC KEY 7	7	C	9	A
NUMERIC KEY 8	7	C	9	B
NUMERIC KEY 9	7	C	9	C
NUMERIC KEY +10	7	C	9	D
CANCEL(CLEAR)	7	C	9	F
PROGRAM	7	C	A	0
RANDOM	7	C	A	1
REP MODE	7	C	A	3
REP A-B	7	C	A	4
DISPLAY	7	C	A	6
SUBTITLE ON/OFF	7	C	A	A
SUBTITLE	7	C	A	B
SETUP	7	C	A	C
AUDIO	7	C	A	D
ANGLE	7	C	A	E
TITLE	7	C	B	1
MENU	7	C	B	2
CURSOL DOWN	7	C	B	3
CURSOL UP	7	C	B	4
CURSOL LEFT	7	C	B	5
CURSOL RIGHT	7	C	B	6
RETURN	7	C	B	7
SELECT(ENTER)	7	C	B	8
SKIP/SEARCH-	7	C	B	9
SKIP/SEARCH+	7	C	B	A
PLAY MODE	7	C	B	D
DISC 1	7	C	D	1

DISC 2	7	C	D	2
DISC 3	7	C	D	3
DISC 4	7	C	D	4
DISC 5	7	C	D	5
MARKER	7	C	D	8
VIDEO ON/OFF	7	C	D	9
PROGRESSIVE	7	C	D	A
TEXT	7	C	D	B
GROUP +	7	C	D	D
PAGE +	7	C	D	F