

YSP-3000/4000 IR code table					IR CODE		232C	
	toggle contents			bottom state	78	7E		
system	Power	ON/Standby		Toggle	78	CC	NG	
	Audio Mute	ON/OFF		Toggle	78	9C	OK	
	Input [XM+FM]			select	78	4B	OK	
	Input [TV/STB]			select	78	DF	OK	
	Input [DVD]			select	78	4A	OK	
	Input [AUX1]			select	78	49	OK	
	Input [AUX2]			select	78	DE	OK	
	Input [AUX3]			select	78	BC	OK	
	Input mode	analog/DTS/AAC(+)		Toggle	78	8D	NG	
	Master volume [UP]			select	78	1E	OK	
	Master volume [DOWN]			select	78	1F	OK	
	Sleep timer	120/90/60/30/OFF min		Toggle	78	4F	OK	
FM+XM	TEN KEY 0			select	78	10	OK	XM Only
	TEN KEY 1			select	78	11	OK	
	TEN KEY 2			select	78	12	OK	
	TEN KEY 3			select	78	13	OK	
	TEN KEY 4			select	78	14	OK	
	TEN KEY 5			select	78	15	OK	
	TEN KEY 6			select	78	16	OK	
	TEN KEY 7			select	78	17	OK	
	TEN KEY 8			select	78	18	OK	
	TEN KEY 9			select	78	19	OK	XM Only
	PRESET+			Toggle	78	1B	OK	
	PRESET-			Toggle	78	1C	OK	
	A/B/C/D/E +, CATEGORY+(XM)			Toggle	78	1D	OK	
	A/B/C/D/E -, CATEGORY-(XM)			Toggle	78	BB	OK	
	TUNING+/PRESET+			Toggle	78	AA	OK	
	TUNING-/PRESET-			Toggle	78	A9	OK	
	PRESET/TUNE (MODE)			Toggle	78	A8	OK	
	SEARCH MODE			Toggle	78	B7	OK	
Sound field	MEMORY			Toggle	78	B2	OK	
	XM ENTER			select	78	BD	OK	
	XM DISPLAY / RDS MODE			Toggle	78	B8	OK	RDS MODE / G.E Dest Only
	SURROUND	Dolby Pro/neo6		Toggle	78	99	NG	
	Cinema DSP [MOVIE]	Sci-Fi/Spectacle/Adv		Toggle	78	D9	NG	
	Cinema DSP [MUSIC]	Music video/Hall/Jazz		Toggle	78	DA	NG	
	Cinema DSP [SPORTS]			select	78	DB	NG	
	Cinema DSP : OFF			select	78	9B	OK	
	Music Enhancer			Toggle	78	CB	NG	
	Volume mode	Night(CINEMA)/Night(MUSIC)/TV EQ Vol/OFF		Toggle	78	8A	NG	Night : Night Listening
	SRS TruBass	MID/DEEP/OFF		Toggle	78	8B	NG	MID:YSP-4000 only
	Level	ON/OFF		Toggle	78	48	NG	
Others	Test (Dolby)	ON/OFF		Toggle	78	5F	NG	
	Beam mode [5 Beam]			select	78	C2	OK	
	Beam mode [ST+3 Beam]			select	78	C3	OK	
	Beam mode [3 Beam]			select	78	C4	OK	
	Beam mode [Stereo/5ch Stereo]			Toggle	78	50	OK	
	Beam mode [My Beam](Just changed to My Beam. Some sequence is necessary for auto-MyBeam)			select	78	C5	OK	
	Beam mode [My Surround]			select	78	C6	OK	
	Set Menu			enter to state	78	9D	NG	
	IntelliBeam Start Trigger			select	78	A3	NG	
	entry [Up]			select	78	9E	NG	
	entry [Down]			select	78	8F	NG	
	entry [Right]			select	78	9E	NG	
	entry [Left]			select	78	9F	NG	
	ENTER			select	78	C1	NG	
	RETURN			select	78	C0	NG	
	Dual Mono	MAIN/SUB/MAIN+SUB		Toggle	78	A5	NG	J Dest Only

YSP-3000/4000 Extended IR function					IR CODE		232C	
					78	7E		
system	main power	ON		select	78	7E	OK	
	Audio mute	OFF		select	78	7F	OK	
		ON Mute		select	7E	A2	OK	
		ON -20dB		select	7E	DF	OK	
		OFF		select	7E	A3	OK	
	Input [FM]			select	78	B6	OK	
	Input [XM]			select	78	7D	OK	
	Input mode	AUTO		select	7E	A6	OK	
		DTS		select	7E	A8	OK	
		ANALOG		select	7E	AA	OK	
	Sleep	AAC		select	7E	3B	OK	J Dest Only
		OFF		select	7E	B3	OK	
FM+XM		120		select	7E	B4	OK	
		90		select	7E	B5	OK	
		60		select	7E	B6	OK	
		30		select	7E	B7	OK	
	Preset Page A			select	78	AF	OK	
	Preset Page B			select	78	AE	OK	
	Preset Page C			select	78	AD	OK	
	Preset Page D			select	78	AC	OK	
	Preset Page E			select	78	AB	OK	
	AUTO SEARCH +			select	78	B1	OK	
	AUTO SEARCH -			select	78	B0	OK	
	SEARCH MODE ALL CH			select	78	67	OK	
Sound Field	SEARCH MODE PRESET			select	78	68	OK	
	NIGHT MODE	CINEMA		select	7E	9B	OK	
	MUSIC	MUSIC		select	7E	CF	OK	
	OFF	OFF		select	7E	9C	OK	
	NIGHT MODE, TV MODE	ON		select	78	7C	OK	
	TV MODE	ON (DEEP/4000)		select	78	6E	OK	
	TruBass	ON (MID/4000 only)		select	78	6D	OK	
		OFF		select	78	6F	OK	
	Beam mode [5ch Stereo]			select	7E	FF	OK	
	Surround	PRO LOGIC		select	7E	FD	OK	
		PLII MOVIE		select	7E	67	OK	
		PLII MUSIC		select	7E	68	OK	
Volume memory		PLII GAME		select	7E	C7	OK	
		NEO:6 MOVIE		select	7E	69	OK	
		NEO:6 MUSIC		select	7E	6A	OK	
		NEURAL SURROUND		select	7E	CC	OK	
	CINEMA DSP	Spectacle (YSP-4000)	MOVIE	select	7E	F9	OK	
		Sci-Fi (SPX) (YSP-3000,4000)	MOVIE	select	7E	FA	OK	
		Adventure (YSP-4000)	MOVIE	select	7E	FB	OK	
		Concert Hall (YSP-4000)	MUSIC	select	7E	E1	OK	
		Jazz Club (YSP-4000)	MUSIC	select	7E	EC	OK	
		Music Video (YSP-3000,4000)	MUSIC	select	7E	F3	OK	
		SPORTS (YSP-3000,4000)	SPORTS	select	7E	F8	OK	
	Music Enhancer	HIGH(ON)		select	7E	D8	OK	
BEAM MEMORY		OFF		select	7E	D9	OK	
	Preset memory	A		select	78	70	OK	
		B		select	78	72	OK	
		C		select	78	74	OK	
	Preset Call	A		select	78	71	OK	
		B		select	78	73	OK	
		C		select	78	75	OK	
	MEMORY SAVE	USER1		select	78	76	OK	
		USER2		select	78	78	OK	
	MEMORY LOAD	USER3		select	78	7A	OK	
		USER1		select	78	77	OK	
		USER2		select	78	79	OK	
Others		USER3		select	78	7B	OK	
	DUAL MONO	MAIN		select	7E	93	OK	J Dest Only
		SUB		select	7E	94	OK	J Dest Only
	DEMO MODE	MAIN+SUB		select	7E	95	OK	J Dest Only
		DEMO-1 ON (Outside sound source)		select	78	6B	OK	*Effective in DEMO MODE ON
		DEMO-1 OFF		select	78	6C	OK	