

Standard IR code for MCR-E810 (NEC code)

rev.1

	Function	Code
SYSTEM	STANDBY/ON	78-0F
	DIMMER	78-BA
	DISPLAY	78-4E
	SLEEP	78-4F
	VOLUME +	78-1E
	VOLUME -	78-1F
	DVD/CD	78-4A
	TUNER	78-4B
	TAPE/MD	78-41
	AUX/TV	78-49
	DOCK(iPod)	78-D0
DVD/CD	1	7C-94
	2	7C-95
	3	7C-96
	4	7C-97
	5	7C-98
	6	7C-99
	7	7C-9A
	8	7C-9B
	9	7C-9C
	0	7C-93
	scan	7C-E2
	repeat	7C-A3
	A-B	7C-A4
	dvd stop	7C-85
	program	7C-A0
	pause	7C-83
	shuffle	7C-A1
	skip -	7C-B9
	dvd play	7C-82
	skip +	7C-BA
	on screen	7C-A6
	menu	7C-B2
	set-up	7C-AC
	return	7C-B1
	up	7C-B4
	down	7C-B3
	left	7C-B5
	right	7C-B6
	enter	7C-B8
	subtitle	7C-AA
	angle	7C-AE
	zoom	7C-D7
	audio	7C-AD

	Function	Code
TUNER	P1	78-11
	P2	78-12
	P3	78-13
	P4	78-14
	P5	78-15
	P6	78-16
	P7	78-17
	P8	78-18
	FREQ/TXT	78-81
	mode	78-82
	start	78-83
	PRESET/CH	78-8E
	PRESET/CH	78-8F
	A-E <	78-9F
	A-E >	78-9E
	BAND	78-B6
DOCK	REPEAT	7F01-45BA
	STOP	7F01-1DE2
	PAUSE	7F01-1AE5
	SHUFFLE	7F01-46B9
	SKIP/SEARCH-	7F01-1BE4
	PLAY	7F01-1EE1
	SKIP/SEARCH+	7F01-1CE3
	INFO.	7F01-15EA
	MENU	7F01-0FF0
	UP	7F01-0EF1
	DOWN	7F01-14EB
	LEFT	7F01-10EF
	RIGHT	7F01-12ED
	ENTER	7F01-11EE
TAPE/MD	STOP	7A-03
	REW	7A-01
	PLAY	7A-00
	FF	7A-02
	DIR A	7A-07
	DIR B	7A-40
	REC/PAUSE	7A-04
	DECK A/B	7A-06