

# RX-V1 Extended I/R

Function	Extended I/R				E-I/R	RS-232c
	Custom Code		Data Code			
ZONE2 MUTE ON	7	E	A	0	YES	YES
ZONE2 MUTE OFF	7	E	A	1	YES	YES
AUDIO MUTE ON	7	E	A	2	YES	YES
AUDIO MUTE OFF	7	E	A	3	YES	YES
6CH INPUT ON	7	E	A	4	YES	YES
6CH INPUT OFF	7	E	A	5	YES	YES
INPUT MODE AUTO	7	E	A	6	YES	YES
INPUT MODE DD RF	7	E	A	7	YES	YES
INPUT MODE DTS	7	E	A	8	YES	YES
INPUT MODE DIGITAL	7	E	A	9	YES	YES
INPUT MODE ANALOG	7	E	A	A	YES	YES
SPEAKER A ON	7	E	A	B	YES	YES
SPEAKER A OFF	7	E	A	C	YES	YES
SPEAKER B ON	7	E	A	D	YES	YES
SPEAKER B OFF	7	E	A	E	YES	YES
ON SCREEN OFF	7	E	B	0	YES	YES
ON SCREEN SHORT	7	E	B	1	YES	YES
ON SCREEN FULL	7	E	B	2	YES	YES
SLEEP OFF	7	E	B	3	YES	YES
SLEEP 120 min.	7	E	B	4	YES	YES
SLEEP 90 min.	7	E	B	5	YES	YES
SLEEP 60 min.	7	E	B	6	YES	YES
SLEEP 30 MIN.	7	E	B	7	YES	YES
6.1/ES ON	7	E	B	8	YES	YES
6.1/ES OFF	7	E	B	9	YES	YES
ZONE2 POWER ON	7	E	B	A	* NO	
ZONE2 POWER OFF	7	E	B	B	* NO	
TUNER BAND FM	7	E	B	C	NO	
TUNER BAND AM	7	E	B	D	NO	
AUTO TUNING UP	7	E	B	E	NO	
AUTO TUNING DOWN	7	E	B	F	NO	
EFFECT OFF	7	E	E	0	YES	YES
MUSIC DSP PROGRAM	7	E	E	1	EUROPE HALL A	YES
MUSIC DSP PROGRAM	7	E	E	2	EUROPE HALL B	YES
MUSIC DSP PROGRAM	7	E	E	3	EUROPE HALL C	YES
MUSIC DSP PROGRAM	7	E	E	4	USA HALL D	YES
MUSIC DSP PROGRAM	7	E	E	5	EUROPE HALL E	YES
MUSIC DSP PROGRAM	7	E	E	6	LIVE CONCERT	YES
MUSIC DSP PROGRAM	7	E	E	7	TOKYO	YES
MUSIC DSP PROGRAM	7	E	E	8	FREIBURG	YES
MUSIC DSP PROGRAM	7	E	E	9	ROYAUMONT	YES
MUSIC DSP PROGRAM	7	E	E	A	VILLAGE GATE	YES
MUSIC DSP PROGRAM	7	E	E	B	VILLAGE VANGUARD	YES
MUSIC DSP PROGRAM	7	E	E	C	BOTTOM LINE	YES
MUSIC DSP PROGRAM	7	E	E	D	ROXY THEATER	YES
MUSIC DSP PROGRAM	7	E	E	E	WAREHOUSE LOFT	YES
MUSIC DSP PROGRAM	7	E	E	F	ARENA	YES
CINEMA DSP PROGRAM	7	E	F	0	DISCO	YES
CINEMA DSP PROGRAM	7	E	F	1	PARTY	YES
CINEMA DSP PROGRAM	7	E	F	2	GAME/AMUSEMENT	YES
CINEMA DSP PROGRAM	7	E	F	3	CONCERT POP/ROCK	YES
CINEMA DSP PROGRAM	7	E	F	4	CONCERT VIDEO/DJ	YES
CINEMA DSP PROGRAM	7	E	F	5	CLASSICAL/OPERA	YES
CINEMA DSP PROGRAM	7	E	F	6	PAVILION	YES
CINEMA DSP PROGRAM	7	E	F	7	MONO MOVIE	YES

CINEMA DSP PROGRAM	7	E	F	8	TV VARIETY/SPORTS	YES
CINEMA DSP PROGRAM	7	E	F	9	SPECTACLE	YES
CINEMA DSP PROGRAM	7	E	F	A	SCI-FI	YES
CINEMA DSP PROGRAM	7	E	F	B	ADVENTURE	YES
CINEMA DSP PROGRAM	7	E	F	C	GENERAL	YES
CINEMA DSP PROGRAM	7	E	F	D	NORMAL	YES
CINEMA DSP PROGRAM	7	E	F	E	ENHANCED	YES
TUNER PAGE A	7	A	E	0	YES	YES
TUNER PAGE B	7	A	E	1	YES	YES
TUNER PAGE C	7	A	E	2	YES	YES
TUNER PAGE D	7	A	E	3	YES	YES
TUNER PAGE E	7	A	E	4	YES	YES
TUNER PRESET 1	7	A	E	5	YES	YES
TUNER PRESET 2	7	A	E	6	YES	YES
TUNER PRESET 3	7	A	E	7	YES	YES
TUNER PRESET 4	7	A	E	8	YES	YES
TUNER PRESET 5	7	A	E	9	YES	YES
TUNER PRESET 6	7	A	E	A	YES	YES
TUNER PRESET 7	7	A	E	B	YES	YES
TUNER PRESET 8	7	A	E	C	YES	YES
DVD-C996 E-IR CODES					IN REMOTE	
DVD-C996 NORMAL PLAY MODE	7	C	F	0	YES	
DVD-C996 RANDOM PLAY MODE	7	C	F	1	YES	
DVD-C996 PROGRAM MODE	7	C	F	2	YES	
DVD-C996 REPEAT MODE OFF	7	C	F	3	YES	
DVD-C996 ALL DISC REPEAT	7	C	F	5	YES	
HOME BANK MAIN	7	E	2	0	YES	YES
HOME BANK A	7	E	2	1	YES	YES
HOME BANK B	7	E	2	2	YES	YES
HOME BANK C	7	E	2	3	YES	YES
HOME BANK D	7	E	2	4	YES	YES
HOME BANK E	7	E	2	5	YES	YES
HOME BANK F	7	E	2	6	YES	YES
HOME MEMORY A	7	E	2	B	YES	YES
HOME MEMORY B	7	E	2	C	YES	YES
HOME MEMORY C	7	E	2	D	YES	YES
HOME MEMORY D	7	E	2	E	YES	YES
HOME MEMORY E	7	E	2	F	YES	YES
HOME MEMORY F	7	E	3	0	YES	YES
HOME RECALL A	7	E	3	5	YES	YES
HOME RECALL B	7	E	3	6	YES	YES
HOME RECALL C	7	E	3	7	YES	YES
HOME RECALL D	7	E	3	8	YES	YES
HOME RECALL E	7	E	3	9	YES	YES
HOME RECALL F	7	E	3	A	YES	YES
VOLUME BANK MAIN	7	E	6	0	YES	YES
VOLUME BANK A	7	E	6	1	YES	YES
VOLUME BANK B	7	E	6	2	YES	YES
VOLUME BANK C	7	E	6	3	YES	YES
VOLUME BANK D	7	E	6	4	YES	YES
VOLUME BANK E	7	E	6	5	YES	YES
VOLUME BANK F	7	E	6	6	YES	YES
VOLUME MEMORY A	7	E	6	B	YES	YES
VOLUME MEMORY B	7	E	6	C	YES	YES
VOLUME MEMORY C	7	E	6	D	YES	YES
VOLUME MEMORY D	7	E	6	E	YES	YES

VOLUME MEMORY E	7	E	6	F	YES	YES
VOLUME MEMORY F	7	E	7	0	YES	YES
VOLUME RECALL A	7	E	7	5	YES	YES
VOLUME RECALL B	7	E	7	6	YES	YES
VOLUME RECALL C	7	E	7	7	YES	YES
VOLUME RECALL D	7	E	7	8	YES	YES
VOLUME RECALL E	7	E	7	9	YES	YES
VOLUME RECALL F	7	E	7	A	YES	YES