

REV. 1.0

Standard IR code for RX-N600 (NEC code)			
FUNCTION	ID1 CODE	ID2 CODE	RX-N600
INPUT			
CD	7A-15	7D-87	YES
DTV/CBL	7A-54	7D-84	YES
DVD	7A-C1	7D-97	YES
DVR	7A-13	7D-82	YES
MD/CD-R	7A-C9	7D-86	YES
TUNER	7A-16	7D-89	YES
V-AUX	7A-55	7D-8A	YES
XM	7A-B4	7D-29	YES
LAN	7A-0F	7D-81	YES
USB	7A-14	7D-88	YES
MULTI CH INPUT	7A-87	7D-8C	YES
SYSTEM			
POWER	7A-1D	7D-90	YES
STANDBY	7A-1E	7D-91	YES
VOLUME(VOL) +	7A-1A	7D-8D	YES
VOLUME(VOL) -	7A-1B	7D-8E	YES
MUTE	7A-1C	7D-94	YES
SPEAKERS	7A-9A	7D-E7	YES
SPEAKERS B	7A-9B	7D-E8	YES
SLEEP	7A-57	7D-93	YES
SET MENU	7A-9C	7D-9C	YES
UP	7A-98	7D-B6	YES
DOWN	7A-99	7D-B7	YES
LEFT	7A-53	7D-B9	YES
RIGHT	7A-52	7D-B8	YES
ENTER	7A-DE	7D-56	YES
RETURN	7A-AA	7D-B5	YES
ON SCREEN	7A-C2		YES
DSP			
LEVEL	7A-86	7D-95	YES
DIRECT STEREO	7A-DD	7D-C0	YES
ENHANCER	7A-94	7D-DC	YES
SELECT	7A-96	7D-DE	YES
ENTERTAIN	7A-8A	7D-D2	YES
MOVIE	7A-8B	7D-D3	YES
MUSIC	7A-89	7D-D1	YES
STANDARD	7A-8D	7D-D5	YES
STEREO	7A-88	7D-D0	YES
EXTD SUR.	7A-97	7D-DF	YES
STRAIGHT	7A-56	7D-C1	YES
NIGHT	7A-95	7D-DD	YES

Standard IR code for RX-N600 (NEC code)				
FUNCTION		ID1 CODE	ID2 CODE	RX-N600
TUNER				
PRESET/CH UP		7A-10	7D-F5	YES
PRESET/CH DOWN		7A-11	7D-F6	YES
A-E/CAT. +		7A-12	7D-F7	YES
A-E/CAT. -		7A-AC	7D-BB	YES
BAND		7A-AE	7D-BD	YES
PRESET NUMBER / NUMERIC BUTTON	1	7A-E5	7D-F8	YES
	2	7A-E6	7D-F9	YES
	3	7A-E7	7D-FA	YES
	4	7A-E8	7D-FB	YES
	5	7A-E9	7D-FC	YES
	6	7A-EA	7D-FD	YES
	7	7A-EB	7D-FE	YES
	8	7A-EC	7D-FF	YES
XM				
PRESET/CH UP		7A-6A	7D-31	YES
PRESET/CH DOWN		7A-6B	7D-32	YES
A-E/CAT. +		7A-6C	7D-33	YES
A-E/CAT. -		7A-6E	7D-35	YES
SRCH MODE		7A-6D	7D-34	YES
ENTER(Hold/Release disp.)		7A-6F	7D-36	YES
TITLE		7A-70	7D-37	YES
MEMORY		7A-71	7D-38	YES
DISPLAY		7A-72	7D-39	YES
PRESET NUMBER / NUMERIC BUTTON	1	7A-61	7D-A1	YES
	2	7A-62	7D-A2	YES
	3	7A-63	7D-A3	YES
	4	7A-64	7D-A4	YES
	5	7A-65	7D-A5	YES
	6	7A-66	7D-A6	YES
	7	7A-67	7D-A7	YES
	8	7A-68	7D-A8	YES
	9	7A-69	7D-A9	YES
	0	7A-60	7D-A0	YES
ENT.		7A-BF	7D-3F	YES
MAIN				
POWER		7E-7E	7D-B2	YES
STANDBY		7E-7F	7D-B1	YES
ZONE2				
POWER		7E-BA	7D-64	YES
STANDBY		7E-BB	7D-63	YES
VOLUME(VOL) +		7A-DA	7D-70	YES
VOLUME(VOL) -		7A-DB	7D-71	YES
MUTE		7A-DC	7D-72	YES
CD		7A-D1	7D-67	YES
DTV/CBL		7A-D9	7D-6C	YES
DVD		7A-CD	7D-6F	YES
DVR		7A-D7	7D-6E	YES
MD/CD-R		7A-CF	7D-92	YES
TUNER		7A-D2	7D-66	YES
XM		7A-B8	7D-2F	YES
LAN		7A-D6	7D-6D	YES
USB		7A-D0	7D-65	YES
V-AUX		7A-D8	7D-68	YES

Standard IR code for RX-N600 (NEC code)			
FUNCTION	ID1 CODE	ID2 CODE	RX-N600
iPod*			
LEFT	7F01-10		YES
RIGHT	7F01-12		YES
UP	7F01-0E		YES
MENU	7F01-0F		YES
ENTER	7F01-11		YES
DOWN	7F01-14		YES
DISPLAY	7F01-15		YES
REW(SEARCH)	7F01-17		YES
FF(SEARCH)	7F01-18		YES
PAUSE	7F01-1A		YES
CHP/SKIP-	7F01-1B		YES
CHP/SKIP+	7F01-1C		YES
STOP	7F01-1D		YES
PLAY	7F01-1E		YES
LAN/USB*			
TITLE	7F01-2D		YES
UP	7F01-2E		YES
MENU	7F01-2F		YES
LEFT	7F01-30		YES
ENTER	7F01-31		YES
RIGHT	7F01-32		YES
DOWN	7F01-34		YES
DISPLAY	7F01-35		YES
REC	7F01-36		YES
REW(SEARCH)	7F01-37		YES
FF(SEARCH)	7F01-38		YES
PAUSE	7F01-3A		YES
CHP/SKIP-	7F01-3B		YES
CHP/SKIP+	7F01-3C		YES
STOP	7F01-3D		YES
PLAY	7F01-3E		YES

*** NOTE**

The IR format for iPod/LAN/USB control is 16bit typed custom code NEC format instead of 8bit typed custom code(well-known as YAMAHA NEC

*** NOTE**

First you must set the remote codes for iPod

Press "V-AUX" input button

Press "CODE SET" then Transmit indicator flashes twice

Press "81981" then Transmit indicator flashes twice

Now set up is done.