

RX-V4600					
FUNCTION		Standard I/R (NEC format)			
		ID1 setting(default)		ID2 setting	
		Custom Code	Data Code	Custom Code	Data Code
SYSTEM					
MUTE	ON/OFF	7A	1C	7D	94
EXTERNAL INPUT	TOGGLE	7A	87	7D	8C
INPUT	PHONO	7A	14	7D	88
	CD	7A	15	7D	87
	TUNER	7A	16	7D	89
	MD/TAPE	7A	18	7D	8B
	CD-R	7A	19	7D	99
	DVD	7A	C1	7D	97
	D-TV	7A	54	7D	84
	CBL/SAT	7A	C0	7D	96
	VCR1	7A	0F	7D	81
	DVR/VCR2	7A	13	7D	82
	VCR3	7A	C8	<<-- same as ID1	
	VIDEO AUX	7A	55	7D	8A
	VOLUME	UP	7A	1A	7D
DOWN		7A	1B	7D	8E
POWER	ON	7A	1D	7D	90
	OFF	7A	1E	7D	91
SLEEP	TOGGLE	7A	57	7D	93
ZONE2					
ZONE2 VOLUME	UP	7A	DA	<<-- same as ID1	
	DOWN	7A	DB	<<-- same as ID1	
ZONE2 MUTE	ON/OFF	7A	DC	<<-- same as ID1	
ZON2 INPUT	CD	7A	D1	<<-- same as ID1	
	TUNER	7A	D2	<<-- same as ID1	
	MD/TAPE	7A	D3	<<-- same as ID1	
	CD-R	7A	D4	<<-- same as ID1	
	DVD	7A	CD	<<-- same as ID1	
	PHONO	7A	D0	<<-- same as ID1	
	D-TV	7A	D9	<<-- same as ID1	
	CBL/SAT	7A	CC	<<-- same as ID1	
	VCR1	7A	D6	<<-- same as ID1	
	DVR/VCR2	7A	D7	<<-- same as ID1	
VIDEO AUX	7A	D8	<<-- same as ID1		
ZONE3					
ZONE3 VOLUME	UP	7A	FD	<<-- same as ID1	
	DOWN	7A	FE	<<-- same as ID1	
ZONE3 POWER	ON	7A	ED	<<-- same as ID1	
	OFF	7A	EE	<<-- same as ID1	
ZONE3 MUTE	ON/OFF	7A	FF	<<-- same as ID1	
ZONE3 INPUT	VIDEO AUX	7A	F0	<<-- same as ID1	
	PHONO	7A	F1	<<-- same as ID1	
	CD	7A	F2	<<-- same as ID1	
	TUNER	7A	F3	<<-- same as ID1	
	MD/TAPE	7A	F4	<<-- same as ID1	
	CD-R	7A	F5	<<-- same as ID1	
	DVD	7A	FC	<<-- same as ID1	
	D-TV	7A	F6	<<-- same as ID1	
	CBL/SAT	7A	F7	<<-- same as ID1	
	VCR1	7A	F9	<<-- same as ID1	
DVR/VCR2	7A	FA	<<-- same as ID1		

DSP					
PROGRAM	STEREO	7A	88	7D	D0
	MUSIC	7A	89	7D	D1
	ENTERTAINMENT	7A	8A	7D	D2
	MOVIE THEATER	7A	8B	7D	D3
	THX	7A	8C	7D	D4
	SURROUND	7A	8D	7D	D5
	SELECT	7A	96	7D	DE
PURE DIRECT	ON/OFF	7A	DD	7D	C0
NIGHT	TOGGLE	7A	95	7D	DD
EXTD SUR.	TOGGLE	7A	97	7D	DF
EFFECT	ON/OFF	7A	56	7D	C1
TUNER					
PRESET PAGE	TOGGLE	7A	12	<<-- same as ID1	
PRESET NUMBER	+	7A	10	<<-- same as ID1	
	-	7A	11	<<-- same as ID1	
PRESET PAGE	A	7A	E0	<<-- same as ID1	
	B	7A	E1	<<-- same as ID1	
	C	7A	E2	<<-- same as ID1	
	D	7A	E3	<<-- same as ID1	
	E	7A	E4	<<-- same as ID1	
PRESET NUMBER	1	7A	E5	<<-- same as ID1	
	2	7A	E6	<<-- same as ID1	
	3	7A	E7	<<-- same as ID1	
	4	7A	E8	<<-- same as ID1	
	5	7A	E9	<<-- same as ID1	
	6	7A	EA	<<-- same as ID1	
	7	7A	EB	<<-- same as ID1	
	8	7A	EC	<<-- same as ID1	
MENU					
ARROW KEY for GUI/SUB MENU	UP	7A	9D	7D	9D
	DOWN	7A	9C	7D	9C
RIGHT/LEFT KEY for EXTD SUR/SELECT	+	7A	9E	7D	9E
	-	7A	9F	7D	9F
GUI	GUI TOP	7A	A0	7D	52
	GUI ENTER	7A	DE	7D	56
	GUI EXIT	7A	A1	7D	53