

RX-V440,540,640,740				
Function	Standard I/R			
	Custom Code	Data Code		
Input				
CD	7	A	1	5
TUNER	7	A	1	6
MD/CD-R	7	A	C	9
DVD	7	A	C	1
D-TV/CBL	7	A	5	4
DVD	7	A	C	1
VCR1	7	A	0	F
VCR2/DVR	7	A	1	3
VIDEO AUX	7	A	5	5
System				
VOLUME UP	7	A	1	A
VOLUME DOWN	7	A	1	B
SYSTEM POWER ON	7	A	1	D
SYSTEM POWER OFF	7	A	1	E
SYSTEM POWER TOGGLE	7	A	1	F
MUTE	7	A	1	C
6CH INPUT	7	A	8	7
OSD	7	A	C	2
SLEEP	7	A	5	7
SET MENU	7	A	9	C
UP	7	A	9	8
DOWN	7	A	9	9
+	7	A	5	2
-	7	A	5	3
DSP				
HALL	7	A	8	8
JAZZ CLUB	7	A	8	9
ROCK CONCERT	7	A	8	A
ENTERTAINMENT	7	A	8	B
MUSIC VIDEO	7	A	8	C
TV THEATER	7	A	8	D
MOVIE THEATER 1	7	A	8	E
MOVIE THEATER 2	7	A	8	F
DOLBY/DTS/AAC SUR	7	A	9	0
EX/ES	7	A	9	7
EFFECT	7	A	5	6
SP LEVEL SELLECT	7	A	8	6
TEST MODE	7	A	8	5
TUNER				
PRESET PAGE TOGGLE	7	A	1	2
PRESET NUMBER +	7	A	1	0
PRESET NUMBER -	7	A	1	1
PRESET NUMBER DIRECT 1	7	A	E	5
2	7	A	E	6
3	7	A	E	7
4	7	A	E	8
5	7	A	E	9
6	7	A	E	A

7	7	A	E	B
8	7	A	E	C
<b>ZONE2</b>				
ZONE2 MUTE	7	A	D	C
CD	7	A	D	1
TUNER	7	A	D	2
MD/CD-R	7	A	C	F
DVD	7	A	C	D
D-TV/CBL	7	A	D	9
DVD	7	A	C	D
VCR1	7	A	D	6
VIDEO AUX	7	A	D	8