

RX-Z1				
Function	Standard I/R			
	Custom Code		Data Code	
Audio Mute	7	A	1	C
6 ch Input	7	A	8	7
SYSTEM				
PHONO	7	A	1	4
CD	7	A	1	5
TUNER	7	A	1	6
MD/TAPE	7	A	1	8
CD-R	7	A	1	9
DVD	7	A	C	1
D-TV / LD	7	A	5	4
SAT	7	A	C	A
CABLE	7	A	C	0
SAT	7	A	C	A
VCR1	7	A	0	F
VCR2	7	A	1	3
VCR3 / DVR	7	A	C	8
V-AUX	7	A	5	5
Volume UP	7	A	1	A
Volume DOWN	7	A	1	B
POWER ON	7	A	1	D
POWER OFF	7	A	1	E
SLEEP	7	A	5	7
OSD	7	A	C	2
DSP PROGRAM				
CONCERT HALL 1	7	A	8	8
CONCERT HALL 2	7	A	8	9
CHURCH	7	A	8	A
JAZZ CLUB	7	A	8	B
ROCK CONCERT	7	A	8	C
ENTERTAINMENT	7	A	8	D
CONCERT VIDEO	7	A	8	E
MONO MOVIE	7	A	8	F
TV THEATER	7	A	9	0
MOVIE THEATER 1	7	A	9	1
MOVIE THEATER 2	7	A	9	2
DOLBY/DTS SUR	7	A	9	3
EX/ES	7	A	9	7
EFFECT	7	A	5	6
PARAMETER UP	7	A	C	5
PARAMETER DOWN	7	A	C	4
PARAMETER +	7	A	C	6
PARAMETER -	7	A	C	7
LEVEL	7	A	8	6
TEST MODE	7	A	8	5
TUNER				
PRESET PAGE (A/B/C/D/E)	7	A	1	2
PRESET NO. +	7	A	1	0
PRESET NO. -	7	A	1	1
A	7	A	E	0
B	7	A	E	1

[illegible]