

RX-V2400				
Function	Standard I/R			
	Custom Code		Data Code	
INPUT				
PHONO	7	A	1	4
CD	7	A	1	5
TUNER	7	A	1	6
MD/TAPE	7	A	1	8
CD-R	7	A	1	9
DVD	7	A	C	1
D-TV/LD	7	A	5	4
CABLE	7	A	C	0
VCR1	7	A	0	F
VCR2	7	A	1	3
VIDEO AUX	7	A	5	5
SYSTEM				
VOLUME UP	7	A	1	A
VOLUME DOWN	7	A	1	B
SYSTEM POWER ON	7	A	1	D
SYSTEM POWER OFF	7	A	1	E
SYSTEM POWER TOGGLE	7	A	1	F
MUTE	7	A	1	C
6CH INPUT	7	A	8	7
OSD	7	A	C	2
SLEEP	7	A	5	7
DSP				
STEREO	7	A	8	8
HALL	7	A	8	9
CHURCH	7	A	8	A
JAZZ CLUB	7	A	8	B
ROCK CONCERT	7	A	8	C
ENTERTAINMENT	7	A	8	D
MUSIC VIDEO	7	A	8	E
TV THEATER	7	A	8	F
MOVIE THEATER	7	A	9	0
THX	7	A	9	1
DOLBY/DTS/AAC SUR	7	A	9	2
SELECT	7	A	9	6
NIGHT ON/OFF	7	A	9	5
EX/ES	7	A	9	7
EFFECT ON/OFF	7	A	5	6
UP	7	A	C	5
DOWN	7	A	C	4
—	7	A	C	6
—	7	A	C	7
EFFECT LEVEL SELECT	7	A	8	6
TEST MODE	7	A	8	5
SET MENU				
MENU UP	7	A	9	D
DOWN	7	A	9	C
—	7	A	9	E
—	7	A	9	F

TUNER				
PRESET PAGE TOGGLE	7	A	1	2
PRESET NUMBER +	7	A	1	0
PRESET NUMBER -	7	A	1	1
PRESET A	7	A	E	0
B	7	A	E	1
C	7	A	E	2
D	7	A	E	3
E	7	A	E	4
PRESET NUMBER DIRECT 1	7	A	E	5
2	7	A	E	6
3	7	A	E	7
4	7	A	E	8
5	7	A	E	9
6	7	A	E	A
7	7	A	E	B
8	7	A	E	C
ZONE2				
ZONE2 VOLUME UP	7	A	D	A
ZONE2 VOLUME DOWN	7	A	D	B
ZONE2 MUTE	7	A	D	C
PHONO	7	A	D	0
CD	7	A	D	1
TUNER	7	A	D	2
MD	7	A	D	3
CD-R	7	A	D	4
DVD	7	A	C	D
D-TV	7	A	D	9
CBL/SAT	7	A	C	C
VCR1	7	A	D	6
VCR2	7	A	D	7
VIDEO AUX	7	A	D	8
ZONE3				
ZONE3 VOLUME UP	7	A	F	D
ZONE3 VOLUME DOWN	7	A	F	E
ZONE3 POWER ON	7	A	E	D
ZONE3 POWER OFF	7	A	E	E
ZONE3 MUTE ON/OFF	7	A	F	F
PHONO	7	A	F	1
CD	7	A	F	2
TUNER	7	A	F	3
MD/TAPE	7	A	F	4
CD-R	7	A	F	5
DVD	7	A	F	C
D-TV/LD	7	A	F	6
CABLE	7	A	F	7
VCR1	7	A	F	9
VCR2	7	A	F	A
VIDEO AUX	7	A	F	0