

RX-Z9				
Function	Standard I/R			
	Custom Code		Data Code	
<b>INPUT</b>				
PHONO	7	A	1	4
CD	7	A	1	5
TUNER	7	A	1	6
MD/TAPE	7	A	1	8
CD-R	7	A	1	9
DVD	7	A	C	1
DTV/LD	7	A	5	4
CABLE	7	A	C	0
SAT	7	A	C	A
VCR1	7	A	0	F
VCR2	7	A	1	3
DVR	7	A	C	8
VIDEO AUX	7	A	5	5
PURE DIRECT	7	A	D	D
<b>SYSTEM</b>				
VOLUME UP	7	A	1	A
VOLUME DOWN	7	A	1	B
SYSTEM POWER ON	7	A	1	D
SYSTEM POWER OFF	7	A	1	E
SYSTEM POWER TOGGLE	7	A	1	F
MUTE	7	A	1	C
MULTI CH IN	7	A	8	7
OSD	7	A	C	2
SLEEP	7	A	5	7
SPEAKER A ON/OFF	7	A	9	A
SPEAKER B ON/OFF	7	A	9	B
<b>DSP</b>				
STEREO	7	A	8	8
HALL1	7	A	8	9
HALL2	7	A	8	A
CHURCH	7	A	8	B
JAZZ CLUB	7	A	8	C
ROCK CONCERT	7	A	8	D
MUSIC VIDEO	7	A	8	E
ENTERTAINMENT	7	A	8	F
MOVIE THEATER	7	A	9	0
THX	7	A	9	1
DOLBY/DTS	7	A	9	2
NIGHT ON/OFF	7	A	9	5
EX/ES	7	A	9	7
STRAIGHT/EFFECT	7	A	5	6
TEST MODE	7	A	8	5
<b>GUI</b>				
UP	7	A	C	5
DOWN	7	A	C	4

RIGHT	7	A	C	6
LEFT	7	A	C	7
ENTER	7	A	D	E
EXIT	7	A	A	1
TOP	7	A	A	0
<b>TUNER</b>				
PRESET PAGE TOGGLE	7	A	1	2
PRESET NUMBER +	7	A	1	0
PRESET NUMBER -	7	A	1	1
PRESET A	7	A	E	0
B	7	A	E	1
C	7	A	E	2
D	7	A	E	3
E	7	A	E	4
PRESET NUMBER DIRECT 1	7	A	E	5
2	7	A	E	6
3	7	A	E	7
4	7	A	E	8
5	7	A	E	9
6	7	A	E	A
7	7	A	E	B
8	7	A	E	C
<b>ZONE2</b>				
ZONE2 VOLUME UP	7	A	D	A
ZONE2 VOLUME DOWN	7	A	D	B
ZONE2 MUTE ON/OFF	7	A	D	C
PHONO	7	A	D	0
CD	7	A	D	1
TUNER	7	A	D	2
MD/TAPE	7	A	D	3
CD-R	7	A	D	4
DVD	7	A	C	D
DTV/LD	7	A	D	9
CABLE	7	A	C	C
SAT	7	A	C	B
VCR1	7	A	D	6
VCR2	7	A	D	7
DVR	7	A	C	E
VIDEO AUX	7	A	D	8