

RX-V2500 / RX-V1500						
FUNCTION		Standard I/R (NEC format)				Comment
		ID1 setting(default)		ID2* setting		
		Custom Code	Data Code	Custom Code	Data Code	
SYSTEM		*ID2 setting is only for RX-V2500. See the instructions at the bottom.				
MUTE	ON/OFF	7A	1C	7D	94	
EXTERNAL INPUT	TOGGLE	7A	87	7D	8C	
INPUT	PHONO	7A	14	7D	88	
	CD	7A	15	7D	87	
	TUNER	7A	16	7D	89	
	MD/TAPE	7A	18	7D	8B	
	CD-R	7A	19	7D	99	
	DVD	7A	C1	7D	97	
	D-TV	7A	54	7D	84	
	CBL/SAT	7A	C0	7D	96	
	VCR1	7A	0F	7D	81	
	DVR/VCR2	7A	13	7D	82	
	VIDEO AUX	7A	55	7D	8A	
VOLUME	UP	7A	1A	7D	8D	
	DOWN	7A	1B	7D	8E	
POWER	ON	7A	1D	7D	90	
	OFF	7A	1E	7D	91	
SLEEP	TOGGLE	7A	57	7D	93	
OSD	TOGGLE	7A	C2	N/A		For RX-V1500 only
ZONE2						
ZONE2 VOLUME	UP	7A	DA	<<-- same as ID1		
	DOWN	7A	DB	<<-- same as ID1		
ZONE2 MUTE	ON/OFF	7A	DC	<<-- same as ID1		
ZONE2 INPUT	CD	7A	D1	<<-- same as ID1		
	TUNER	7A	D2	<<-- same as ID1		
	MD/TAPE	7A	D3	<<-- same as ID1		
	CD-R	7A	D4	<<-- same as ID1		
	DVD	7A	CD	<<-- same as ID1		
	D-TV	7A	D9	<<-- same as ID1		
	CBL/SAT	7A	CC	<<-- same as ID1		
	VCR1	7A	D6	<<-- same as ID1		
	DVR/VCR2	7A	D7	<<-- same as ID1		
ZONE3						
ZONE3 VOLUME	UP	7A	FD	<<-- same as ID1		
	DOWN	7A	FE	<<-- same as ID1		
ZONE3 POWER	ON	7A	ED	<<-- same as ID1		
	OFF	7A	EE	<<-- same as ID1		
ZONE3 MUTE	ON/OFF	7A	FF	<<-- same as ID1		
ZONE3 INPUT	CD	7A	F2	<<-- same as ID1		
	TUNER	7A	F3	<<-- same as ID1		
	MD/TAPE	7A	F4	<<-- same as ID1		
	CD-R	7A	F5	<<-- same as ID1		
	DVD	7A	FC	<<-- same as ID1		
	D-TV	7A	F6	<<-- same as ID1		
	CBL/SAT	7A	F7	<<-- same as ID1		
	VCR1	7A	F9	<<-- same as ID1		
	DVR/VCR2	7A	FA	<<-- same as ID1		
DSP						
PROGRAM	STEREO	7A	88	7D	D0	
	MUSIC	7A	89	7D	D1	"HALL" for RX-V1500
	ENTERTAINMENT	7A	8A	7D	D2	"JAZZ" for RX-V1500
	MOVIE THEATER	7A	8B	7D	D3	"ROCK CNCT" for RX-V1500
	THX	7A	8C	7D	D4	"ENTERTAINMENT" for RX-V1500
	SURROUND	7A	8D	7D	D5	"MUSIC VIDEO" for RX-V1500
	TV THEATER	7A	8E	N/A		For RX-V1500 only
	MOVIE THEATER	7A	8F	N/A		For RX-V1500 only
	THX	7A	90	N/A		For RX-V1500 only
SELECT	7A	96	7D	DE		
PURE DIRECT	ON/OFF	7A	DD	7D	C0	
NIGHT	TOGGLE	7A	95	7D	DD	
EXTD SUR.	TOGGLE	7A	97	7D	DF	
EFFECT	ON/OFF	7A	56	7D	C1	

EFFECT LEVEL	TOGGLE	7A	86	N/A		For RX-V1500 only
TEST MODE	TOGGLE	7A	85	N/A		For RX-V1500 only
TUNER						
PRESET PAGE	TOGGLE	7A	12	<<-- same as ID1		
PRESET NUMBER	+	7A	10	<<-- same as ID1		
	-	7A	11	<<-- same as ID1		
PRESET PAGE	A	7A	E0	<<-- same as ID1		
	B	7A	E1	<<-- same as ID1		
	C	7A	E2	<<-- same as ID1		
	D	7A	E3	<<-- same as ID1		
	E	7A	E4	<<-- same as ID1		
PRESET NUMBER	1	7A	E5	<<-- same as ID1		
	2	7A	E6	<<-- same as ID1		
	3	7A	E7	<<-- same as ID1		
	4	7A	E8	<<-- same as ID1		
	5	7A	E9	<<-- same as ID1		
	6	7A	EA	<<-- same as ID1		
	7	7A	EB	<<-- same as ID1		
	8	7A	EC	<<-- same as ID1		
MENU						
ARROW KEY	UP	7A	9D	7D	9D	For RX-V2500 only
for GUI/SUB MENU	DOWN	7A	9C	7D	9C	For RX-V2500 only
RIGHT/LEFT KEY	+	7A	9E	7D	9E	For RX-V2500 only
for EXT D SUR/SELECT	-	7A	9F	7D	9F	For RX-V2500 only

**\* Instructions: How to change the remote ID setting**

1. While pushing the "STRAIGHT/EFFECT" button, push the "POWER" button to turn on the power.
2. Turn the "PROGRAM" knob, then find the "REMOTE - ID1".
3. Push the "STRAIGHT/EFFECT" button to change to ID2, and turn off the power.