

DVD-C961 Suportable RC Code Table

No.	Custom Code	Data Code
1	7C	80 POWER on/off
2		81 OPEN/CLOSE
3		82 PLAY
4		83 PAUSE
6		85 STOP
7		86 SEARCH -
8		87 SEARCH +
12		8B DISCSKIP +
20		93 TENKEY 0
21		94 TENKEY 1
22		95 TENKEY 2
23		96 TENKEY 3
24		97 TENKEY 4
25		98 TENKEY 5
26		99 TENKEY 6
27		9A TENKEY 7
28		9B TENKEY 8
29		9C TENKEY 9
34		A1 SHUFFLE
36		A3 REPEAT
37		A4 REP A-B
39		A6 ON SCREEN
42		A9 DIMMER
43		AA SUBTITLE
44		AB SUBTITLE
45		AC SETUP
46		AD AUDIO
47		AE ANGLE
50		B1 TOP MENU/RETURN
51		B2 MENU
52		B3 CURSOR DOWN
53		B4 CURSOR UP
54		B5 CURSOR LEFT
55		B6 CURSOR RIGHT
57		B8 ENTER
58		B9 SKIP/SEARCH-
59		BA SKIP/SEARCH+
82		D1 DISC 1
83		D2 DISC 2
84		D3 DISC 3
85		D4 DISC 4
86		D5 DISC 5
88		D7 ZOOM
90		D9 AUDIO DIRECT
96		DF PAGE +
98		E1 SOUND MODE
99		E2 SCAN
113		F0 PLAY MODE = NORMAL
114		F1 PLAY MODE = RANDOM
115		F2 PLAY MODE = PROGRAM
116		F3 REPEAT OFF
118		F5 REPEAT ALL
119		F6 ROWER ON
120		F7 ROWER OFF