

Soavo-900SW Standard IR (NEC format)					rev.1
Function	Custom Code		Data Code		
PHASE	7	B	4	2	REGULAR / REVERSE
VOLUME UP	7	B	4	4	
VOLUME DOWN	7	B	4	5	
HI-CUT UP	7	B	4	6	
HI-CUT DOWN	7	B	4	7	
POWER ON *1	7	B	4	8	
POWER OFF *2	7	B	4	9	
MEMORY	7	B	4	A	
PRESET 1	7	B	4	B	
PRESET 2	7	B	4	C	
PRESET 3	7	B	4	D	
B.A.S.S.	7	B	5	3	WIDE / NORMAL / NARROW
SLEEP	7	B	5	E	Sleep ON(120min)/OFF

Following Yamaha Receiver IR codes are acceptable in specific mode.

See owner's manual for detail:

"Operating the power of this unit using the remote control of your amplifier"

You can turn on/off with your Yamaha Receiver remote.

*All \*1 and \*2 is same function.*

Function	Custom Code		Data Code		
(POWER ON) *1	7	A	1	D	POWER(ALL)ID1
(POWER ON) *1	7	D	9	0	POWER(ALL)ID2
(POWER ON) *1	7	E	7	E	POWER(MAIN)ID1
(POWER ON) *1	7	D	B	2	POWER(MAIN)ID2
(POWER OFF) *2	7	A	1	E	STANDBY(ALL)ID1
(POWER OFF) *2	7	D	9	1	STANDBY(ALL)ID2
(POWER OFF) *2	7	E	7	F	STANDBY(MAIN)ID1
(POWER OFF) *2	7	D	B	1	STANDBY(MAIN)ID2